

4K
ULTRA HD



ACTION CAMERA

A DIFFERENT ANGLE TO RECORD YOUR LIFE

USER MANUAL

Operation note

- 1 This product is high precision products, do not fall or impact.
- 2 Please don't close to the camera with strong magnetic objects, such as magnets and motors, in addition to avoid the product near the issue of strong radio waves of objects, strong magnetic field may can cause product failure, or destroy images and sound.
- 3 Please don't place the camera at a higher temperature or direct sunlight.
- 4 Please choose the brand Micro SD card, ordinary card can not guarantee normal use
- 5 Please don't store the micro SD card in or near the strong magnetic place to avoid missing Micro SD card storage data.
- 6 Charging process, if overheating, smoke, or smell, please pull out the power immediately, stop charging to avoid fire.
- 7 Please put the product out of reach of children when charging, power line may cause a child's accidental suffocation or shock
- 8 Please send the product in a cool, dry place and the vast.dus

Foreword

This sport camera is a High-end HD camera product which could meet the customer's needs , with powerful function for take HD videos, photos, Slow motion, voice recording, video display, and changeable battery , it's the best choice for outdoor sports photography, home security monitoring, waterproof photography, you can record your life whenever and wherever you want.

 
 
Multipurpose

 
 


 
Product Feature

- > Provide waterproof function waterproof shell, convenient for you to wonderful water sports, waterproof shell can be deep waterproof 30 meters
- > Shooting function
- > Slow photography function
- > Video resolution Max 4K @60fps
- > Wide-angle 170°
- > 160M HD lens
- > Low power consumption, the WiFi opened 90 minutes available
- > Ultra HD 2" display screen, display and replay video shot
- > Changeable battery, easy to replace , prolong the service life
- > Charging function while recording
- > HDMI HD video output function
- > Supports up to 128GB memory card
- > Multiple video recording formats 4K, 2.7K, 1080P, 720P
- > H.264 format video recording
- > A variety of shooting modes: normal, timing, automatic trary, a variety of video
- > Mode: normal, circulation, shrink
- > Mini appearance, a variety of colors
- > APP support remote firmware upgrade

Function introduction

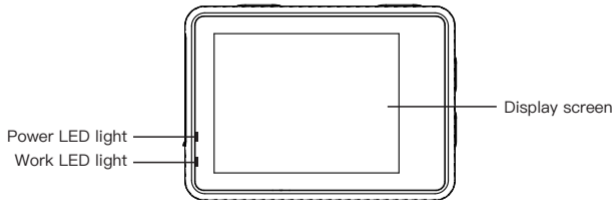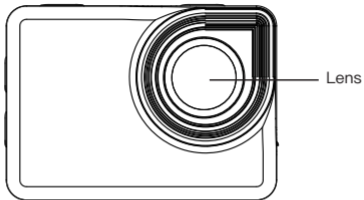

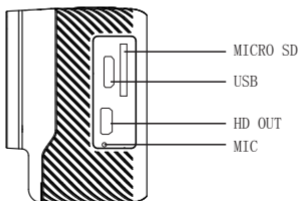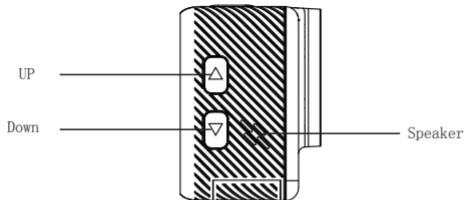

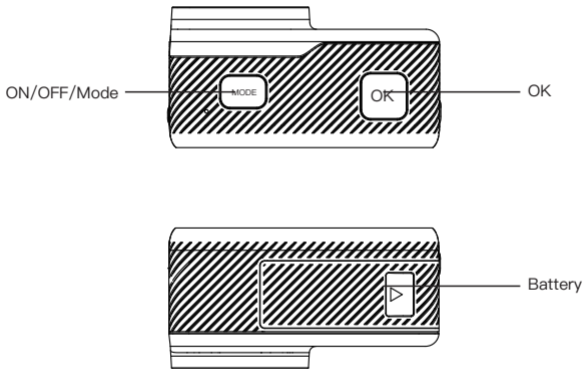




* Verify the camera is in Video or Photo Mode, short press Down Button to switch to 1.3 inch screen. Press Down Button again to quit.

Waterproof case




   Open guidance

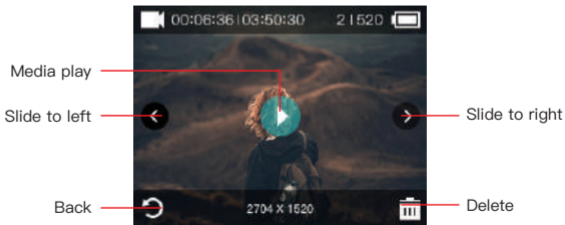

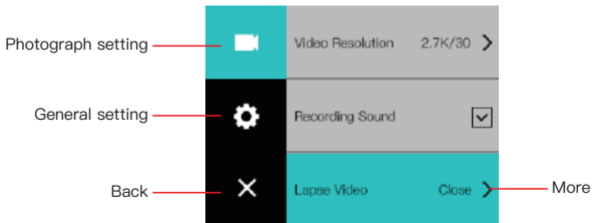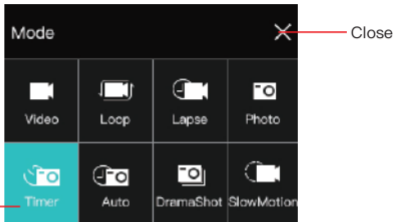


Wifi setting

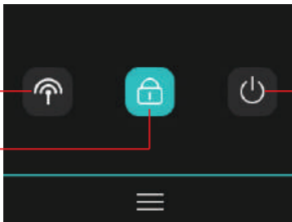 

Unlock

Power off

 Slide to unlock

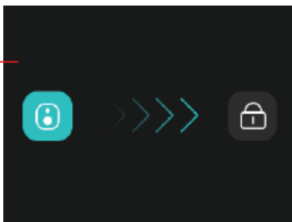

Accessories



Waterproof Housing



Waterproof Housing Base



Handle Bar



Screw Bracket



Short Connecting Rod



Base



Bandages



USB Cable



Back Clip

 


3M Adhesive



User Manual

Assembly diagram

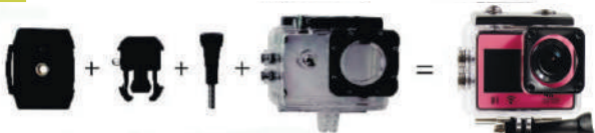

Use operation instructions

1, Insert Micro SD card

Note: Please select the brand MicroSD card, formatted on the computer and then use, ordinary neutral card can not guarantee the normal use of work.

2, Install and remove the battery

A. Pull the cover down can open the battery cover.

B. According to the battery marked positive and negative symbols and arrows indicate direction, the correct battery into the camera until the installation is in place.

C. Battery power indicator: please refer to the icon.

D. Remove the battery, removed out of the battery after open battery cover .

3, Battery charging

A. with USB line connection to computer or power adapter ,the camera can be charged.

B. Can charging while recording.

C. shutdown state can also charge.

4, Camera on / off

A. long press and hold the boot key 3-5 seconds can turned on/ off the camera.

B. open screen that boot, turn off the screen that is off.

5 turn WiFi on/off

Turn on WiFi: click on the button, open successfully, the indicator lights flashing yellow.

Turn off WiFi: after opening WiFi, press the key up a short time , and the indicator light goes out.

6 mode conversion (mode)

Boot, short press on /off key to switch between video / photo/low photography / file playback / setup mode.

7 indicator light

Work LED light: blue light is working indicator.

WiFi indicator: yellow light,

WiFi on, yellow light flashing;

WiFi link, yellow light long bright;

WiFi off, yellow light off. Charging indicator: red light, charging red light often, full, red light off.

8 Screen switching

After booting, long press down button. You can switch between large and small screens, the large screen goes off after switching the small screen display, and the small screen goes off afteroff after switching the large screen display.

9. how to set photography and photography options

A. Settings camera into the camera mode, press the confirmation button to start recording, when recording , the flag b below is flashing on the screen, then press the confirmation key to stop recording, while signs also disappear.

V Video mode: normal, loop recording (2 points, 3 points, 5 points), compressed video (0.5 seconds, one second, 2 s seconds, 5 seconds, 10 seconds, 30 seconds, 60 seconds).

B. camera and camera settings

Open the power, the camera into the mode keys select camera mode,the top left corner of the screen when the camera signs, then enter the camera mode. Press the confirmation button to take photos. Camera mode: ordinary, timing (3 seconds, 5 seconds, 10 seconds, 20 seconds), automatic (3 seconds, 10 seconds, 15 seconds, 20 seconds, 30 seconds), the trajectory (3P/S, 5P/S, 10P/S).

C. slow shooting and slow setting

Camera enter mode key select slow photography mode, press the confirmation key to start recording, video at the same time under the screen logo flashing, then press the confirmation key to stop recording, while icon also disappear.

Slow Photography: 1080P/60fps, 720P/90fps (120fps)

D. storage and delete recorded videos, please use the data line.

Copy to the recorded video to computer to play, please take the micro SD out, using the reader to read the data in SD Card.

F.File delete: Form the file playback interface, long press the OK key 3-5 seconds, you can delete a file.

10, WiFi install and use

Before use theWiFi function, please download and install the application "XDV PRO" on your smart phone.

Note: earch "XDV PRO" from app store for IOS ;Search "XDV PRO" from Google Play Store for android.

Steps to connect wifi.

A, Press the WiFi button on sport camera, there will show WIFI information on the screen, and the LED light of WIFI signal will flick.

B, Open the WiFi on your phone, searching the wifi SSID"V316-0000 and connect (the original password is 1234567890);

C, Open "XDV PRO" APP program ,with the APP, you can real-time preview is shooting pictures, remote video, photos, file playback/download / delete / share.

APP install guide, the phone system requires Android 4.1 and above or IOS7 or above, scan the "XDV PRO" APP two-dimensional code, press the prompts to complete the installation.



11, specification

| | |
|---------------------------|--|
| LED display screen | 2.0 inch TPS |
| Lens | 170° A+ High resolution wide angle lens |
| Language optional | English, Chinese, Korea, Russia, French, Germany, Italy, Spanish, Japanese, Portuguese, Dutch, Thai and Polish |
| Video encoding resolution | 4K60fps(30fps), 2.7k30fps, 1080P120fps(60fps/30fps), 720P240fps(120fps/60fps/30fps) |
| Video format | MP4 |
| Encoding format | H.264 |
| Photo resolution | 16M / 13M / 8M |
| Storage | Micro SD card up to 64G |
| Picture mode | Ordinary, timing, automatic, path of particle |
| Video mode | Ordinary, Loop, time-lapse |
| Slow photography | 1080P 4X(2X) 、720P 8X(4X) |
| Light source frequency | Automatic, 50Hz, 60Hz |
| USB | USB2.0 |
| Power | 5V 1A |
| Battery | 1050mAh |
| Power waste | 400mA 4.0V |
| Recording time | 1080P / 90 minutes |
| Charging time | About 2 hours |
| Adapter system | Windows XP/7/8 Vista and Mac 10.5 or above |
| Outline dimension | 59 x 41 x 29 mm |
| Weight | 44g (no battery), 58g (with battery) |
| Working temperature | -10℃~+55℃ |
| Storage temperature | -20℃~+70℃ |

Note: The specs maybe will update later, specific please in kind prevail.