


正面




PRODUCT MANUAL

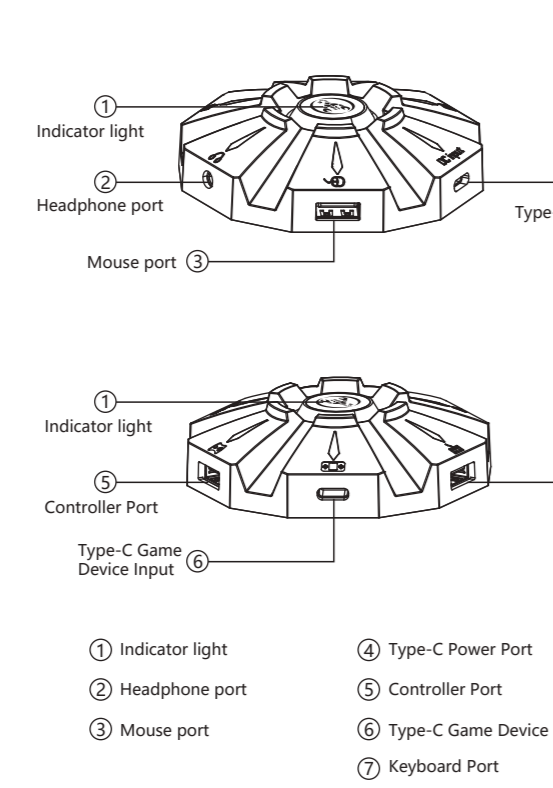


FOR PS4, Xbox One, PS3, Xbox 360, Switch

CONNECTION INSTRUCTIONS

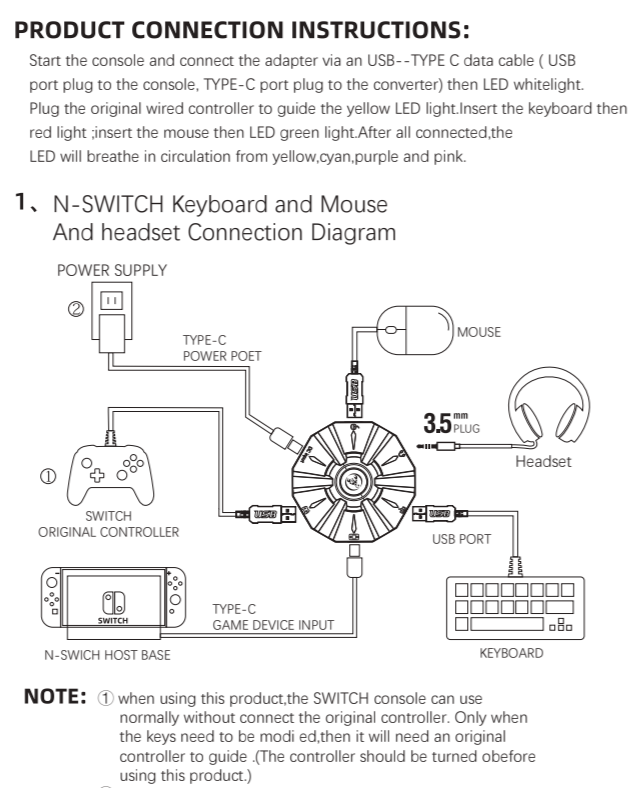


FOR PS4, Xbox One, PS3, Xbox 360, Switch

CONNECTION INSTRUCTIONS

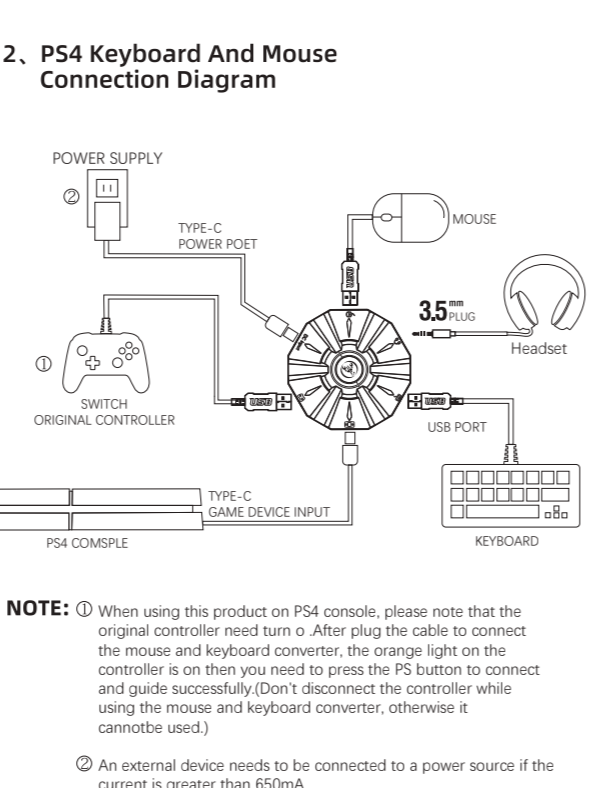


FOR PS4, Xbox One, PS3, Xbox 360, Switch

CONNECTION INSTRUCTIONS

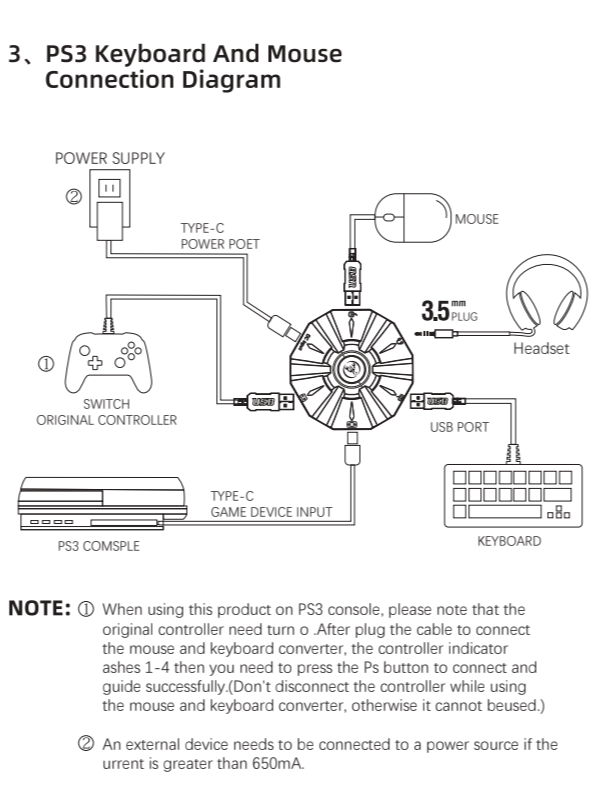


FOR PS4, Xbox One, PS3, Xbox 360, Switch

CONNECTION INSTRUCTIONS

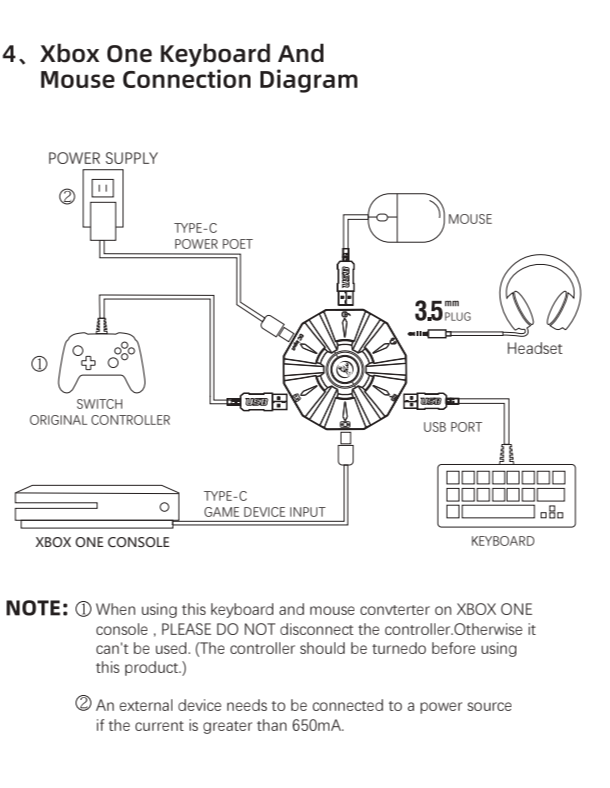

FOR PS4, Xbox One, PS3, Xbox 360, Switch

CONNECTION INSTRUCTIONS

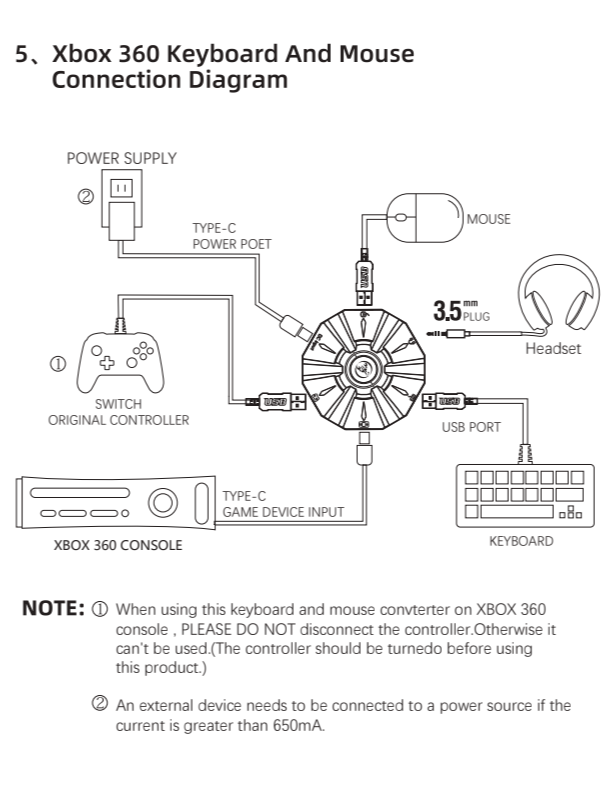

FOR PS4, Xbox One, PS3, Xbox 360, Switch

SETTING INSTRUCTIONS

1. Set Keyboard And Mouse Functions
Press the keyboard ESC + SPACE (space bar) at the same time to enter the function mode of setting keyboard and mouse buttons LED (blue light).

DEFAULT KEY-VALUE TABLE

Table with columns for Keyboard, Mouse, PS4, PS3, Xbox One, Xbox 360 and rows for various function keys like Left Button, Right Button, Mouse, etc.

2. Keyboard Default Key Value Table


Table with columns for Keyboard, Mouse, PS4, PS3, Xbox One, Xbox 360 and rows for various function keys like Left Button, Right Button, Mouse, etc.

PRECAUTIONS

To ensure the normal use of all console consoles by keyboard and mouse, you must use the original controller (supporting wired function) corresponding to each platform to guide.




PRODUCT MANUAL

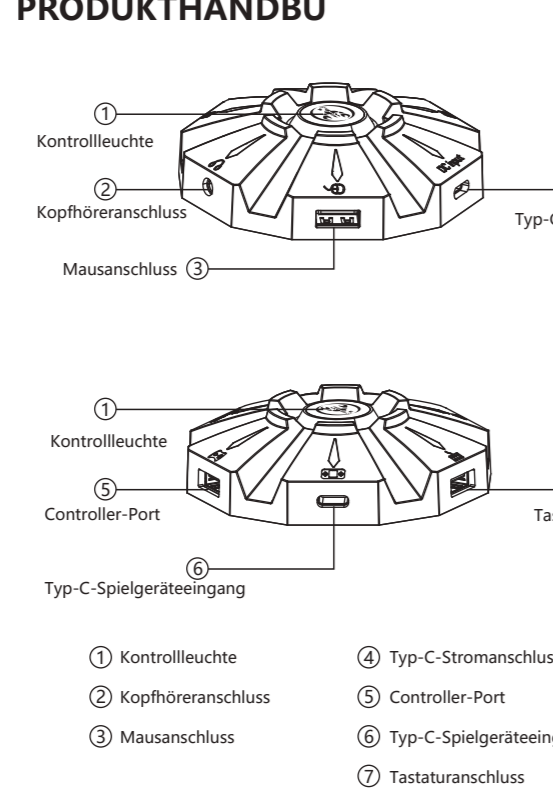


FOR PS4, Xbox One, PS3, Xbox 360, Switch

CONNECTION INSTRUCTIONS

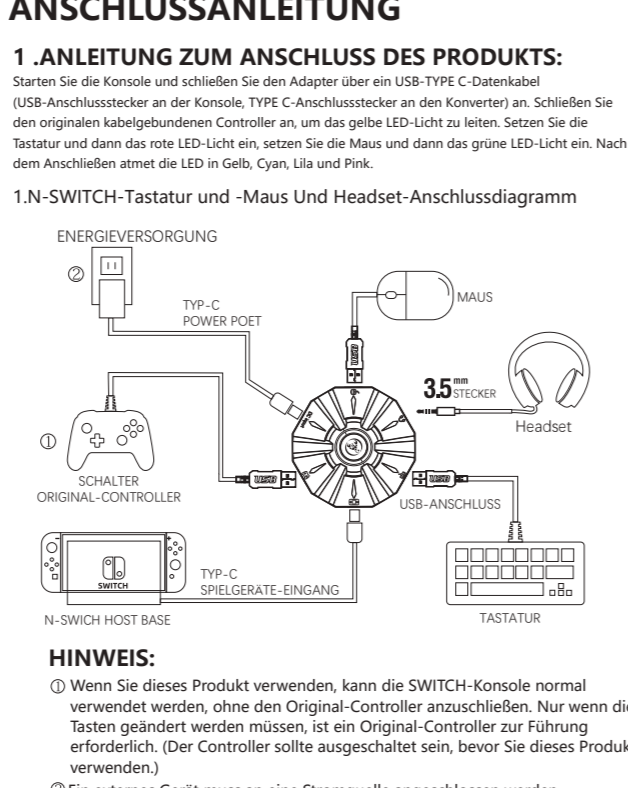


FOR PS4, Xbox One, PS3, Xbox 360, Switch

CONNECTION INSTRUCTIONS

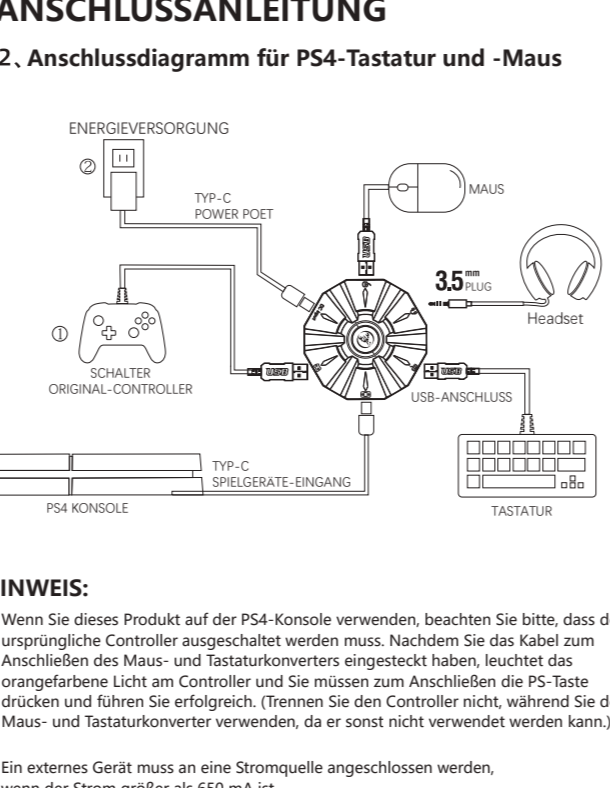


FOR PS4, Xbox One, PS3, Xbox 360, Switch

CONNECTION INSTRUCTIONS

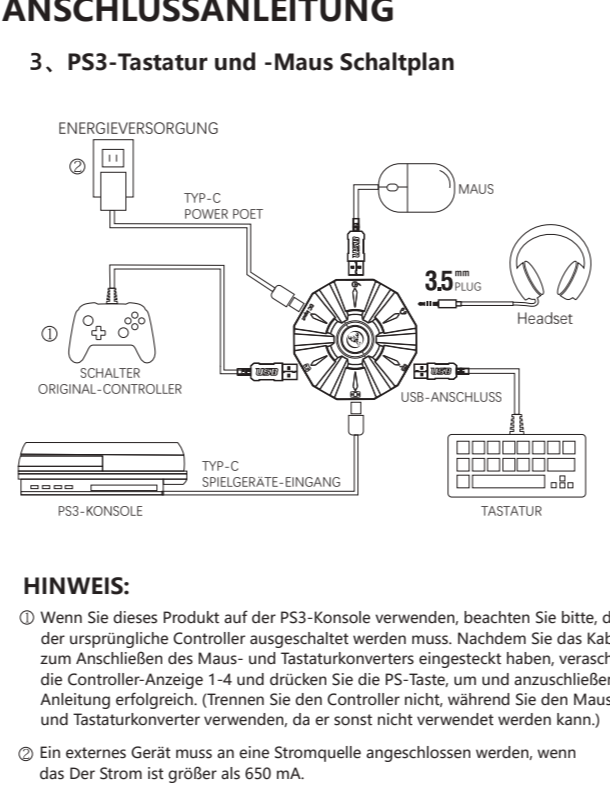


FOR PS4, Xbox One, PS3, Xbox 360, Switch

CONNECTION INSTRUCTIONS

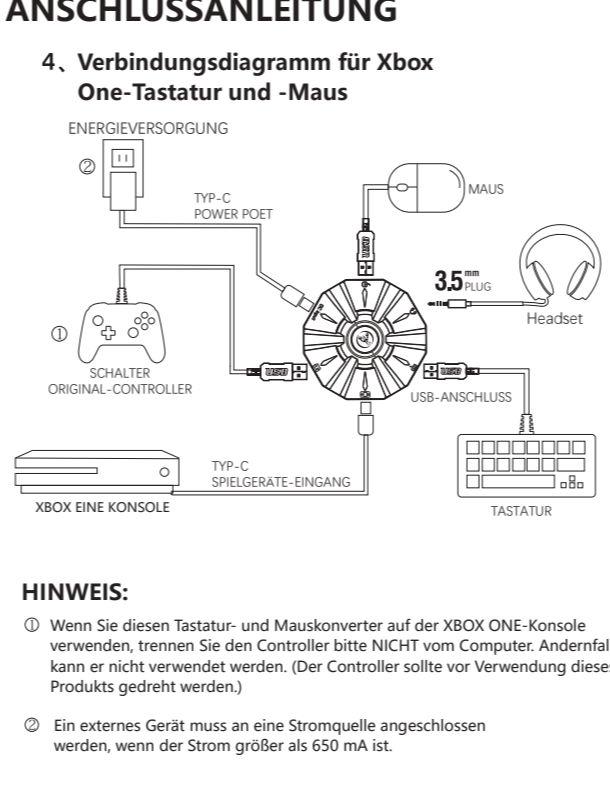

FOR PS4, Xbox One, PS3, Xbox 360, Switch

CONNECTION INSTRUCTIONS

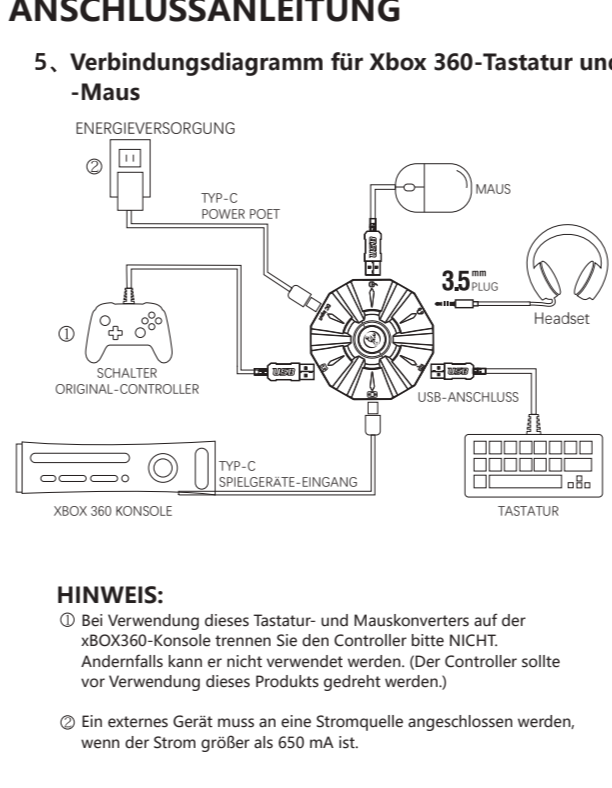

FOR PS4, Xbox One, PS3, Xbox 360, Switch

SETTING INSTRUCTIONS

1. Tastatur- und Mausfunktionen einstellen
Drücken Sie gleichzeitig die Taste ESC + LEERTASTE (Leertaste), um den Funktionsmodus zum Einstellen der Tastatur- und Mausfunktionen aufzurufen (blaues LED-Licht).

DEFAULT KEY-VALUE TABLE

Table with columns for Keyboard, Mouse, PS4, PS3, Xbox One, Xbox 360 and rows for various function keys like Left Button, Right Button, Mouse, etc.

2. Tastatur-Standardschlüsseltabelle


Table with columns for Keyboard, Mouse, PS4, PS3, Xbox One, Xbox 360 and rows for various function keys like Left Button, Right Button, Mouse, etc.

Points to note

Um für die normale Verwendung verschiedener Konsolen über Tastatur und Maus sicherzustellen, müssen Sie den Original-Controller (der kabelgebundene Funktionen unterstützt) verwenden, der jeder Plattform entspricht.




PRODUCT MANUAL

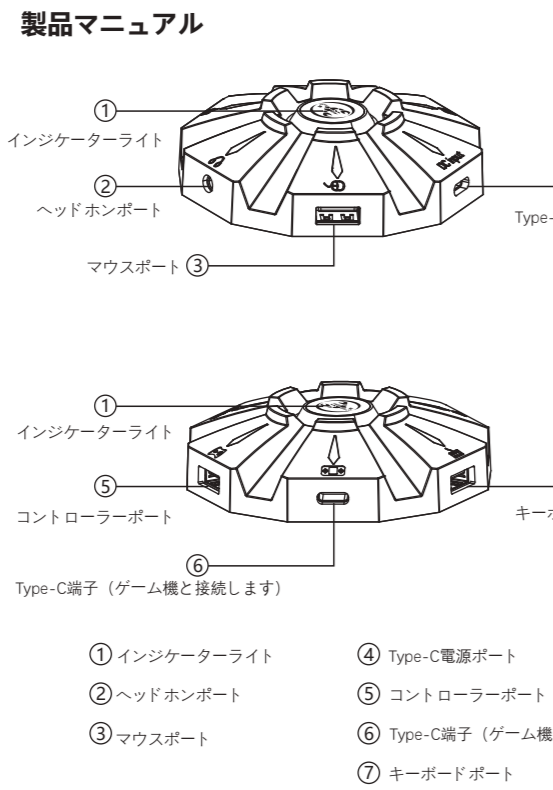


FOR PS4, Xbox One, PS3, Xbox 360, Switch

CONNECTION INSTRUCTIONS

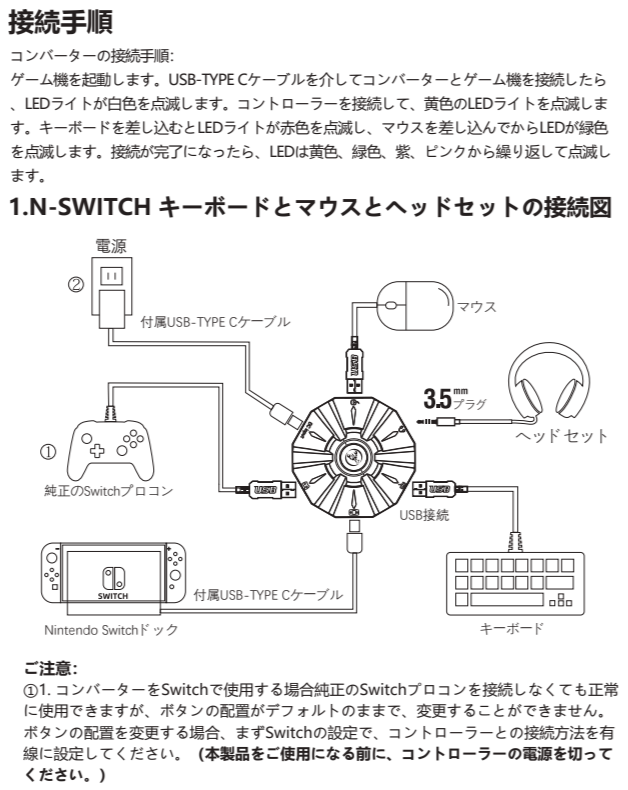


FOR PS4, Xbox One, PS3, Xbox 360, Switch

CONNECTION INSTRUCTIONS

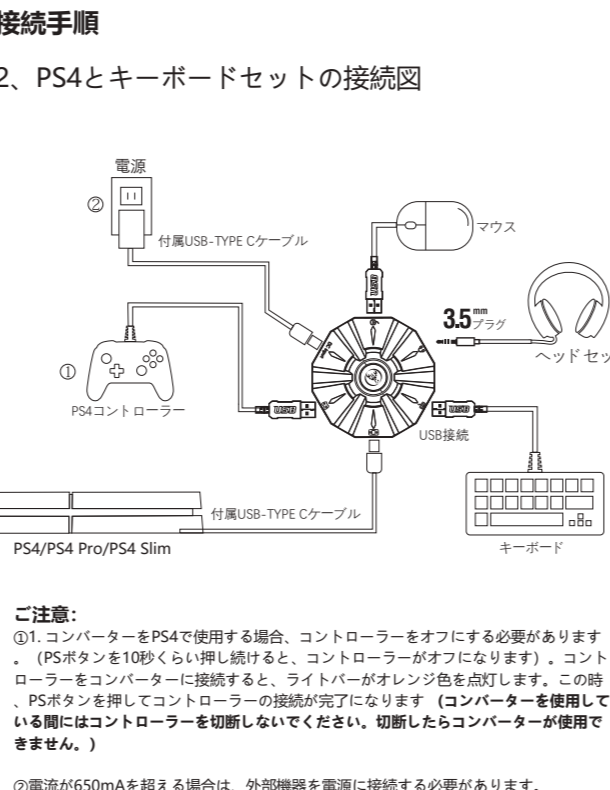


FOR PS4, Xbox One, PS3, Xbox 360, Switch

CONNECTION INSTRUCTIONS

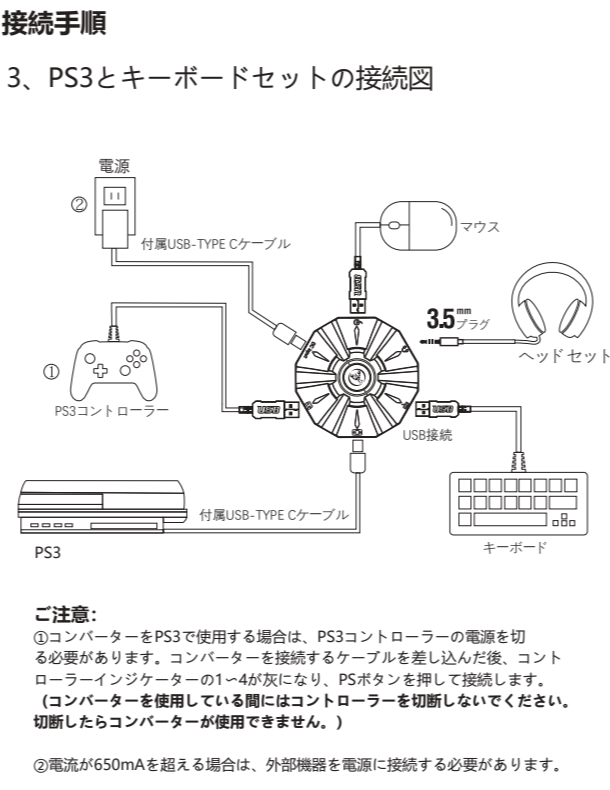


FOR PS4, Xbox One, PS3, Xbox 360, Switch

CONNECTION INSTRUCTIONS

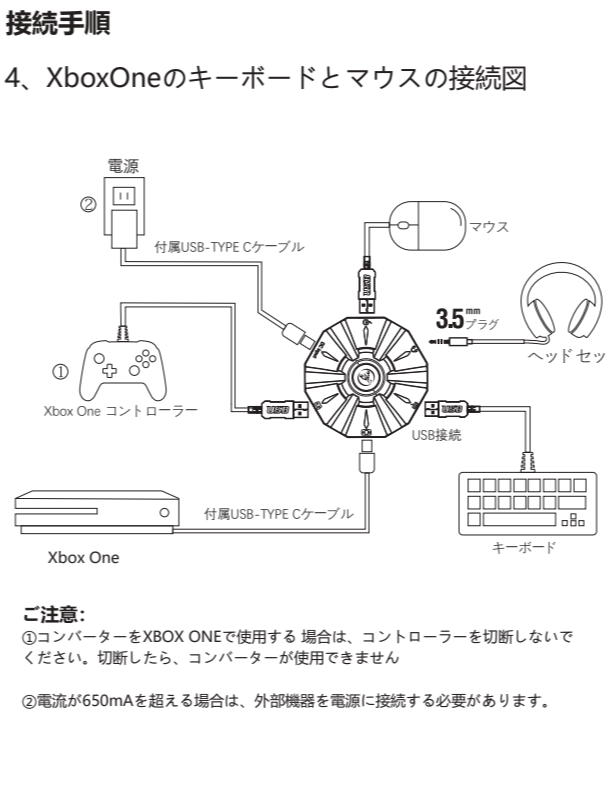

FOR PS4, Xbox One, PS3, Xbox 360, Switch

CONNECTION INSTRUCTIONS

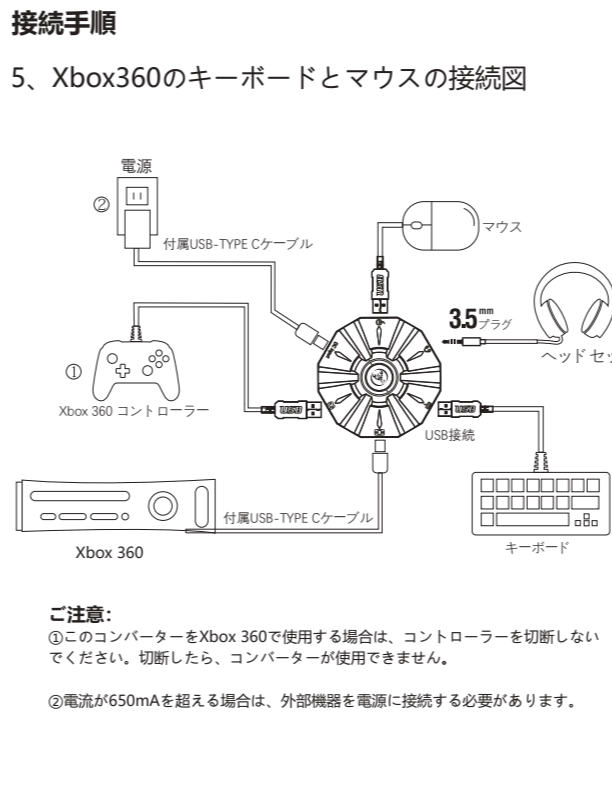

FOR PS4, Xbox One, PS3, Xbox 360, Switch

SETTING INSTRUCTIONS

1. キーボードとマウスの接続の変更に
キーボードはESC + SPACE (スペースキー)を同時に押すことで、キーボードとマウスの設定を変更するモードに入ります。

DEFAULT KEY-VALUE TABLE

Table with columns for Keyboard, Mouse, PS4, PS3, Xbox One, Xbox 360 and rows for various function keys like Left Button, Right Button, Mouse, etc.

2. マウスのデフォルトボタ配置

Table with columns for Keyboard, Mouse, PS4, PS3, Xbox One, Xbox 360 and rows for various function keys like Left Button, Right Button, Mouse, etc.

LED対応モード

一部のゲームでは機能に設定されています。 (例えば、マウスを前に移動することがゲームで必要になる場合など)。