



IMPORTANT



Be Sure
to Read this
Manual
Before Use



To UNIS Parts And
Service/Manuals



UNIS TECHNOLOGY

Operation Manual

Notice: Check www.unispartsandservice.com/manuals for current manuals and updates.

WE ARE HERE TO ASSIST For parts and service



Have Questions? Contact us!

UNIS SERVICE CENTER

Tel: 972-241-4263


Email: service@unispartsandservice.com

www.unispartsandservice.com

When contacting Service, you will need the following information
and the name of your authorized distributor.

INDOOR MACHINE	
NAME: Spin City Twin GMP	MAX POWER: 900W
MODEL: C-874	MIN POWER: 620W
S/N:	FREQUENCY: 50/60Hz
VOLTAGE: AC110V~	DATE:
Guangdong UNIS Technology Co.,Ltd.	

INDOOR MACHINE	
NAME: Spin City Twin GMP	MAX POWER: 900W
MODEL: C-874	MIN POWER: 620W
S/N:	FREQUENCY: 50/60Hz
VOLTAGE: AC220V~240V~	DATE:
Guangdong UNIS Technology Co.,Ltd.	



CONTENT

IMPORTANT SAFETY INSTRUCTIONS	3
1. SPECIFICATIONS	5
2. CONTENTS OF THE ACCESSORY KIT	6
3. PART NAME	7
4. SET UP & INSTALLATION	8
5. HOW TO PLAY	14
6. GAME OPTION	17
7. TROUBLESHOOTINGS	21
8. MAINTENANCE & INSPECTION	24
9. OVERALL CONSTRUCTION	25
10. WIRING DIAGRAM	51
APPENDIX: Linking Instructions	52

Thank you for purchasing **Spin City Twin GMP**. We hope you enjoy the product.

This manual contains valuable information about how to operate and maintain your game machine properly and safely. It is intended for the owner and/or personnel in charge of product operation. Carefully read and understand the instructions.

If you need any help during installation and setup please utilize this manual and troubleshooting guide. If the product fails to function properly, *non-technical personnel should under no circumstance attempt to service the machine*. Contact your distributor or manufacturer for help.

Before use, please read **IMPORTANT SAFETY INSTRUCTIONS**.

IMPORTANT SAFETY INSTRUCTIONS

To ensure the safe usage of this product, carefully read and understand these instructions before operating your game.

Save these instructions for future reference.

Use this product only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury. Unplug the game from the outlet when not in use, when moving from one location to another, and before cleaning/servicing.

Explanations which require special attention are indicated by signs of warning. Depending on the potential hazardous degree, the terms: **NOTE**, **NOTICE**, and **WARNING** are used.

NOTE: A NOTE indicates useful hints or information about product usage.

NOTICE: A NOTICE indicates potential damage to product and how to avoid the problem.

WARNING: A WARNING indicates a potential for product damage or serious personal injury.

It is important to understand the meaning of the following **HAZARD SIGNS** before continuing:

High Voltage and Shock Hazard:

High voltage can cause electric shock.
Turn off/unplug power before servicing.



High Temperature Hazard:

This part may cause scalding.
Do not touch. Surface may be hot.



No Touching Hazard:

This part may be hot or can cause electric shock.
Do not touch.



Use the following safety guidelines to help ensure your own personal safety and to help protect your equipment and surrounding environment from potential damage.

⚠️ This product is an indoor game machine. Do not install outdoors.

Avoid installing in the following places to prevent fire, electric shock, injury and/or machine malfunctioning:

- Places subject to rain/moisture, or places subject to high humidity.
- Places subject to direct sunlight, or places subject to extremely hot or cold temperatures to ensure that it is used within the specified operating range.
- Places where inflammable gas may be present or in the vicinity of highly inflammable/volatile chemicals or items that can easily catch fire.
- On unstable or sloped surfaces. The machine may topple or cause unforeseen accidents.
- Vicinity of fire exits, fire extinguishers etc that may block/prevent safety measures.

IMPORTANT NOTE:

ALL REPAIRS MUST BE DONE TO ORIGINAL MANUFACTURER SPECIFICATIONS. FAILURE TO DO SO VOID ALL WARRANTIES AND OPERATOR ASSUMES ALL RISKS.

Note: The contents of this manual may be updated without notice.

1. SPECIFICATIONS

Rated power supply: AC110V 50/60Hz; AC220V 50/60Hz;

Min. Power consumption: 620W

Max. Power consumption: 900W

Dimension: H102.36×W102.36×D87.20 in



H2600×W2600 ×D2215 mm

Weight: Approximately 1102.31 lb/500 KG

Model No: C-874

Part No.: S203

! **NOTICE** : After turning off the game, please wait at least 1 minute before restarting again.

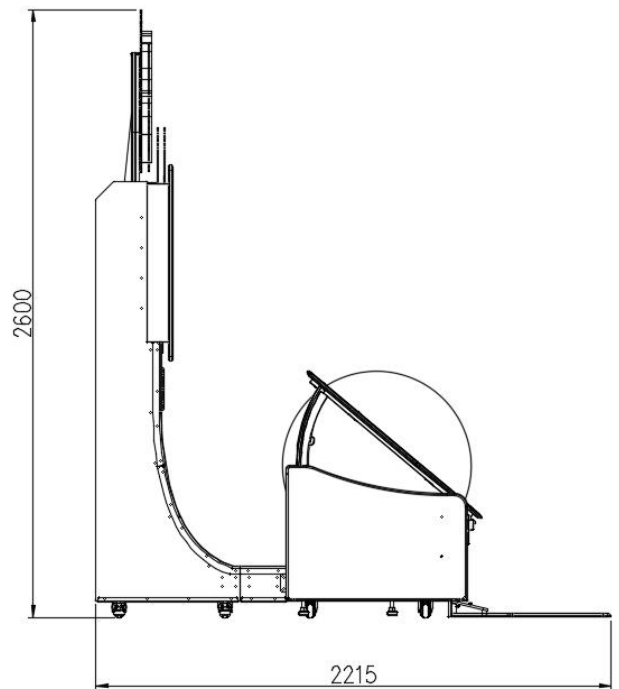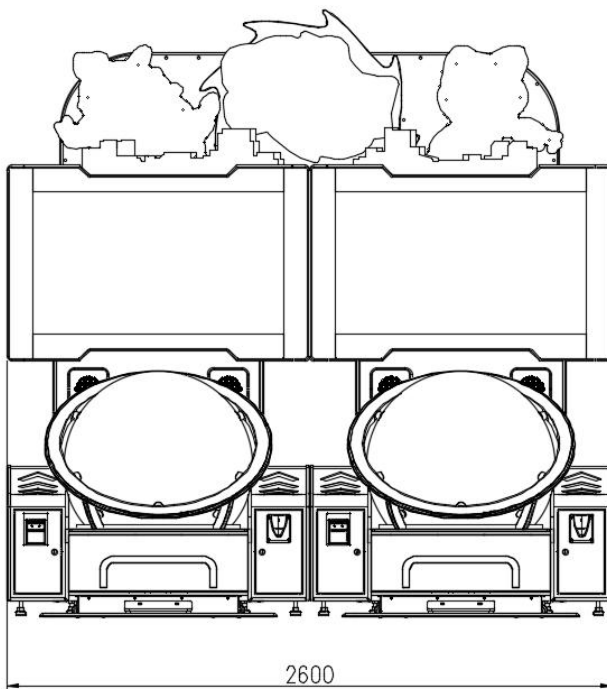






Note: Game specifications are subject to change without notice.

2. CONTENTS OF THE ACCESSORY KIT

Open the package and make sure all the items are included:

1. Following accessories

No.	Pat No.	Code No.	Name	Qty	Picture
1	S203-1401-00	202.1.2513.075	Coin mech blank plate	2	/
2	S203-1402-00	202.1.2513.076	Ticket blank plate	2	/
3	S203-1403-00	206.1.2513.055	Universal ball black PVC	10	/
4	S203-1404-00	2.53.00171002	171A key	4	
5	S203-1405-00	2.53.00172002	171B key	2	
6	S203-1406-00	4.14.40000915	Manual	1	
7	S203-1407-00	2.33.02.000012	Network cable T568A-T568A 5M	1	/
8	S203-1408-00	2.33.01.010020	Power cord 3×16AWG 1.8M	2	
9	S203-1409-00	2.19.01.000030B	Fuse Φ5×20mm T10A 250VAC	2	

Note: Game specifications are subject to change without notice.

3. PART NAME

Key Components



4. SET UP & INSTALLATION

! NOTICE


We do not recommend using power tools as they may cause damage.

! This product is an indoor game machine. Do not install outdoors.

- Refer to IMPORTANT SAFETY INSTRUCTIONS (Pg. 3) for places to avoid.
- Place the unit on a dry level surface.
- Ventilation openings in the back of the unit must not be obstructed by objects or by wall.

4.1 Transporting the Game

If you need to move the game, adjust the levelers back to an “up” position.

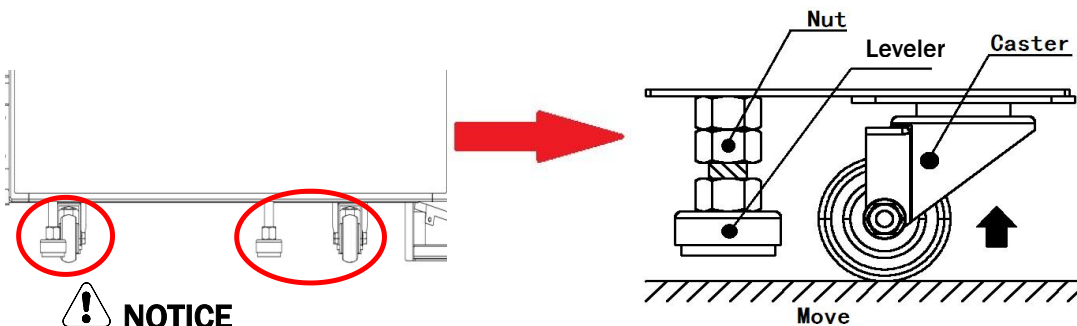


! NOTICE

- Be careful not to damage the machine during transport.
- Always unplug the game before moving.
- Keep the machine in upright position during transport.
- For longer distance transport, package the game properly to prevent damages.

4.2 Level Adjustment

Install this game on a flat surface. If the game is installed on an unsuitable floor, it could cause game malfunction.

To secure the game, loosen the nut, utilize wrench to adjust the leveler down until it touches the floor, lifting the casters off the ground by 0.2 in/5mm. Repeat the same for all levelers.

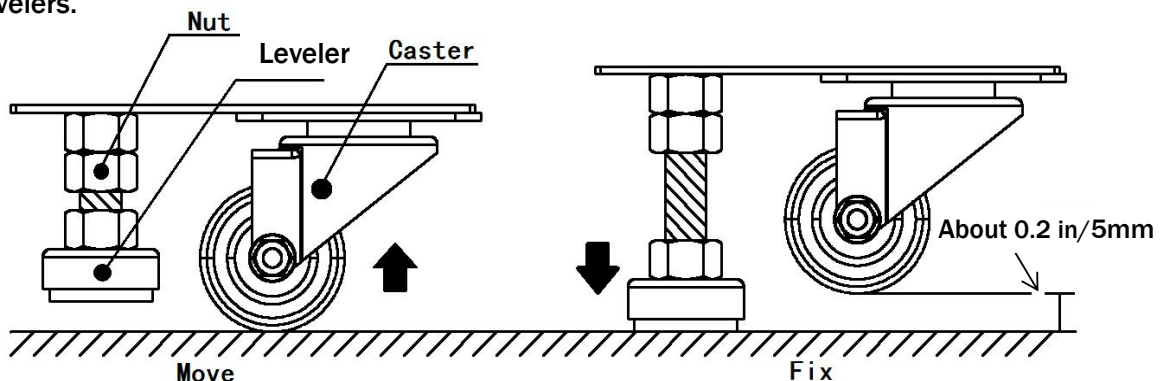

! NOTICE


Make sure the machine is level.

4.3 Play Zone

This machine requires space for playing and for maintenance as shown below.

Leave space around the game upon installation:

Service area: 20 in

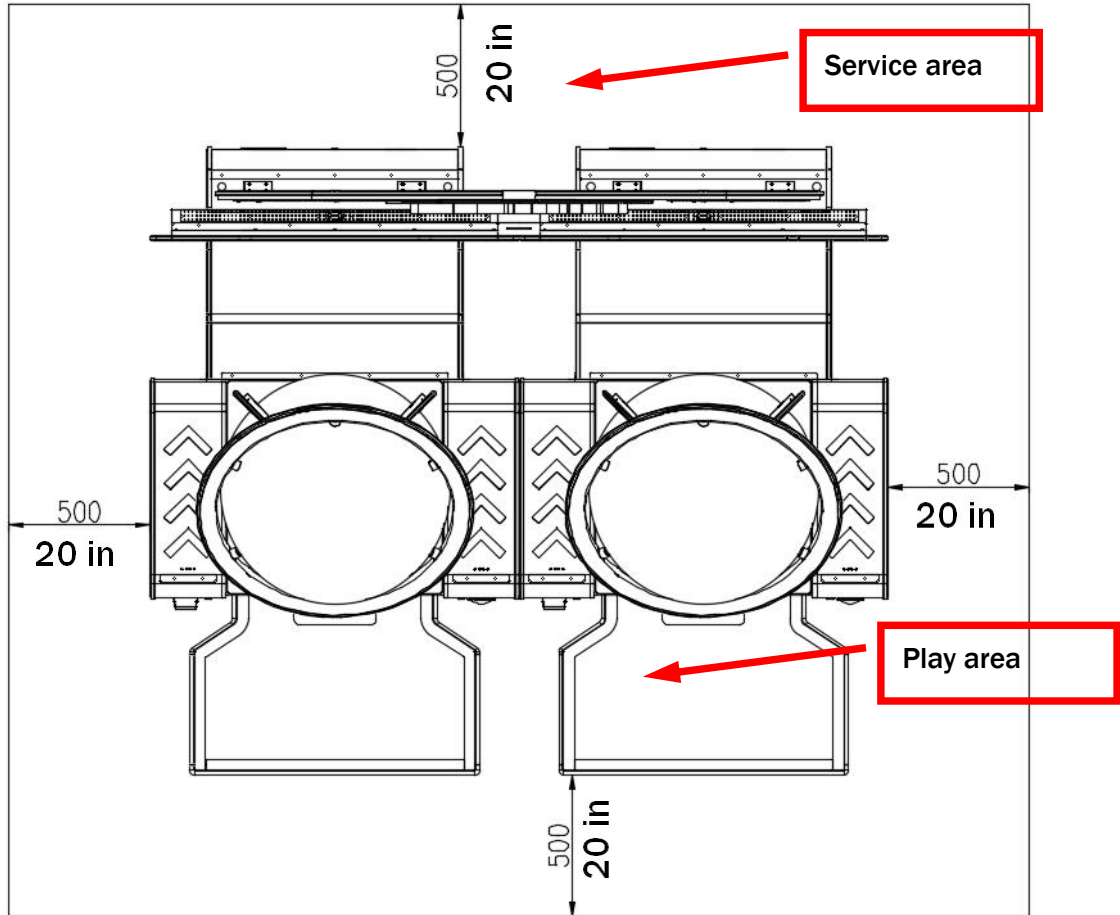


NOTICE

Your unit must be leveled to operate properly.


4.4 Machine Installation

Step 1 Install mid bracket to the back of the ball assembly. Lead the ball assy cable set to the mid bracket.

Step 2 Utilize screws to secure.

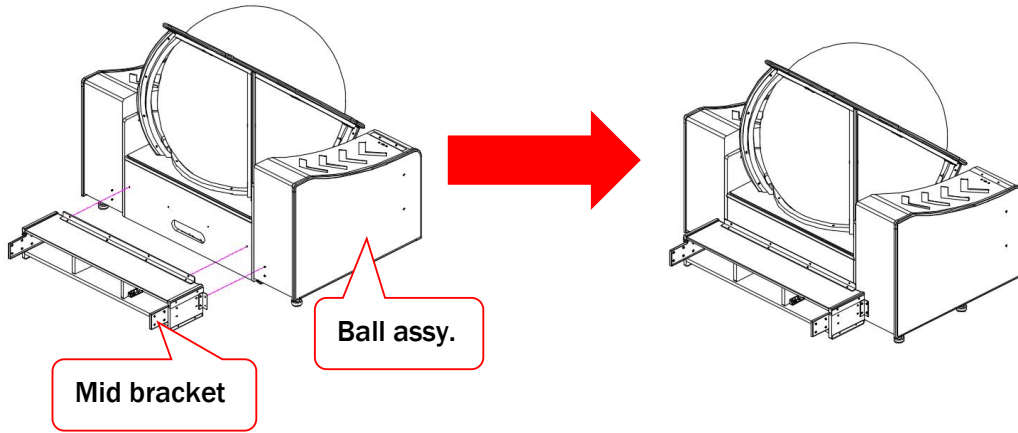


Step 3 Lead the main cabinet to the ball assembly. Lead the mid bracket cable to the cabinet and connect. Utilize screws to secure.

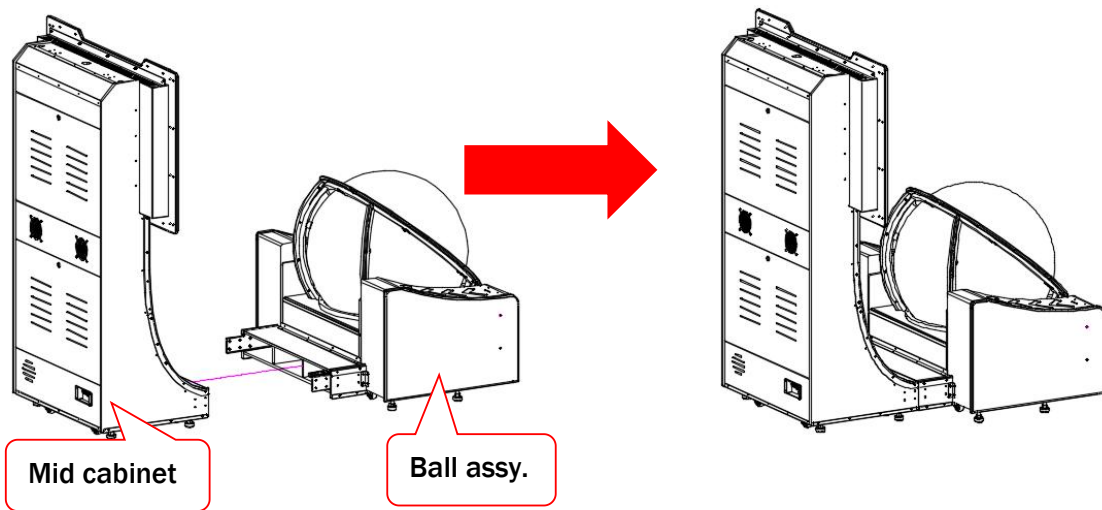


Step 4 It is the same installation(Step 1-3) of the other side cabinet (2P).


Step 5 Connect 1P&2P cabinet together. Utilize connect plate and screws to secure.

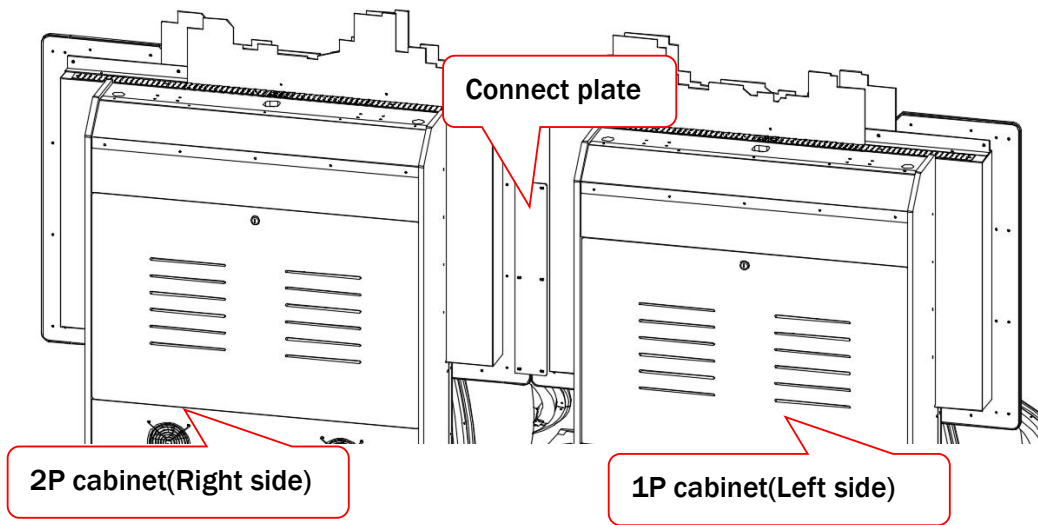

Step 6 Open coin service door and DBV service door. Take the screws and nuts out. Utilize screws and nuts to secure 1P&2P cabinet together.

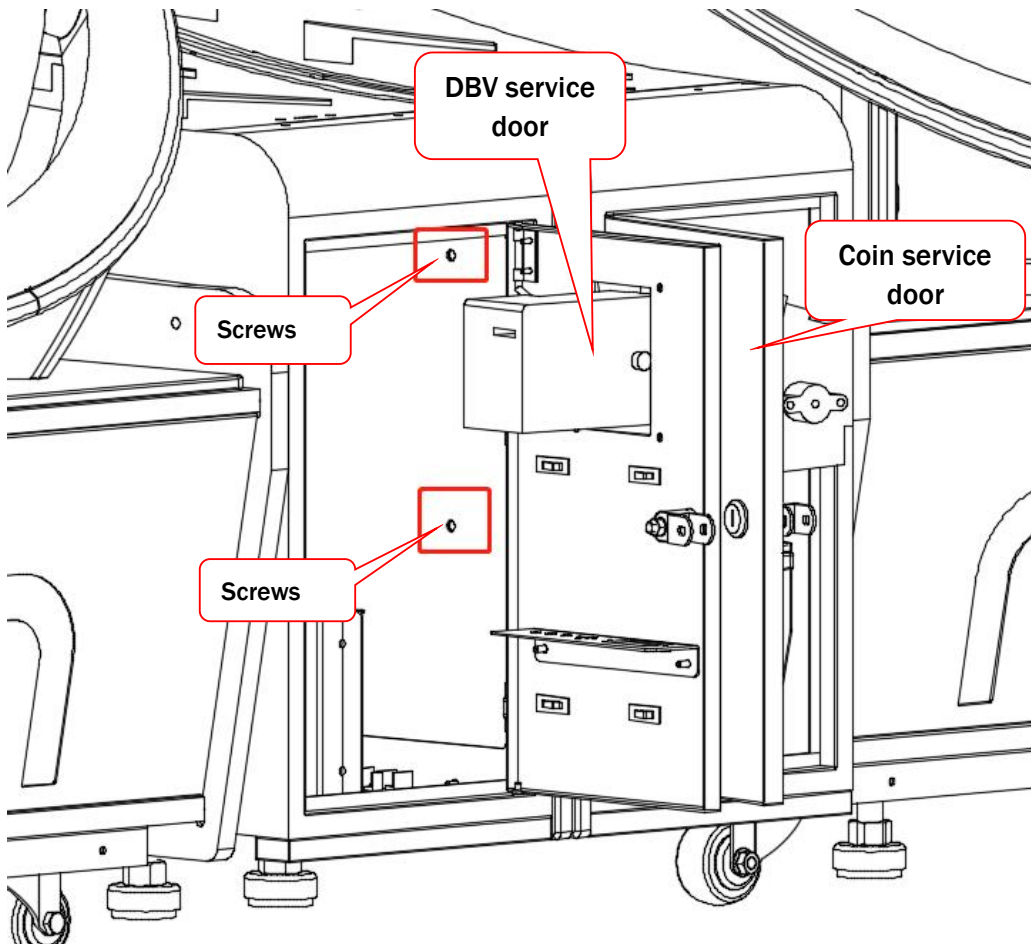


Step 7 Install 1P & 2P marquee. Connect the connectors.

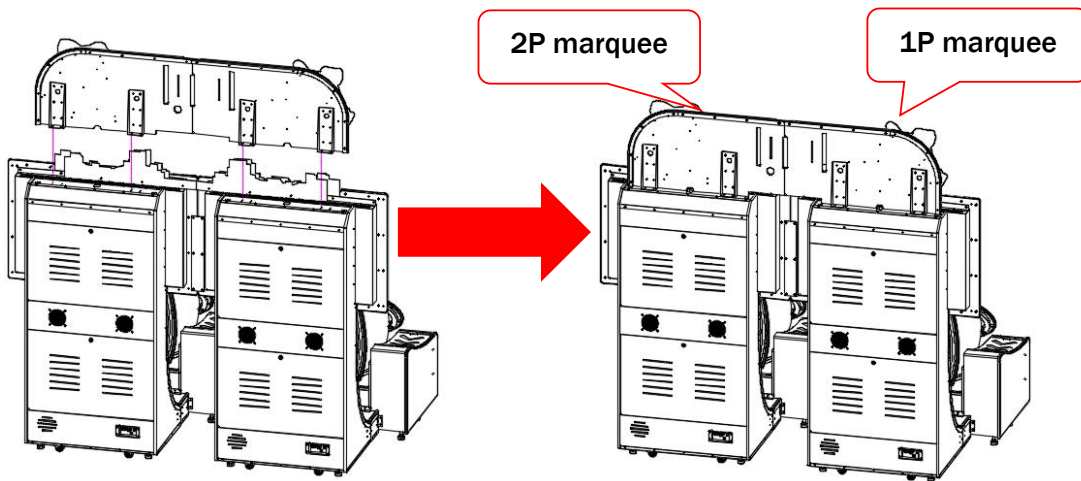


Step 8 Install LOGO marquee to the front of the marquee assembly. Utilize screws and pins to secure.

Step 9 Lead logo marquee connector to the back through the hole. Connect the connectors

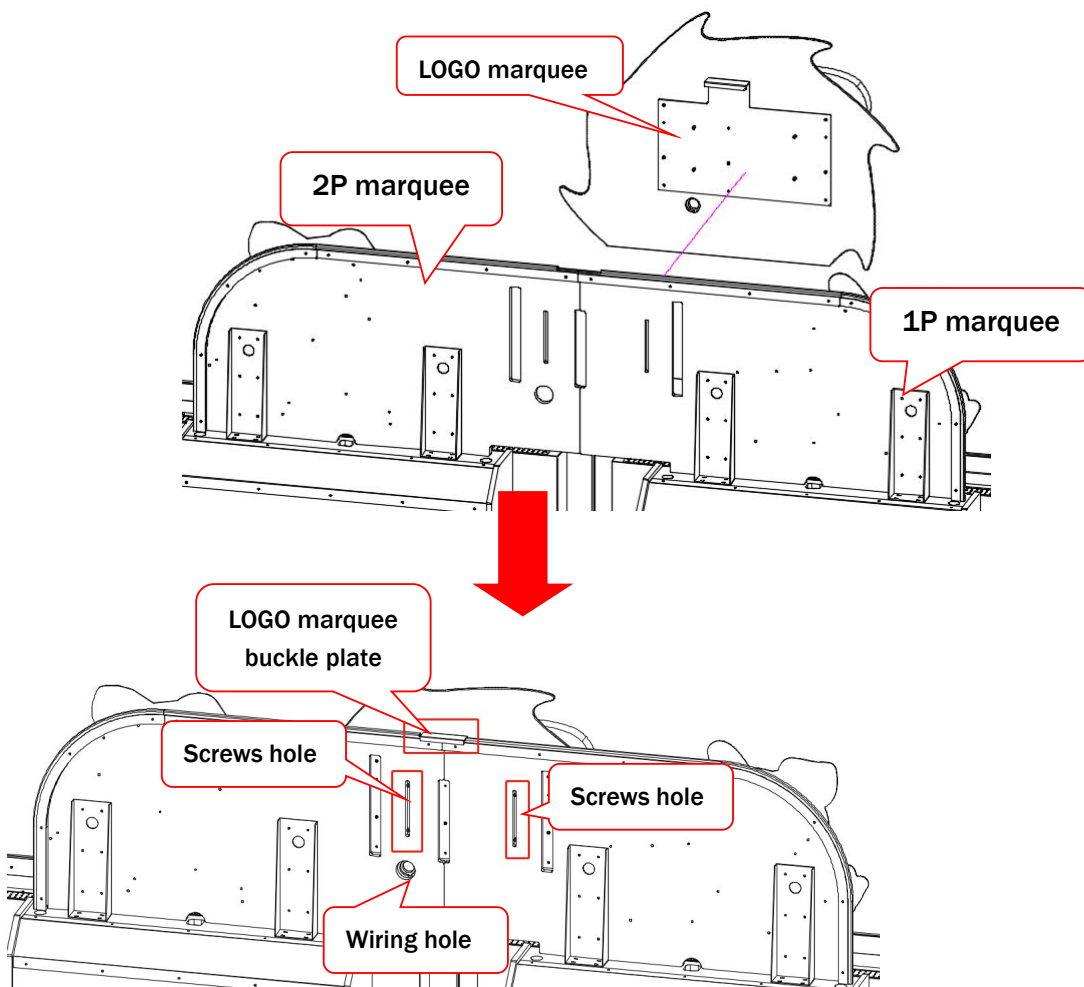


Step 10 Install Pedal assembly to the ball assembly front side. Connect the connectors.

Utilize screws to secure.

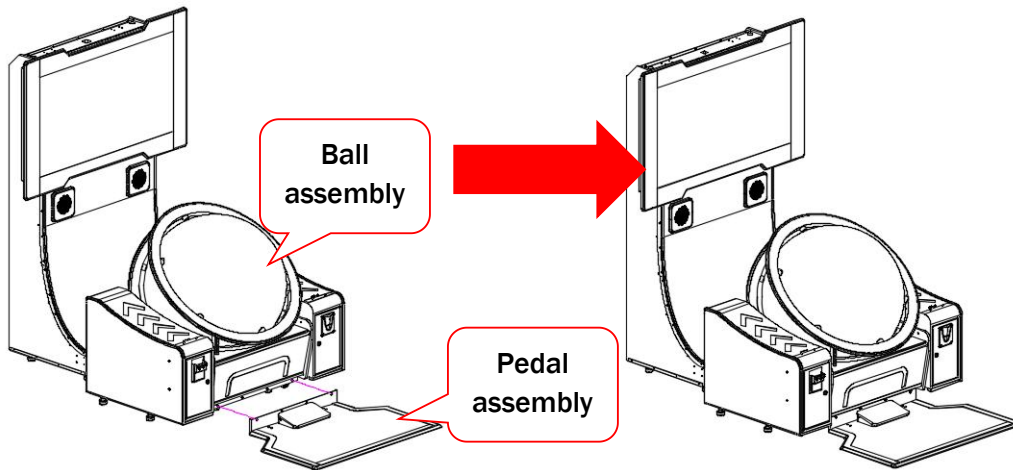

Finish!

4.5 Card Reader Installation Safety Notice

 Take precaution to assure that all wiring voltages are confirmed prior to installation of card reader. All warranties are void if not properly installed resulting in logic board damage.

Important: This game is pre-wired to AAMA standards. It is highly recommended to utilize this wiring for Card reader installation.

5. HOW TO PLAY

5.1 Insert coins/tap/swipe card to play.



5.2 Select the character Each character has unique speed, handling and stability characteristics. Step the pedal to confirm your character.



5.3 Select a course. Each scene has its own unique layout and difficulty



5.4 Start a game. Roll the ball to control character move.



5.5 Step the pedal to activate energy bar.



5.6 Ranking List shows the player's ranking, challenge stage and time




RANKING

	PLAYER	SCENE	SCORE
1	SHARK	JUNGLE FURY	1790
2	SHARK	DESERT EXPANSE	1780
3	SHARK	DESERT EXPANSE	1700
4	SHARK	JUNGLE FURY	1680
5	SHARK	FROZEN CITY	1680
6	SHARK	JUNGLE FURY	1610
7	SHARK	JUNGLE FURY	1520
8	SHARK	DIGITAL DREAM	1520
9	MONIKA	DIGITAL DREAM	1510

6. GAME OPTION

6.1 Adjustment button instruction

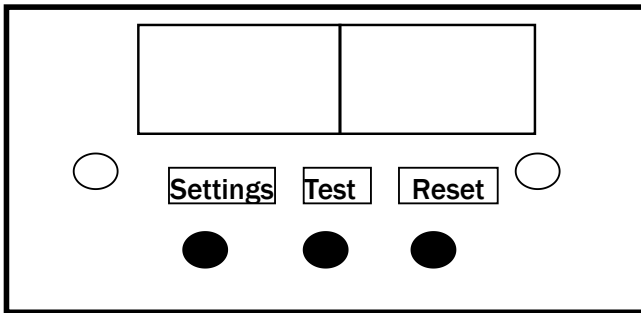

Open the coin door and there is a meter panel. Press Settings button to enter into the setting menu.

6.2 Setting menu

6.2.1 Main menu

Options
Basic Setting
Customized Setting
Linking Setting
Output Test
Input Test

Options
Game Reset
Date/Time Setting
Bookkeeping
Daily Record
Back to game

6.2.2 Basic Setting

Options	Adjustment Value	Default
Free Play	OFF_ON	OFF
Tickets Out	OFF_ON	ON
Out Of Tickets	Store Tickets in Memory_Call Attendant	Store Tickets in Memory
Demo Music	OFF_ON	ON
Volume	1_10	7
BGM Volume	1_10	10
SE Volume	1_10	10
VO Volume	1_10	10
Coins	1_10	1
Memory Save	OFF_ON	ON
Pay Mode	Insert Coins_Tap/Swipe Card_Insert Coins & Tap/Swipe Card	Insert Coins
Restart Time In Demo Mode	60-520	300
Ball Control	Infrared_Track Ball	
Back&Save		

6.2.3 Customized Setting

Options	Adjustment Value	Default
Character Select Time	5_20	8
Scene Select Time	5_20	8
Game Time	40_480	120
Refill Mode	OFF_ON	ON
Refill Time	5_20	12
Divided By 2	OFF_ON	ON
Fixed Ticket(s) Mode	OFF_ON	OFF
Fixed Ticket(s)	0~100	6
1st Ticket(s)	1_100	10
2nd Ticket(s)	1_100	7
3rd Ticket(s)	1_100	5
Mercy Ticket(s)	1_100	3
Top Ranking	OFF_ON	ON
Number of Top Players	5_20	10
Back & Save		

6.2.4 Linking Setting

Options	Adjustment Value	Default
Linking Mode	OFF_ON	ON
Linking Players	2/4/6	2
Machine ID	1-6	1
Linking Wait Time	5-120	30
Back&Save		
Back		

6.2.5 Output Test

Options
Ticket Drive
Speaker Light-R
Speaker Light-G
Speaker Light-R
Marquee Light-R
Marquee Light-G
Marquee Light-B
Ball Column Light-R
Ball Column Light-G
Ball Column Light-B

Options
Surrounding Light-R
Surrounding Light-G
Surrounding Light-B
Surrounding Light-Colorful
Arrow Light-R
Arrow Light-G
Arrow Light-B
Arrow Light-Colorful
Blower
Back

6.2.5 Input Test

Options
Coin
Tickets
Tickets Feedback
Pedal
Ball Infrared X
Ball Infrared Y
Back

6.2.6 Game Reset

Options	Adjustment Value
Factory Restore	CANCEL_CLEAR
Reset Basic Setting	CANCEL_CLEAR
Reset Customized Setting	CANCEL_CLEAR
Clear All Records	CANCEL_CLEAR
Clear Owed Tickets	CANCEL_CLEAR
Clear Unused Coins	CANCEL_CLEAR
Back	

6.2.7 Date/Time Setting

Options
Year
Month
Day
Hour(24)
Minute
Second
Back&Save
Back

6.2.8 Bookkeeping

Player	Coins	Tickets	Payout	Continue Play
NON RESETTABLE CONTINUES				
NON RESETTABLE TICKETS				
Clear				
Back				

6.2.9 Daily Record

Date	Weekday	Runtime	Coins	Tickets	Payout	Service Coins	Continue Play
Clear							
Back							



7. TROUBLESHOOTINGS

7.1 Common Problem

Please confirm that all connectors fit tightly.


Symptom	Possible Cause	Recommended action
Game will not start	Frame assembly connector is loose.	Check connector.
	Frame assembly fault	Contact with UNIS Service.
Power off	Circuit protector make power SW in off state.	Turn on power SW again. If appeared again and again, machine has anomaly. Please contact with UNIS Service.
Card reader not working	The connector is loose.	Check connector.
	Card reader fault.	Check with card reader manufacturer.
No ticket dispensing	Out of ticket.	Add ticket and press reset button
	Ticket jamming.	Remove the jammed tickets and press reset button.
	The connector is loose.	Plug the connector tightly.
No sound	Low volume	Raise the volume.
	Connector loose.	Check connector.
	Speaker fault.	Check speaker.
	POT installation error.	Install POT correctly.
	POT fault.	Change POT.
	Audio cable problem.	Reconnect the audio cable or change it.

If you see following error signs showing on the display, please try the recommended action.

Display	Possible Cause	Recommended action
	The connection part of the IO board and PC are loose.	Check and reconnect the loose ports of the PC or IO board.
	Cable quality problem	Change the cable after checking the connection between IO board and PC.
	Cable became loose during transportation.	Check and reconnect the loose cables of the PC or IO board.
	IO board is faulty.	Reboot the game after checking U disk connection and cable problem, if the problem remains unresolved, please call the service department for assistance.
	Out of ticket.	Refill ticket
	Loose connection of the ticket dispenser's cables.	Check and reconnect the loose cables to the ticket dispenser.
	Ticket dispenser is faulty.	Change the ticket dispenser.
	Ticket jam.	Remove jammed tickets.

7.2 System Recovery Operation (NOTE: Do not disconnect power during this process.)

1. Turn off the game. Remove recovery stick from the machine. (Note: This process may take up to 60 minutes) Insert the recovery stick into the port at the back of the computer.
2. Restart PC to enter the system recovery screen as shown.

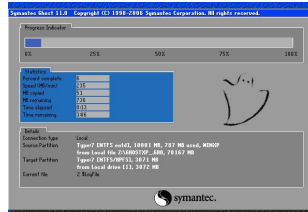

3. The game will automatically start recovery.
4. Once system recovery is partially finished (as shown below), and the ICON appears, remove the recovery stick from the computer. The game will continue the install process.

OK to remove the recovery stick.



5. Assure that the recovery stick has been properly secured for future use.



WARNING: The recovery stick should only be used to fix software errors. Using it for other purposes may cause unexpected results and damages.

8. MAINTENANCE & INSPECTION

8.1 Safety Check

Check the points listed before operating the machine. These checks are necessary for safe machine operation:

1. Test game before operation each day.
2. Conduct monthly routine checks of game components to ensure good working condition.
3. Check the machine regularly for dust and clean when necessary.

Note: Parts and components require preventative maintenance to maintain proper operation.

8.2 Handling Precautions

When installing or inspecting the machine, be very careful and pay attention to ensure that the player can enjoy the game safely.

Inappropriate handling running counter to the cautionary matters can cause personal injury or damage to the machine.




NOTICE

We do not recommend using power tools as they may cause damage.


9. OVERALL CONSTRUCTION

9.1 General Assembly

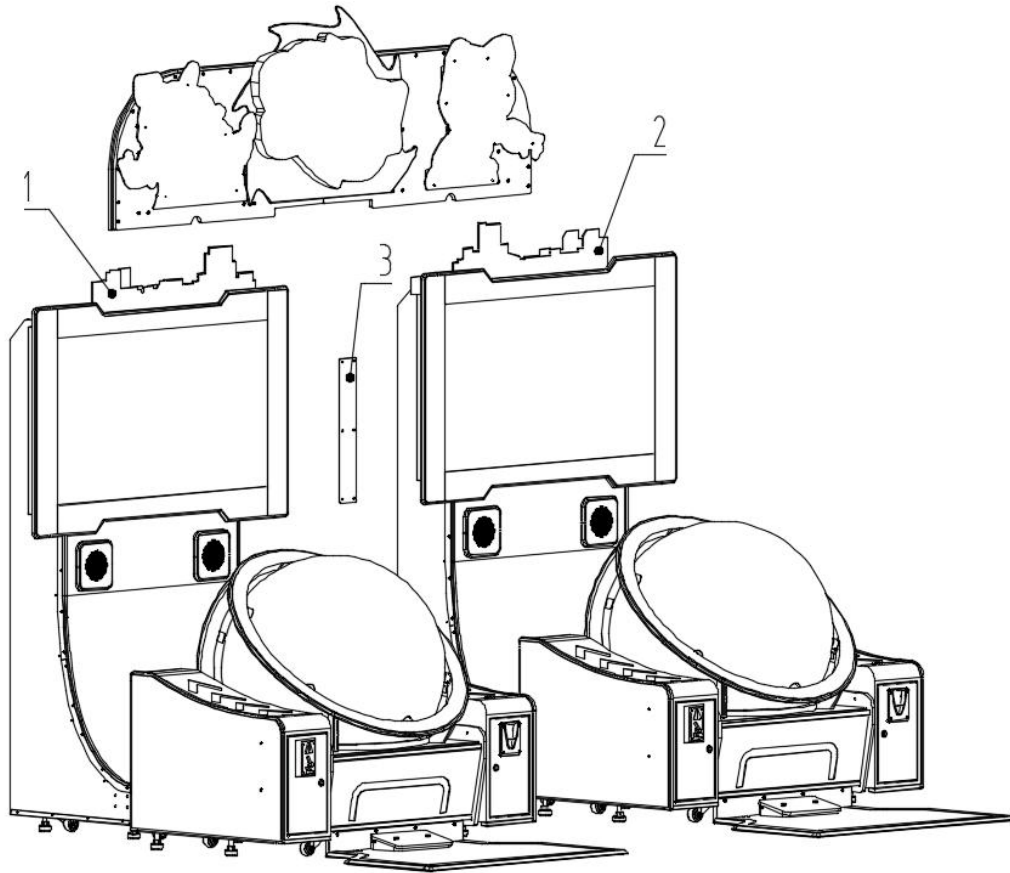


No.	Part No.	Code No.	Name	Version	Qty
1	S203-0001-00	205.1.2513.101	L top decal	V1.1	1
2	S203-0002-00	205.1.2513.102	R top decal	V1.1	1
3	S203-0003-00	202.1.2513.061	Monitor connect plate	V1.1	1

9.2 Main Cabinet Assembly

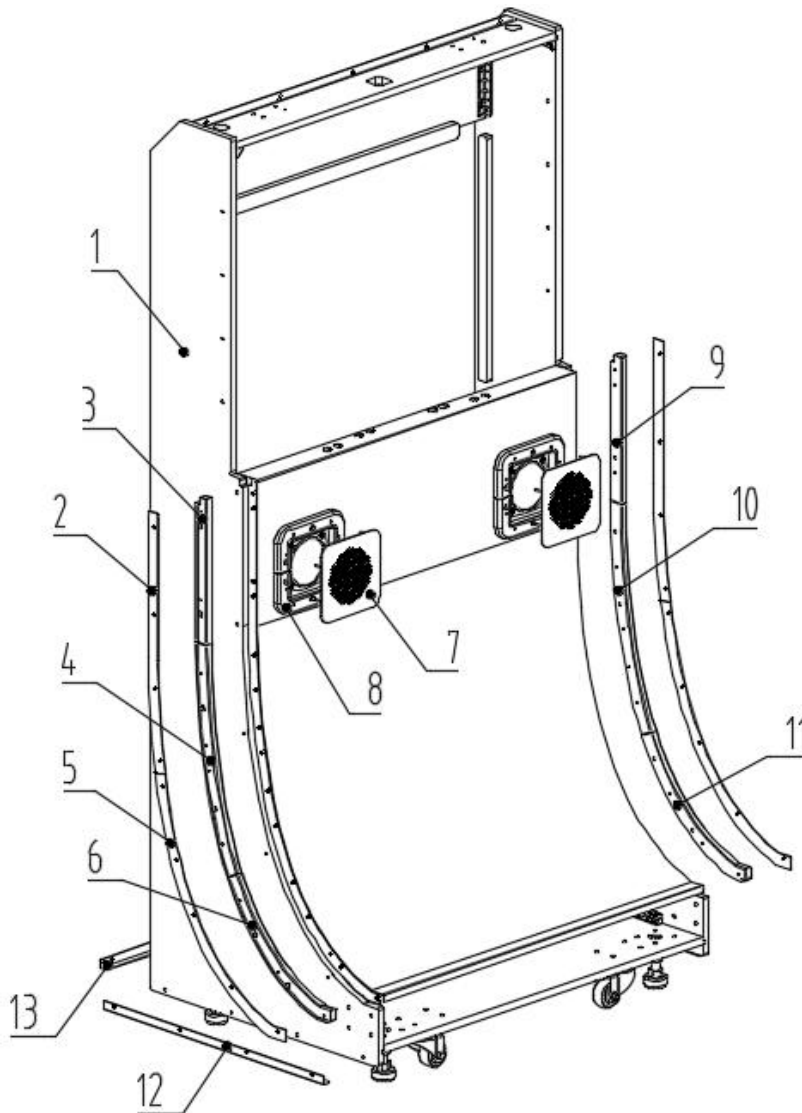


No.	Part No.	Code No.	Name	Version	Qty
1	S203-1000-00	299.1.2513.001	Main Cabinet Wooden Assembly	V1.1	1X2
2	S203-0901-00	202.1.2513.003	Wooden case side plastic press plate(Up)	V1.1	2X2
3	S203-0902-00	206.1.2513.005	R side up plastic	V1.1	1X2
4	S203-0903-00	206.1.2513.006	R side up mid plastic	V1.1	1X2
5	S203-0904-00	202.1.2513.004	Wooden case side plastic press	V1.1	2X2
6	S203-0905-00	206.1.2513.007	R side bottom plastic	V1.1	1X2
7	S203-0906-00	202.1.2513.005	Speaker cover plate	V1.1	2X2
8	S203-0907-00	206.1.2513.008	Speaker plastic	V1.1	4X2
9	S203-0908-00	206.1.2513.002	L side up plastic	V1.1	1X2
10	S203-0909-00	206.1.2513.003	L side up mid plastic	V1.1	1X2
11	S203-0910-00	206.1.2513.004	L side bottom plastic	V1.1	1X2
12	S203-0911-00	202.1.2513.006	Wooden case fence short	V1.1	2X2
13	S203-0912-00	202.1.2513.007	Wooden case fence long	V1.1	1X2

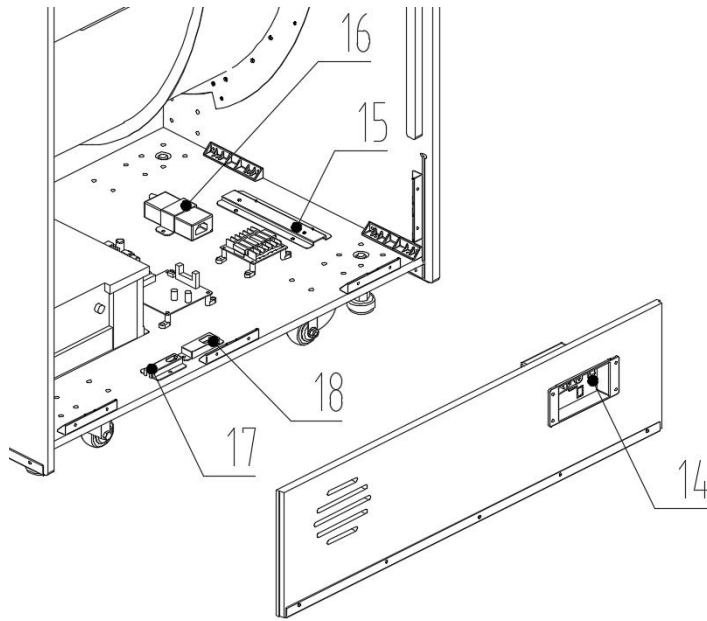


No.	Part No.	Code No.	Name	Version	Qty
14	S203-0913-00	2.60.00042000B	Wiring box	V1.2	1X2
15	S203-0914-00	202.4.2002.045	Power supply plate	V1.1	1X2
16	S203-0915-00	202.4.2002.044	Adapter plate	V1.1	1X2
17	S203-0916-00	2.60.00055000	Dongle plate	V1.1	1X2
18	S203-0917-00	2.60.00064000	Recovery stick plate	V1.1	1X2

9.3 Main Cabinet Wooden Assembly

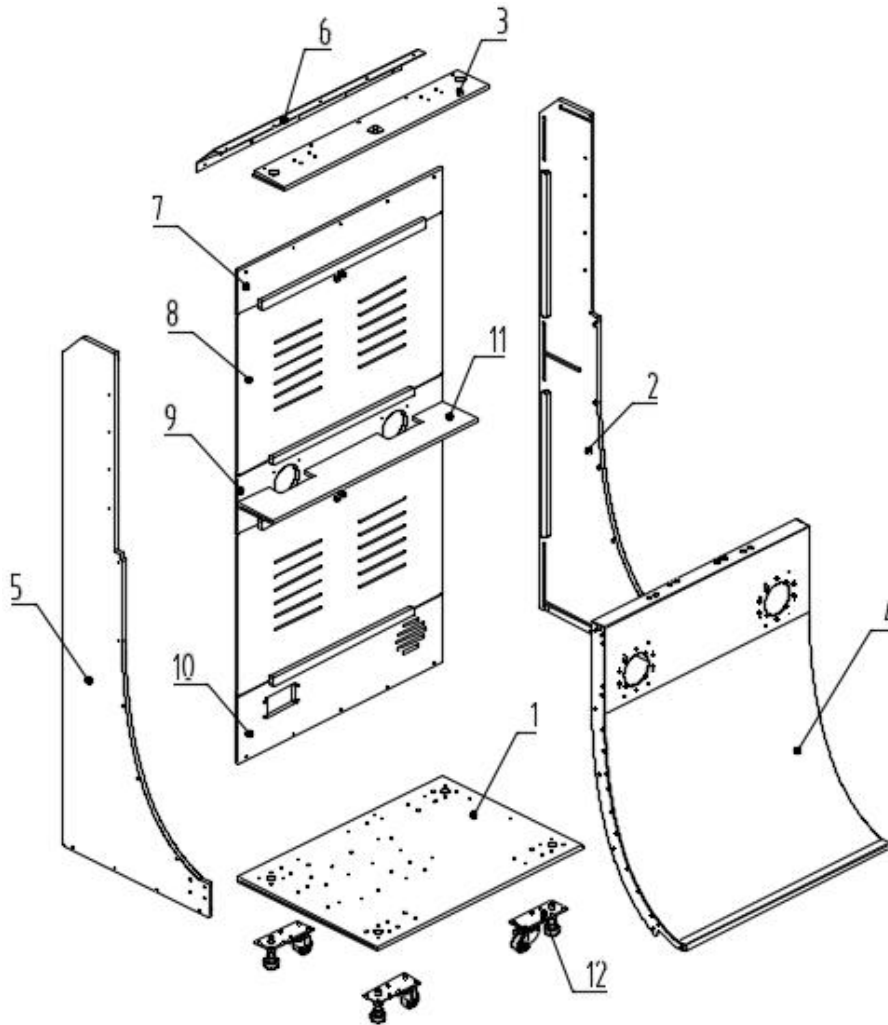


No.	Part No.	Code No.	Name	Version	Qty
1	S203-1001-00	203.1.2513.007	Base board	V1.1	1X2
2	S203-1002-00	203.1.2513.002	R side board	V1.1	1X2
3	S203-1003-00	203.1.2513.003	Top board	V1.1	1X2
4	S203-1004-00	202.1.2513.001	Arc board	V1.1	1X2
5	S203-1005-00	203.1.2513.001	L side board	V1.1	1X2
6	S203-1006-00	202.1.2513.002	Slanting board	V1.1	1X2
7	S203-1007-00	203.1.2513.004	Back up board	V1.1	1X2
8	S203-1008-00	203.1.2513.009	Door board	V1.1	2X2
	S203-0513-00	2.53.00171001	171A lock	V1.1	2X2
9	S203-1009-00	203.1.2513.005	Back mid board	V1.1	1X2
10	S203-1010-00	203.1.2513.006	Back bottom board	V1.1	1X2
11	S203-1011-00	203.1.2513.008	Block board	V1.1	1X2
12	S203-0406-00	2.60.00008000	2.5" leveller	V1.1	4X2
	S203-0407-00	2.60.00010000	2.5" caster plate	V1.1	4X2
	S203-0408-00	2.55.01.000047	2.5 caster	V1.1	4X2

9.4 Mid Connect Assembly

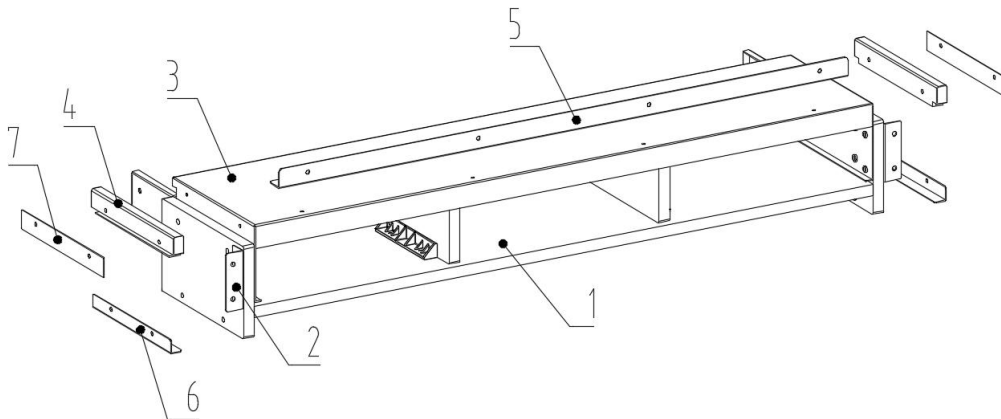


No.	Part No.	Code No.	Name	Version	Qty
1	S203-1200-00	299.1.2513.012	Mid Connect Wooden Assembly	V1.1	1X2
2	S203-1101-00	202.1.2513.045	Frame front plate(short)	V1.1	2X2
3	S203-1102-00	202.1.2513.043	Frame connect plate	V1.1	1X2
4	S203-1103-00	206.1.2513.031	Frame plastic	V1.1	2X2
5	S203-1104-00	202.1.2513.046	Frame front plate(long)	V1.1	1X2
6	S203-1105-00	202.1.2513.047	Mid frame side plate	V1.1	2X2
7	S203-1106-00	202.1.2513.044	Mid frame press plate	V1.1	2X2

9.5 Mid Connect Wooden Assembly

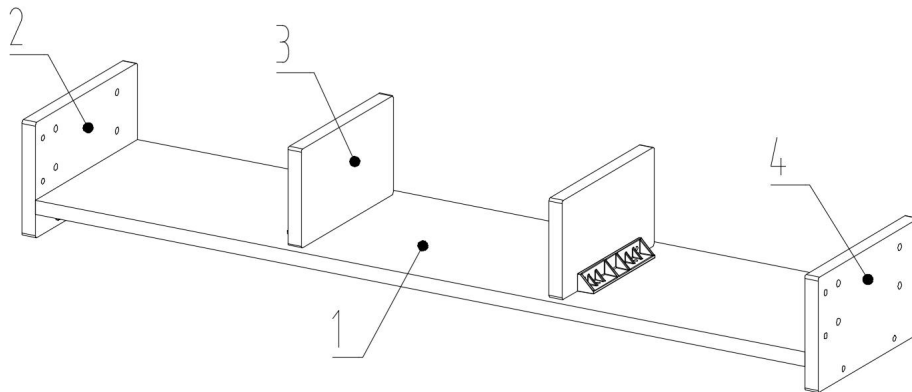


No.	Part No.	Code No.	Name	Version	Qty
1	S203-1201-00	203.1.2513.017	Mid frame base board	V1.1	1X2
2	S203-1202-00	203.1.2513.015	Mid frame L side board	V1.1	1X2
3	S203-1203-00	203.1.2513.018	Mid frame Strengthen board	V1.1	2X2
4	S203-1204-00	203.1.2513.016	Mid frame R side board	V1.1	1X2

9.6 Ball Assembly

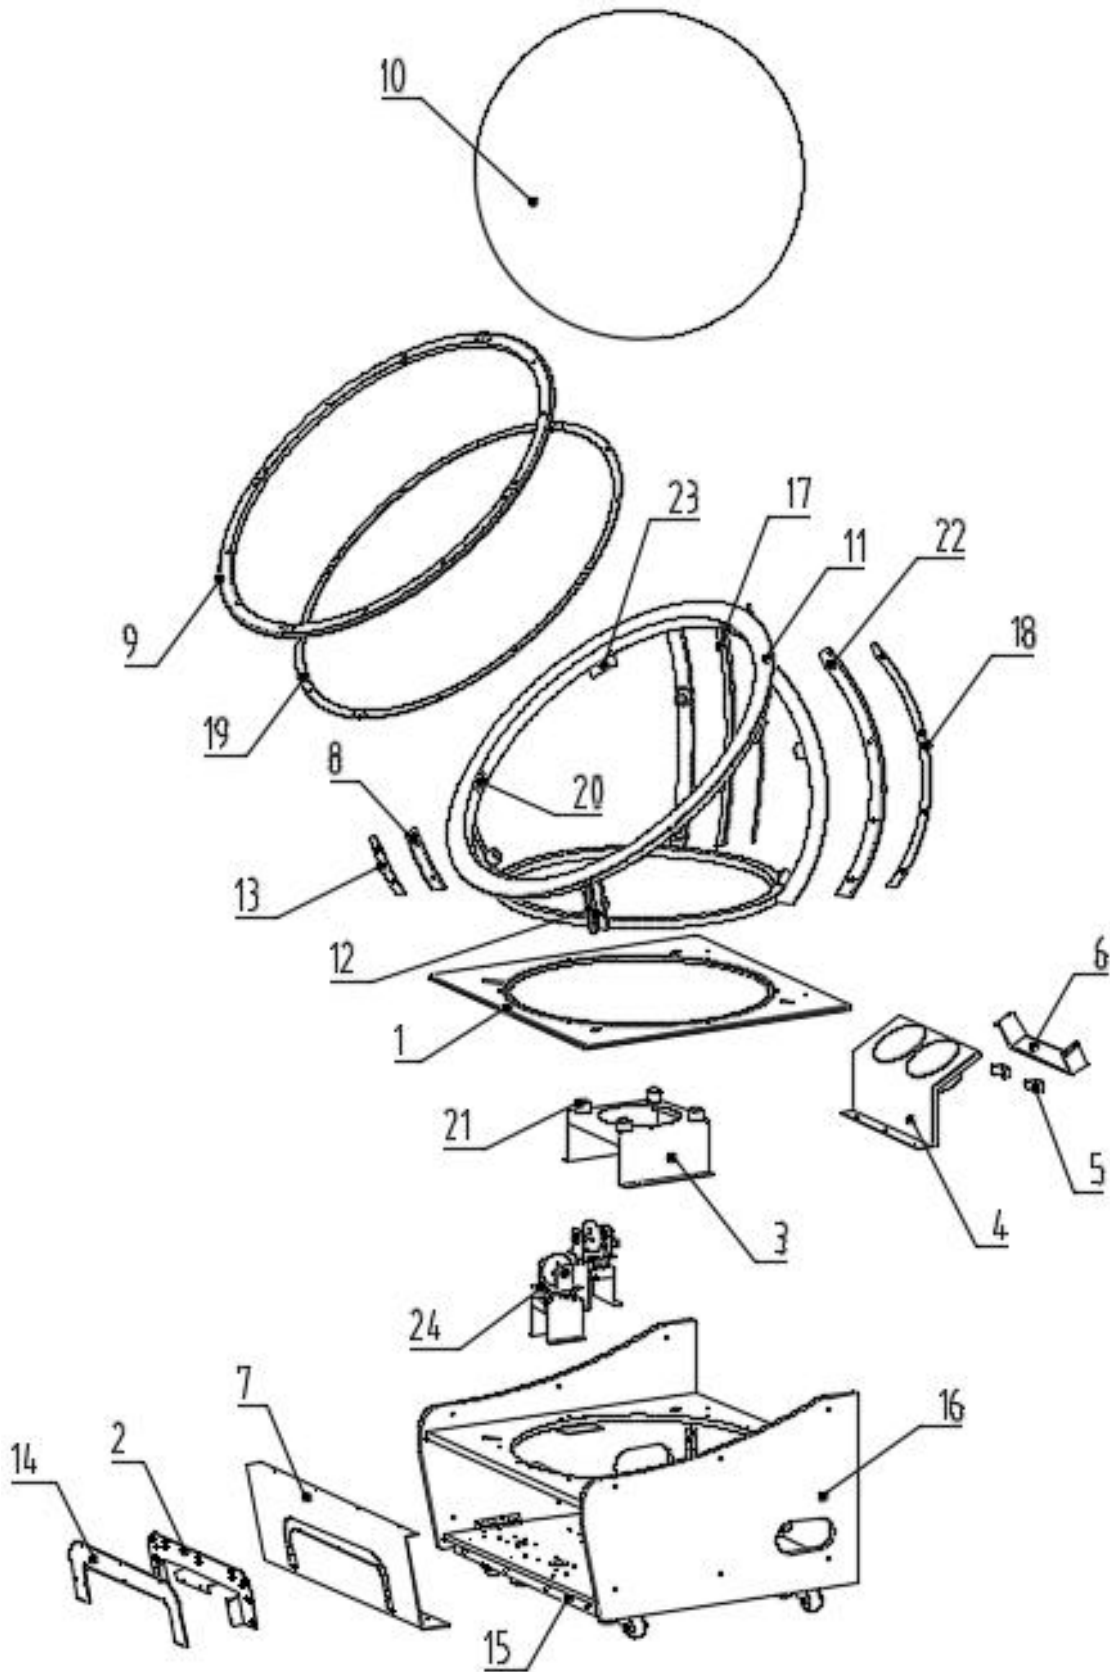


No.	Part No.	Code No.	Name	Version	Qty
1	S203-0305-00	206.1.2513.012	Support base plastic	V1.1	1X2
2	S203-0306-00	206.1.2513.019	Ball frame front light plastic PVC	V1.2	1X2
3	S203-0307-00	202.1.2513.026	Universal ball support bracket	V1.1	1X2
4	S203-0309-00	202.1.2513.029	Down light mount plate	V1.1	1X2
5	S203-0310-00	202.1.2513.031	Down light power press plate	V1.1	2X2
6	S203-0311-00	202.1.2513.030	Down light back plate	V1.1	1X2
7	S203-0312-00	202.1.2513.020	Ball frame front plate	V1.1	1X2
8	S203-0313-00	206.1.2513.016	Support L back plastic	V1.1	2X2
9	S203-0314-00	206.1.2513.013	Support up plastic	V1.1	4X2
10	S203-0315-00	206.1.2513.001	Ball	V1.1	1X2
11	S203-0316-00	202.1.2513.013	Ball support round plate	V1.1	1X2
12	S203-0317-00	206.1.2513.017	Support R back plastic	V1.1	4X2
13	S203-0318-00	202.1.2513.025	Support back press plate	V1.1	2X2
14	S203-0319-00	206.1.2513.018	Frame light plastic	V1.1	1X2
15	S203-0320-00	202.1.2513.021	Base bracket connect plate	V1.1	1X2
16	S203-0400-00	299.1.2513.013	Ball Wooden Assembly	V1.1	1X2
17	S203-0321-00	206.1.2513.014	Support L front plastic	V1.1	1X2
18	S203-0322-00	202.1.2513.023	Support front press plate	V1.1	2X2
19	S203-0323-00	202.1.2513.024	Support up press plate	V1.1	4X2
20	S203-0324-00	202.1.2513.027	Universal ball mount plate	V1.1	3X2
21	S203-0325-00	201.06.17.0024	Universal ball	V1.1	10X2
	S203-0327-00	206.1.2513.055	Universal ball black PVC	V1.1	20X2
22	S203-0326-00	206.1.2513.015	Support R front plastic	V1.1	1X2
23	S203-0328-00	206.1.2513.053	Top ball plate	V1.1	3X2
24	S203-1700-00	299.1.2513.015	Ball Wheel Assy	V1.1	2X2

9.7 Ball Wooden Assembly

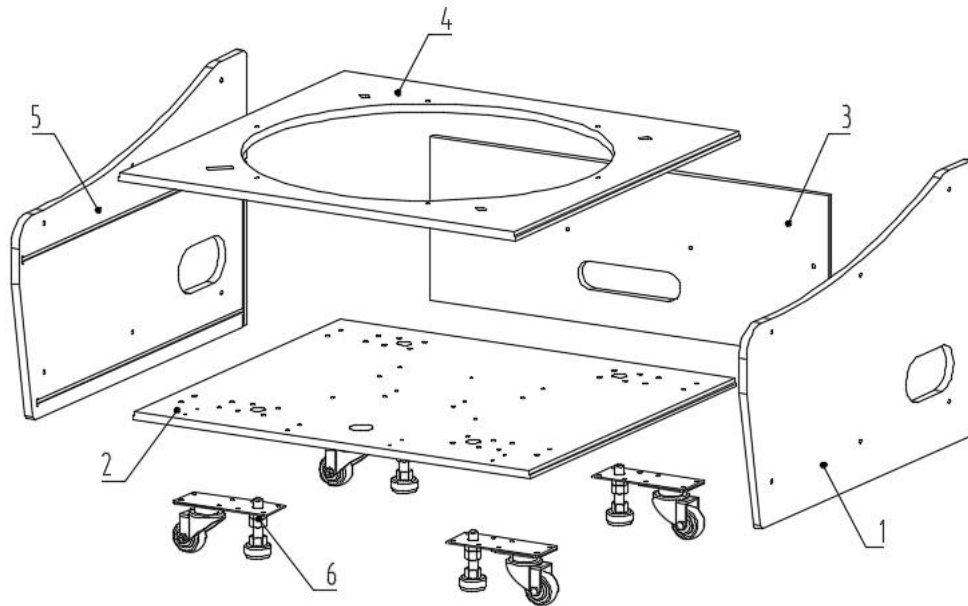


No.	Part No.	Code No.	Name	Version	Qty
1	S203-0401-00	203.1.2513.011	Ball cabinet R side board	V1.1	1X2
2	S203-0402-00	203.1.2513.014	Ball cabinet bottom board	V1.1	1X2
3	S203-0403-00	203.1.2513.012	Ball cabinet back board	V1.1	1X2
4	S203-0404-00	203.1.2513.013	Ball cabinet up board	V1.1	1X2
5	S203-0405-00	203.1.2513.010	Ball cabinet L side board	V1.1	1X2
6	S203-0406-00	2.60.00008000	2.5" leveller	V1.1	4X2
	S203-0407-00	2.60.00010000	2.5" caster plate	V1.1	4X2
	S203-0408-00	2.55.01.000047	2.5 caster	V1.1	4X2

9.8 Pedal Assembly

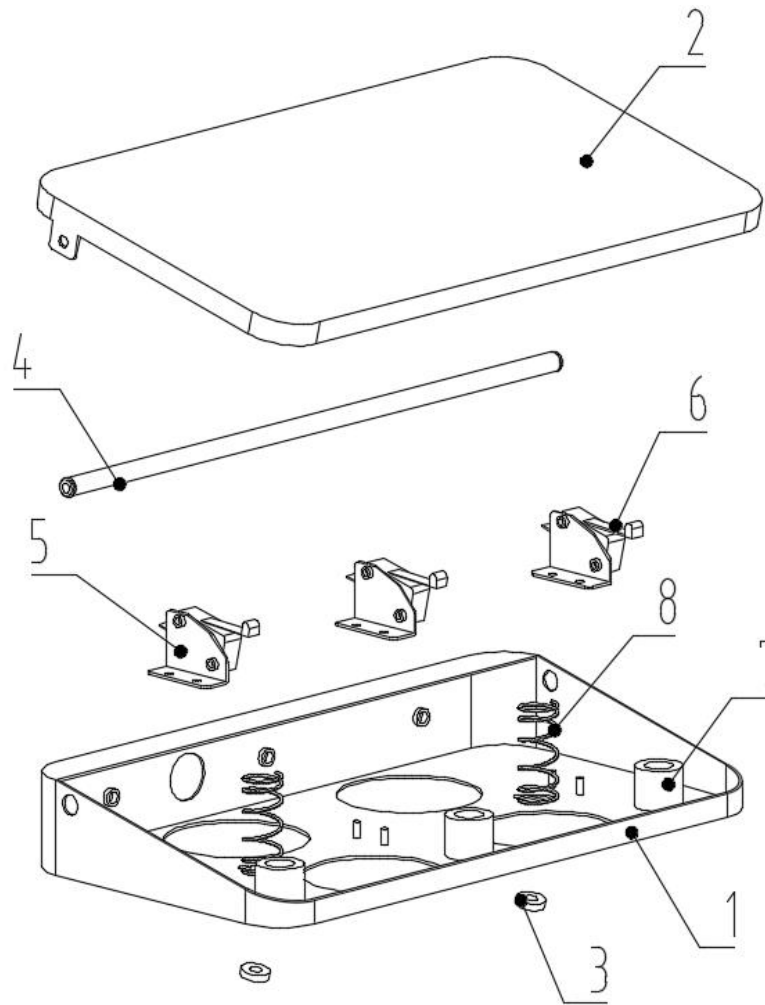


No.	Part No.	Code No.	Name	Version	Qty
1	S203-0601-00	202.1.2513.052	Pedal base bracket	V1.1	1X2
2	S203-0602-00	202.1.2513.054	Pedal cover plate	V1.1	1X2
3	S203-0603-00	206.1.2513.040	PU pin	V1.1	2X2
4	S203-0604-00	202.1.2513.053	Pedal axle	V1.1	1X2
5	S203-0605-00	202.1.2513.055	Pedal SW mount plate	V1.1	3X2
6	S203-0606-00	2.26.04.000045	Micro SW	V1.1	3X2
7	S203-0607-00	206.1.2513.041	Decompression column	V1.1	3X2
8	S203-0608-00	202.1.2513.056	Spring	V1.1	2X2

9.9 Step Base Assembly

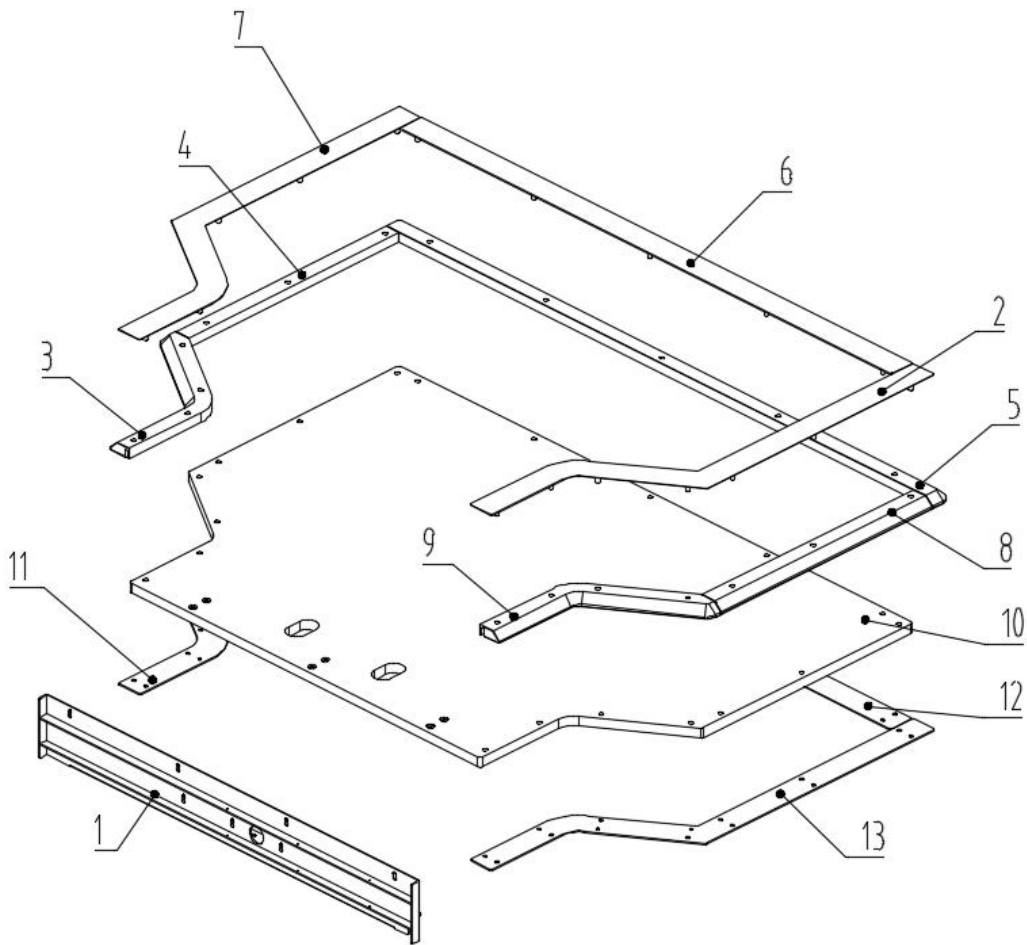


No.	Part No.	Code No.	Name	Version	Qty
1	S203-0801-00	202.1.2513.051	Base bracket front connect plate	V1.2	1X2
2	S203-0802-00	202.1.2513.048	Base bracket L connect plate	V1.1	1X2
3	S203-0803-00	206.1.2513.035	L up plastic	V1.1	1X2
4	S203-0804-00	206.1.2513.036	L plastic	V1.1	1X2
5	S203-0805-00	206.1.2513.032	Bottom plastic	V1.1	1X2
6	S203-0806-00	202.1.2513.049	Bottom connect plate	V1.1	1X2
7	S203-0807-00	202.1.2513.050	R connect plate	V1.1	1X2
8	S203-0808-00	206.1.2513.034	R plastic	V1.1	1X2
9	S203-0809-00	206.1.2513.033	Up R plastic	V1.1	1X2
10	S203-0810-00	203.1.2513.019	Step base wooden board	V1.1	1X2
11	S203-0811-00	206.1.2513.038	R press plate	V1.1	1X2
12	S203-0812-00	206.1.2513.037	Bottom press plate	V1.1	1X2
13	S203-0813-00	206.1.2513.039	L press plate	V1.1	1X2

9.10 Coin Box Lane Assembly

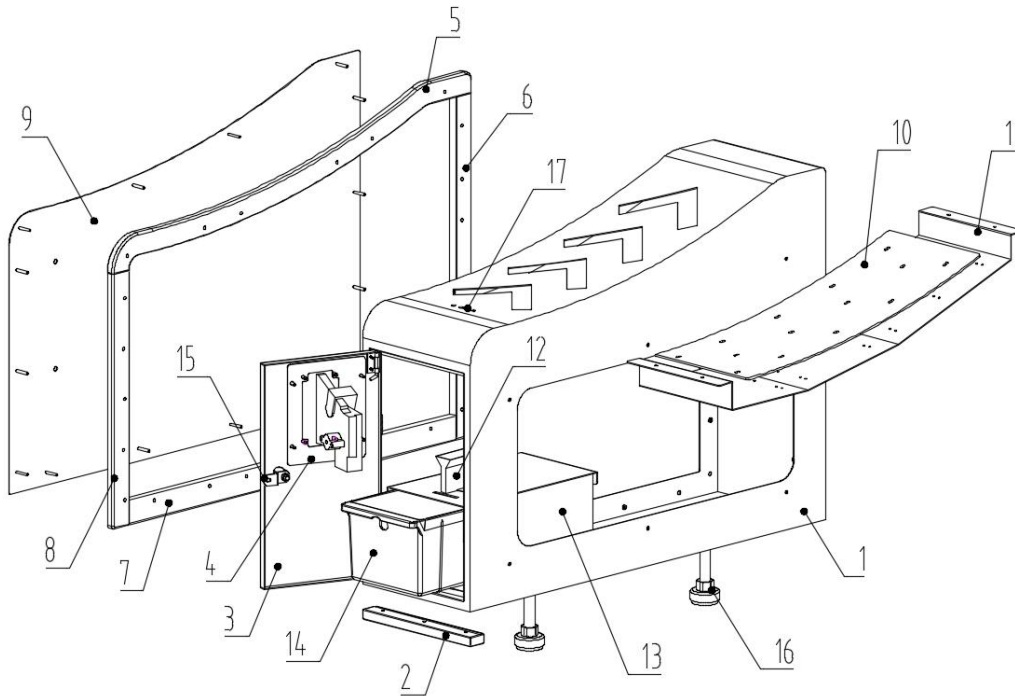


No.	Part No.	Code No.	Name	Version	Qty
1	S203-0701-00	202.1.2513.032	Coin box lane bracket	V1.1	1X2
2	S203-0702-00	206.1.2513.023	Coin box lane front plastic	V1.1	1X2
3	S203-0703-00	202.1.2513.033	Coin door plate	V1.1	1X2
4	S203-0704-00	202.1.2513.037	Coin mech. mount plate	V1.1	1X2
	S203-0705-00	202.1.2513.038	DBV mount plate	V1.1	1X2
5	S203-0706-00	206.1.2513.020	Coin box lane up plastic	V1.1	1X2
6	S203-0707-00	206.1.2513.021	Coin box lane R plastic	V1.1	1X2
7	S203-0708-00	206.1.2513.024	Coin box lane bottom plastic	V1.1	1X2
8	S203-0709-00	206.1.2513.022	Coin box lane L plastic	V1.1	1X2
9	S203-0710-00	202.1.2513.036	Coin box lane side plate	V1.1	1X2
10	S203-0711-00	206.1.2513.025	Up light plastic	V1.1	1X2
11	S203-0712-00	206.1.2513.026	Up light PVC	V1.1	1X2
12	S203-0713-00	202.1.2513.035	Coin chute	V1.1	1X2
13	S203-0714-00	202.1.2513.034	Coin outer box	V1.1	1X2
14	S203-0715-00	2.60.00062000	Coin inner box	V1.1	1X2
	S203-0716-00	2.53.00172001	171B lock	V1.1	1X2
15	S203-0513-00	2.53.00171001	171A lock	V1.1	1X2
16	S203-0406-00	2.60.00008000	2.5" leveller	V1.1	2X2
17	S203-0717-00	206.2.2318.031	Card reader blank plastic	V1.1	1X2

9.11 Ticket Box Lane Assembly

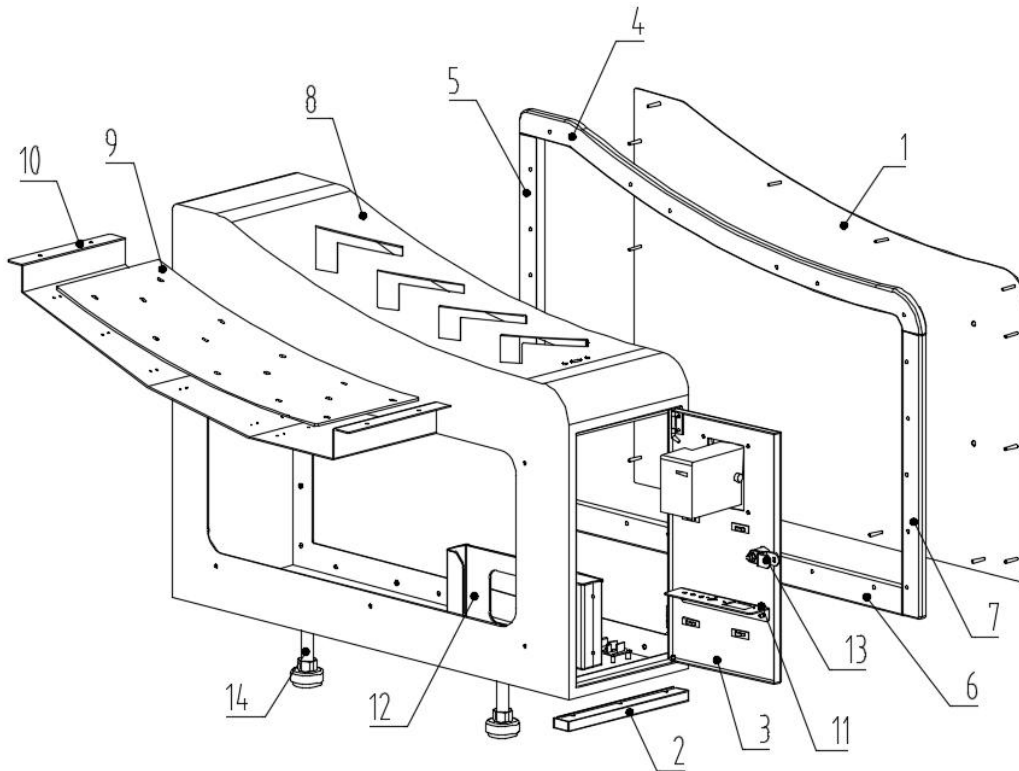


No.	Part No.	Code No.	Name	Version	Qty
1	S203-0501-00	202.1.2513.042	Ticket box lane side plate	V1.1	1X2
2	S203-0502-00	206.1.2513.030	Ticket box lane front plastic	V1.1	1X2
3	S203-0503-00	202.1.2513.040	Ticket door plate	V1.1	1X2
4	S203-0504-00	206.1.2513.027	Ticket box lane up plastic	V1.1	1X2
5	S203-0505-00	206.1.2513.028	Ticket box lane L plastic	V1.1	1X2
6	S203-0506-00	206.1.2513.024	Coin box lane bottom plastic	V1.1	1X2
7	S203-0507-00	206.1.2513.029	Ticket box lane R plastic	V1.1	1X2
8	S203-0508-00	202.1.2513.039	Ticket box lane bracket	V1.1	1X2
9	S203-0509-00	206.1.2513.025	Up light plastic	V1.1	1X2
10	S203-0510-00	206.1.2513.026	Up light PVC	V1.1	1X2
11	S203-0511-00	202.1.2513.041	Button panel plate	V1.1	1X2
12	S203-0512-00	2.59.00025016	Ticket box	V1.1	1X2
13	S203-0513-00	2.53.00171001	171A lock	V1.1	1X2
14	S203-0406-00	2.60.00008000	2.5" leveller	V1.1	2X2

9.12 Monitor Assembly

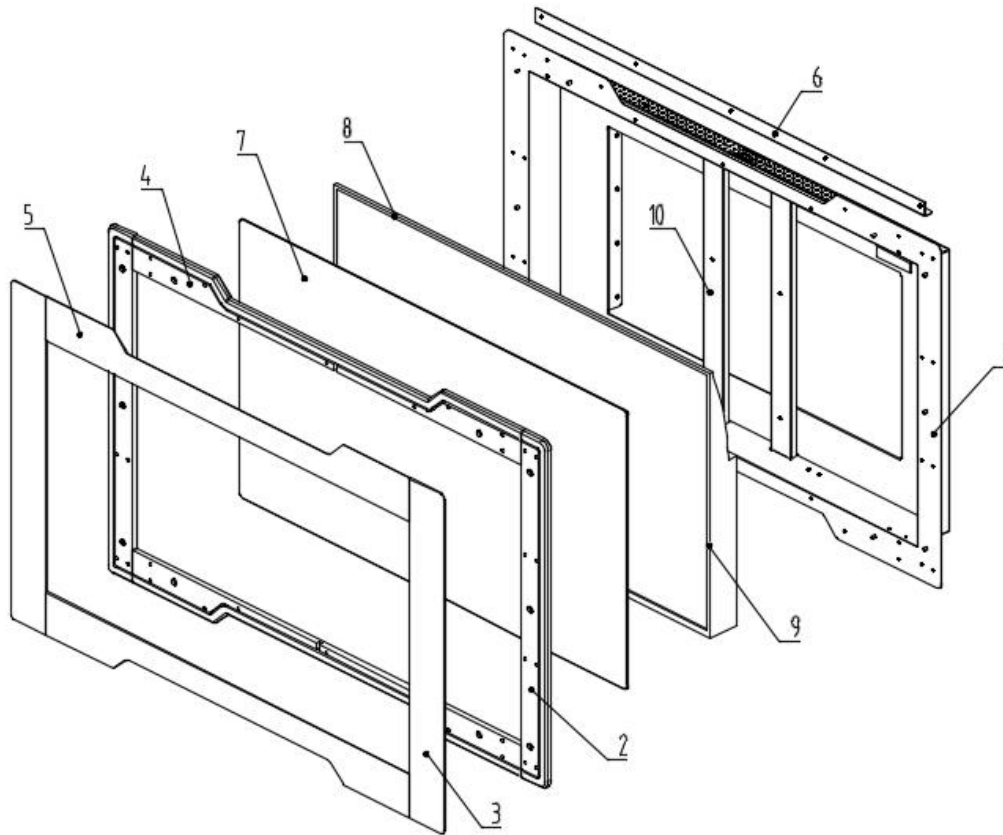


No.	Part No.	Code No.	Name	Version	Qty
1	S203-0201-00	202.1.2513.008	Monitor bracket	V1.1	1X2
2	S203-0202-00	206.1.2513.009	Monitor L&R plastic	V1.1	2X2
3	S203-0203-00	202.1.2513.009	Monitor L&R press plate	V1.1	2X2
4	S203-0204-00	206.1.2513.010	Monitor up&down plastic	V1.1	2X2
5	S203-0205-00	202.1.2513.010	Monitor up&down press plate	V1.1	2X2
6	S203-0206-00	202.1.2513.012	Decal mount plate	V1.1	1X2
7	S203-0207-00	206.1.2513.011	Monitor glass	V1.1	1X2
8	S203-0208-00	206.4.2459.015	Monitor foam(horizontal)	V1.1	2X2
9	S203-0209-00	206.4.2459.016	Monitor foam(vertical)	V1.1	2X2
10	S203-0210-00	202.1.2513.011	Monitor mount plate	V1.1	2X2

9.13 Marquee Assembly

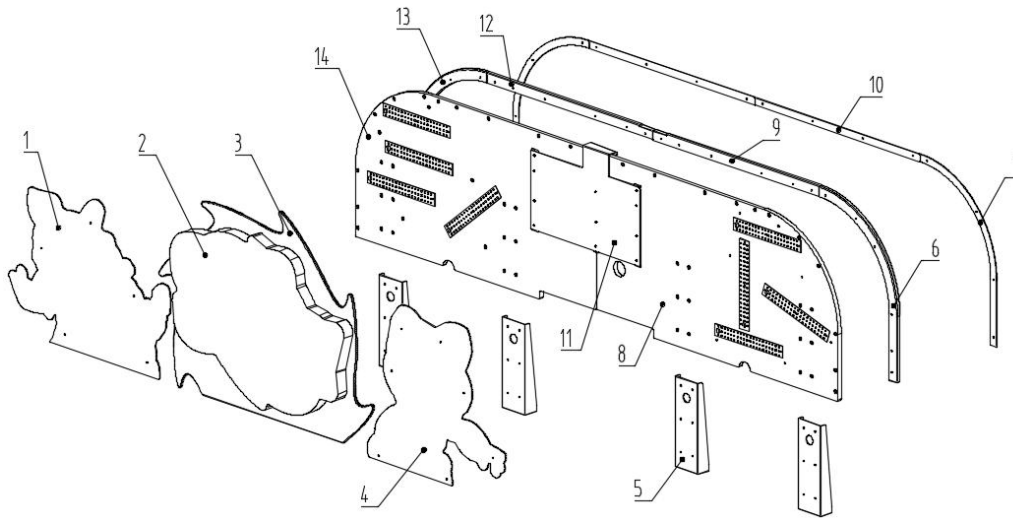


No.	Part No.	Code No.	Name	Version	Qty
1	S203-0101-00	205.1.2513.104	Marquee L plastic	V1.1	1
2	S203-0102-00	202.1.2513.060	LOGO marquee	V1.1	1
3	S203-0103-00	205.1.2513.002	LOGO marquee back plastic	V1.1	1
4	S203-0104-00	205.1.2513.105	Marquee R plastic	V1.1	1
5	S203-0105-00	202.1.2513.058	Marquee support plate	V1.1	4
6	S203-0106-00	206.1.2513.047	Twin marquee L plastic	V1.1	1
7	S203-0107-00	206.1.2513.050	Twin marquee L&R press PVC	V1.1	2
8	S203-0108-00	203.1.2513.021	Twin marquee wooden board	V1.1	1
9	S203-0109-00	206.1.2513.049	Twin marquee up L plastic	V1.1	1
10	S203-0110-00	206.1.2513.051	Twin marquee up press PVC	V1.1	2
11	S203-0111-00	202.1.2513.059	Twin marquee mount plate	V1.1	1
12	S203-0112-00	206.1.2513.052	Twin marquee up R plastic	V1.1	1
13	S203-0113-00	206.1.2513.048	Twin marquee R plastic	V1.1	1
14	S203-0114-00	203.1.2513.022	Twin marquee wooden board R	V1.1	1

9.14 Ball Wheel Assy

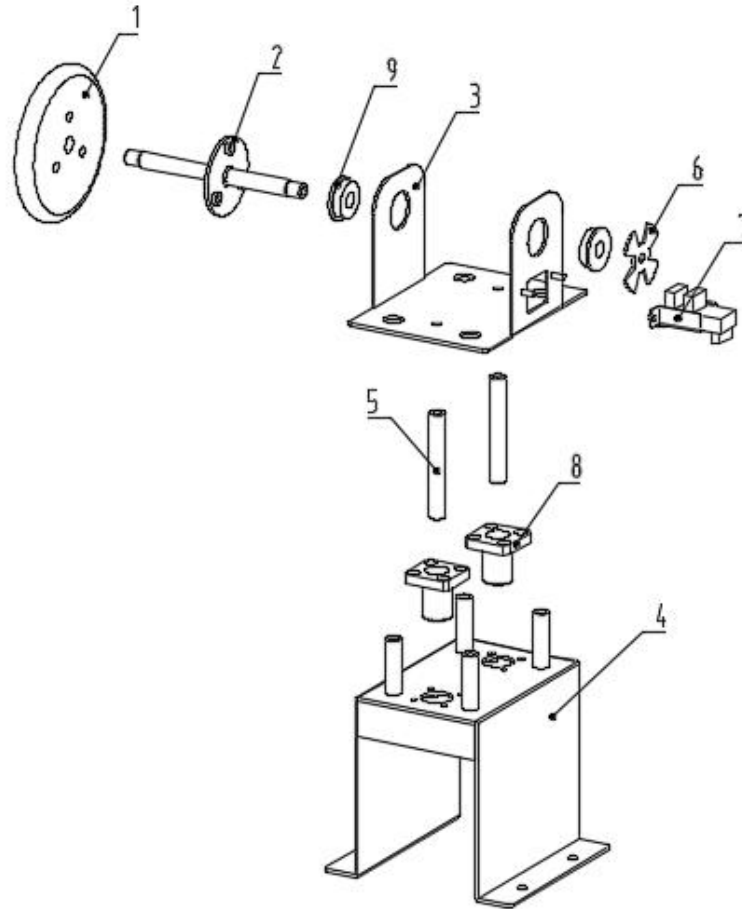


No.	Part No.	Code No.	Name	Version	Qty
1	S203-1701-00	206.1.2513.056	Large wheel	V1.1	1X4
2	S203-1702-00	202.1.2513.070	Wheel rod plate	V1.1	1X4
3	S203-1703-00	202.1.2513.071	Bearing bracket	V1.1	1X4
4	S203-1704-00	2.51.10.010056	Spring	V1.1	4X4
	S203-1709-00	202.1.2513.074	Base bracket	V1.1	1X4
5	S203-1705-00	202.1.2513.079	Guide rod	V1.1	2X4
6	S203-1706-00	202.1.2513.072	Sensor plate	V1.1	1X4
7	S203-1707-00	202.1.2513.073	Sensor mount plate	V1.1	1X4
8	S203-1708-00	201.06.11.0303	Straight bearing	V1.1	2X4
9	S203-1710-00	201.06.000024	Bearing(F698ZZ)	V1.1	2X4

9.15 Decals

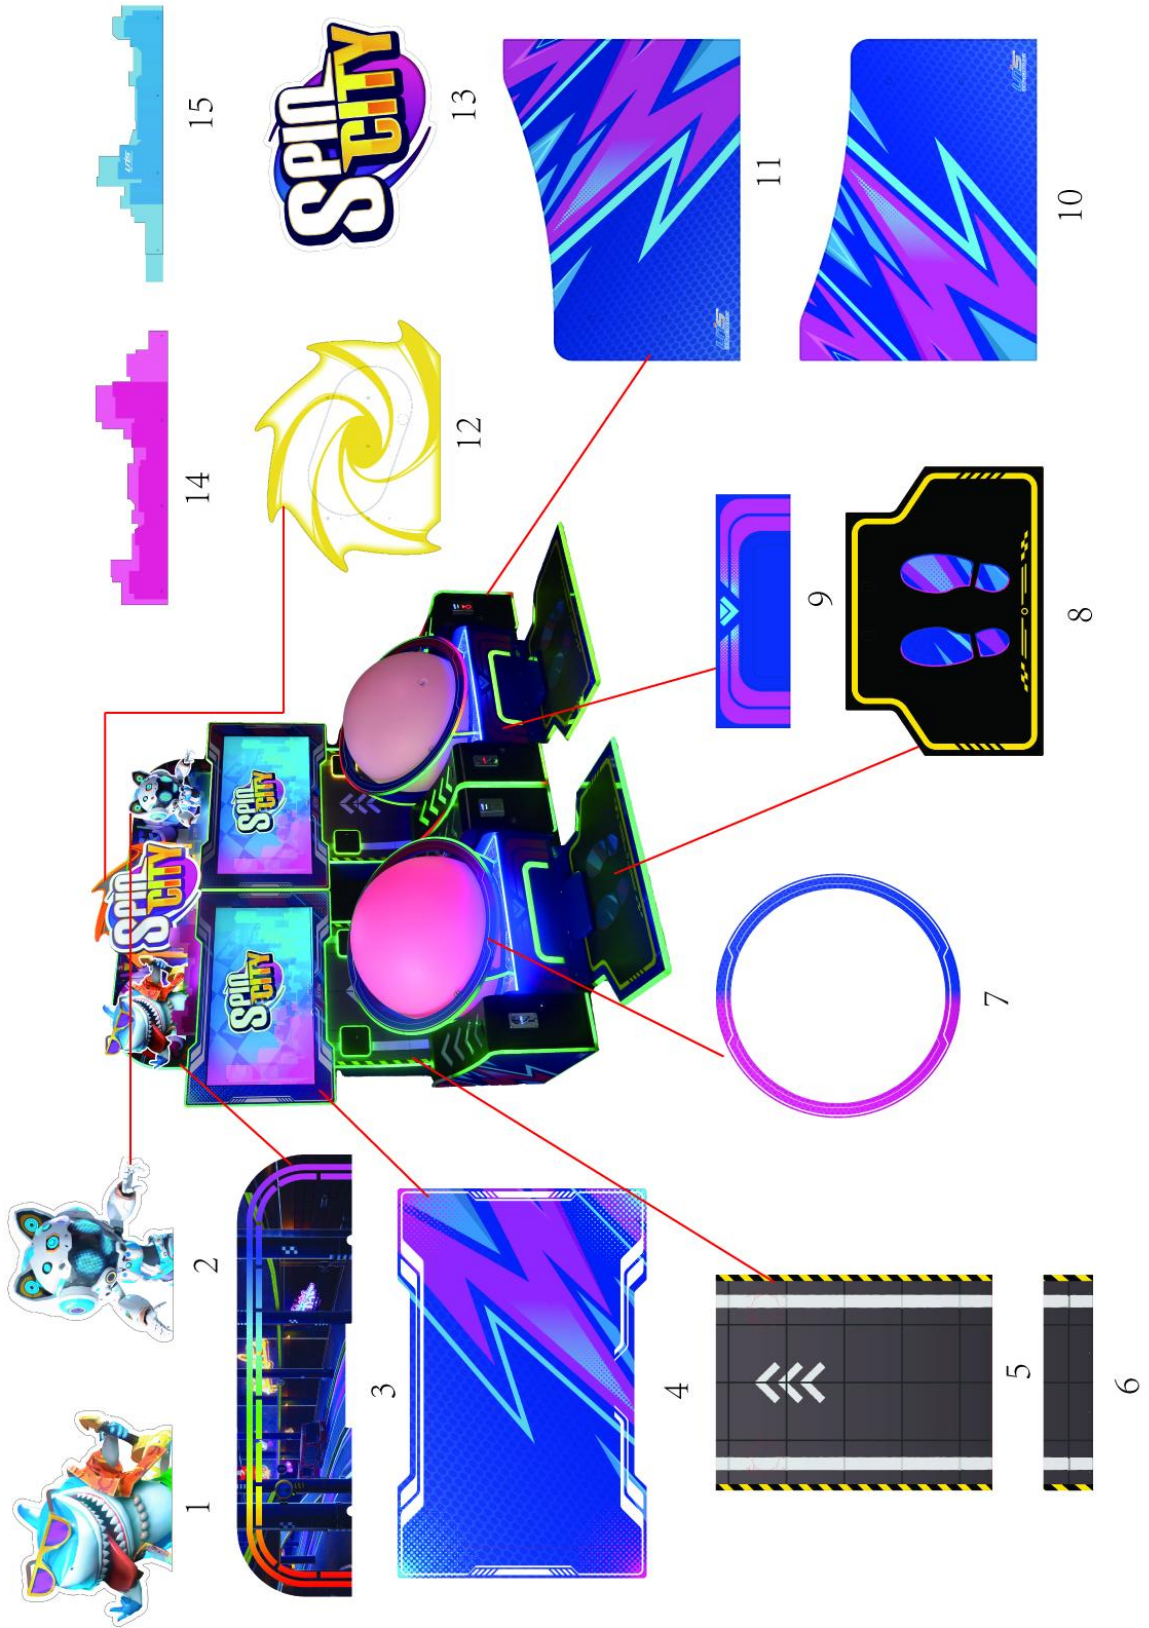


No.	Part No.	Code No.	Name	Version	Qty
1	S203-0101-00	205.1.2513.104	Marquee L plastic	V1.1	1
2	S203-0104-00	205.1.2513.105	Marquee R plastic	V1.1	1
3	S203-1530-00	205.1.2513.103	Twin marquee back PVC	V1.1	1
4	S203-1508-00	205.1.2513.007	Monitor decal	V1.1	2
5	S203-1509-00	205.1.2513.008	Monitor bottom decal	V1.1	2
6	S203-1510-00	205.1.2513.011	Mid connect decal	V1.1	2
7	S203-1505-00	205.1.2513.004	Ball frame round decal	V1.1	2
8	S203-1506-00	205.1.2513.005	Step base decal	V1.1	2
9	S203-1507-00	205.1.2513.006	Front door bottom decal	V1.1	2
10	S203-1504-00	205.1.2513.010	L side decal	V1.1	2
11	S203-1503-00	205.1.2513.009	R side decal	V1.1	2
12	S203-0103-00	205.1.2513.002	LOGO marquee back plastic	V1.1	1
13	S203-0102-00	202.1.2513.060	LOGO marquee	V1.1	1
14	S203-0001-00	205.1.2513.101	L top decal	V1.1	1
15	S203-0002-00	205.1.2513.102	R top decal	V1.1	1

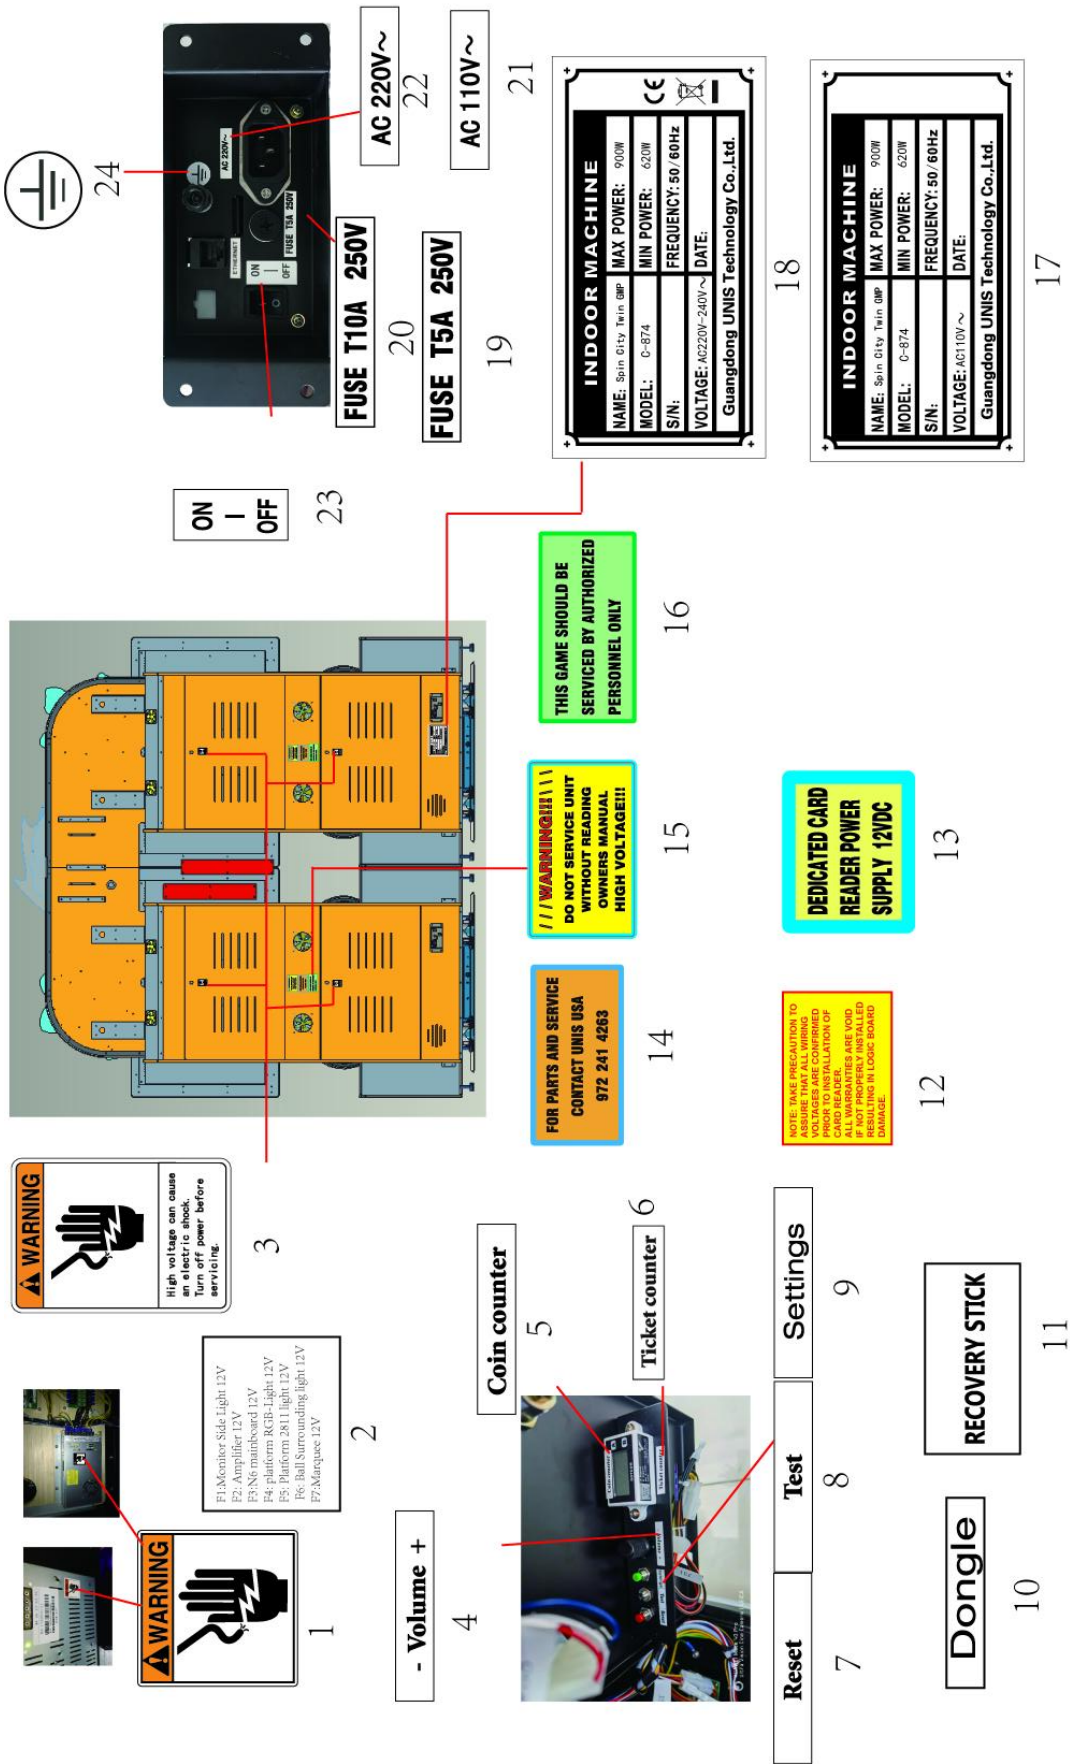


No.	Part No.	Code No.	Name	Version	Qty
1	S203-1514-00	2.56.00.000036A	High voltage label(s)		4
2	S203-1513-00	205.1.2513.303	Fuse board decal		2
3	S203-1515-00	2.56.00.000037/1	High voltage label(l)		4
4	S203-1531-00	2.56.00.000003	Volume decal		2
5	S203-1524-00	2.56.00.000001	Coin meter decal		2
6	S203-1525-00	2.56.00.000002	Ticket meter decal		2
7	S203-1527-00	2.56.00.000006	Reset decal		2
8	S203-1526-00	2.56.00.000005	Test decal		2
9	S203-1532-00	2.56.00.000092	Settings decal		2
10	S203-1533-00	2.56.00.000093	Dongle decal		1
11	S203-1534-00	2.66.01.100283	Recovery stick decal		1
12	S203-1535-00	2.56.00.000120	AAMA warning decal		2
13	M153-1036-00	2.56.00.000121	Adapter decal		2
14	S203-1519-00	2.56.00.000095A	Orange maintenance decal(large)		2
15	S203-1518-00	2.56.00.000067	Yellow maintenance decal		2
16	S203-1517-00	2.56.00.000042A	Green maintenance decal		2
17	S203-1511-00	205.1.2513.301	110V nameplate		1
18	S203-1512-00	205.1.2513.302	220V nameplate		1
19	S203-1529-00	2.56.00.000074	Fuse decal(T5A)		1
20	S203-1522-00	2.56.00.000077	Fuse decal(T10A)		1
21	S203-1516-00	2.56.00.000071	110V label		2
22	S203-1501-00	2.56.00.000072	220V label		2
23	S203-1523-00	2.56.00.000017	Power SW decal		2
24	S203-1502-00	2.56.00.000091	GND label		2


9.16 Electrical Components

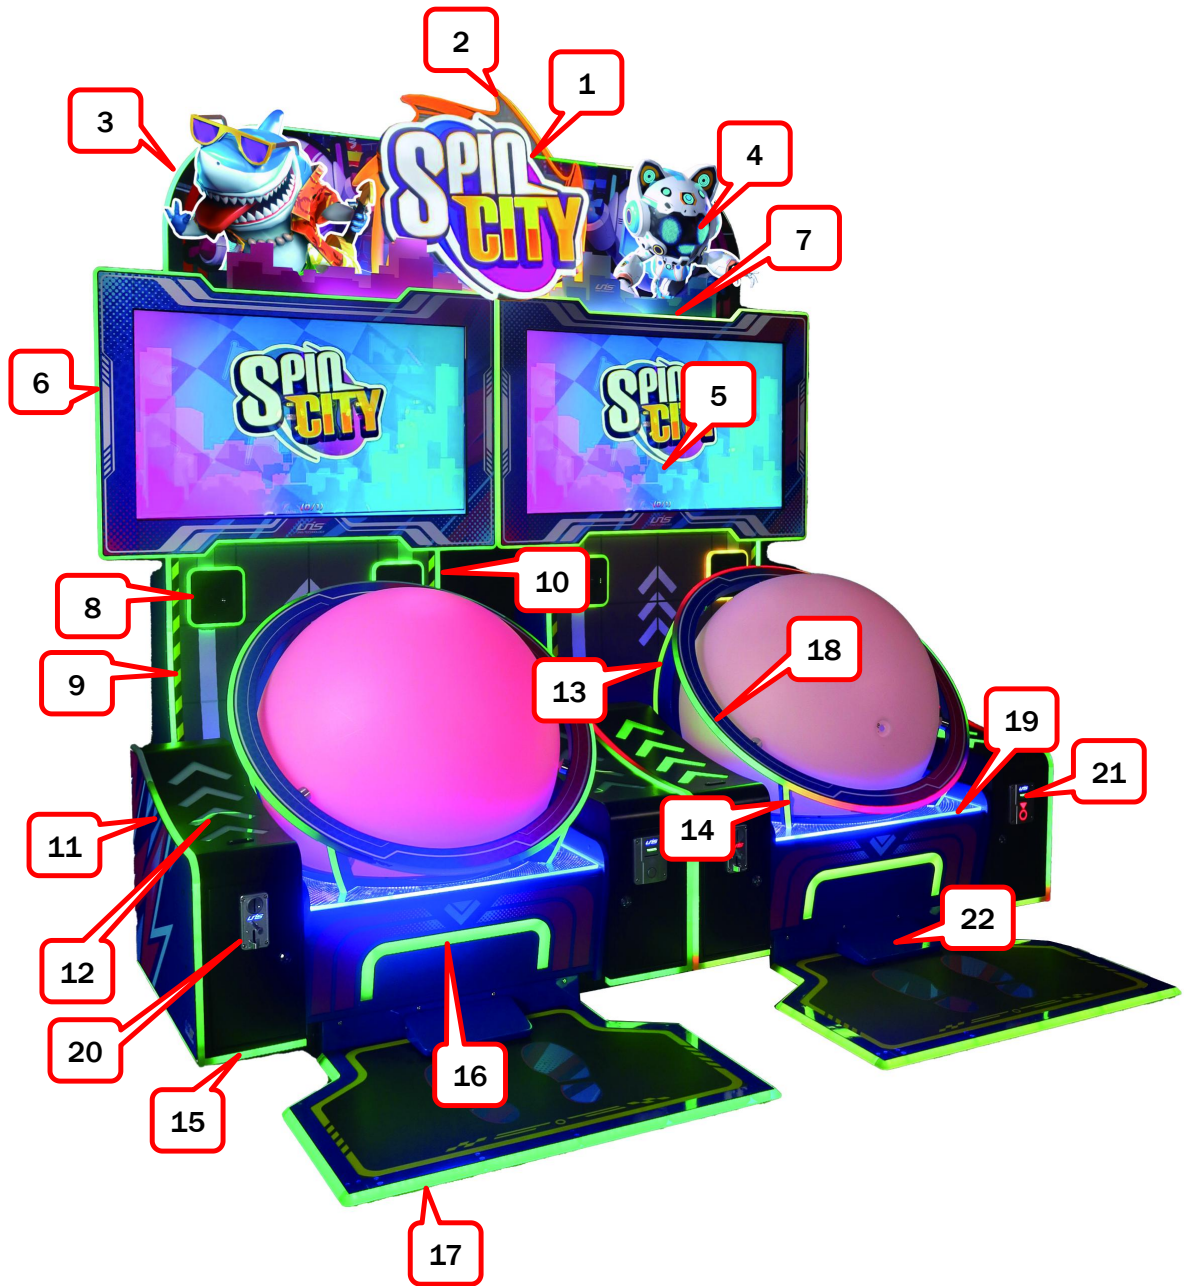


No.	Part No.	Code No.	Name	Version	Qty
1	S203-0102-00	202.1.2513.060	LOGO marquee	V1.1	1
2	S203-1347-00	2.20.02.020057	2835 yellow light strip	V1.1	(1470mm)
3	S203-1307-00	2.20.02.015021	BG5050RGB light strip	V1.1	(1400mm)
4	S203-1329-00	2.17.04.000259	300 light board	V1.1	4*2
5	S203-1321-00	2.12.01049005G	49" monitor	V1.1	1*2
6	S203-1307-00	2.20.02.015021	BG5050RGB light strip	V1.1	(4150mm)
7	S203-1320-00	2.17.04.000260	500 light board	V1.1	1*2
	S203-1329-00	2.17.04.000259	300 light board	V1.1	1*2
8	S203-1307-00	2.20.02.015021	BG5050RGB light strip	V1.1	(500mm)
	S203-1309-00	2.28.01.000085	Speaker	V1.1	1
9	S203-1312-00	2.20.02.020155	2811 light strip	V1.1	(1300mm)
10	S203-1312-00	2.20.02.020155	2811 light strip	V1.1	(1300mm)
11	S203-1312-00	2.20.02.020155	2811 light strip	V1.1	(2400mm)
12	S203-1312-00	2.20.02.020155	2811 light strip	V1.1	(1750mm)
13	S203-1307-00	2.20.02.015021	BG5050RGB light strip	V1.1	(650mm)
14	S203-1307-00	2.20.02.015021	BG5050RGB light strip	V1.1	(150mm)
15	S203-1307-00	2.20.02.015021	BG5050RGB light strip	V1.1	(200mm)
16	S203-1307-00	2.20.02.015021	BG5050RGB light strip	V1.1	(700mm)
17	S203-1307-00	2.20.02.015021	BG5050RGB light strip	V1.1	(2400mm)
18	S203-1312-00	2.20.02.020155	2811 light strip	V1.1	(2850mm)
19	S203-1341-00	2.20.02.020060	2835 blue light strip	V1.1	(2000mm)
20	S203-1337-00	2.23.06000022	Coin mechanism	V1.1	1
21	S203-1338-00	2.31.00000015	Ticket dispenser	V1.1	1
22	S203-0606-00	2.26.04.000045	Micro SW	V1.1	1

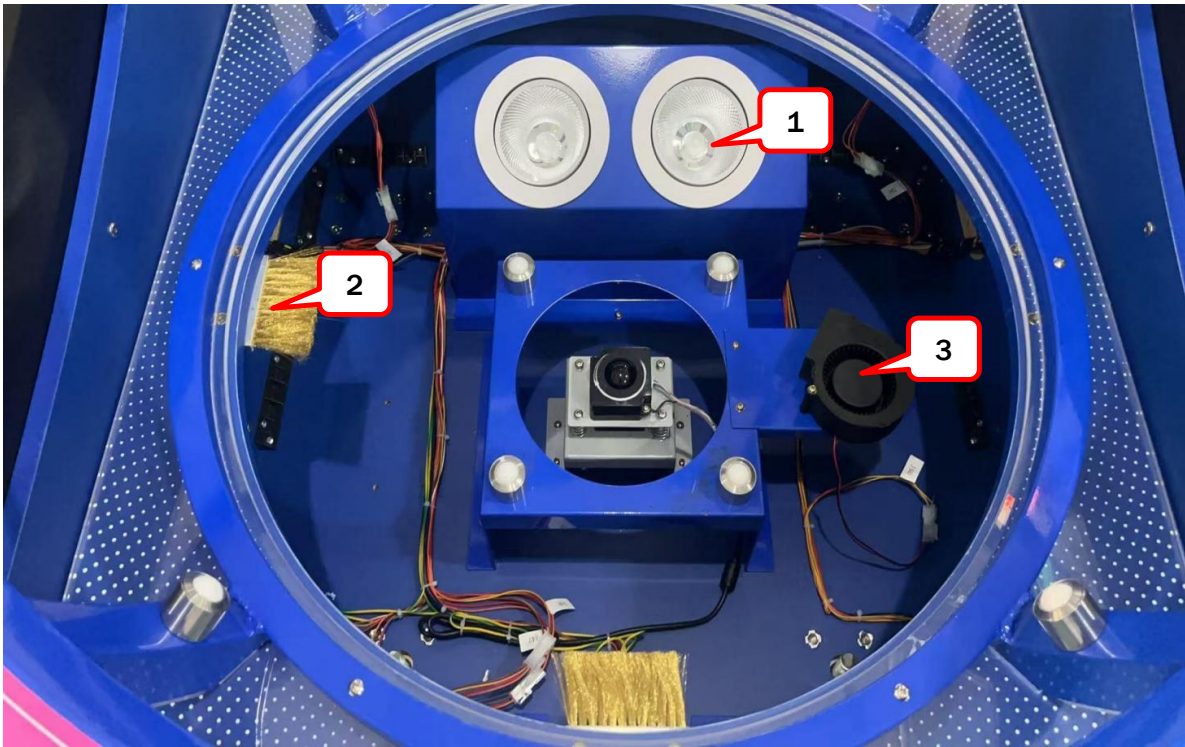


No.	Part No.	Code No.	Name	Version	Qty
1	S203-1346-00	2.20.04.000064	Spotlight	V1.1	2
2	S203-1345-00	2.34.09.000208	Conductive brush	V1.1	2
3	S203-1342-00	2.34.01.004007	Blower	V1.1	1

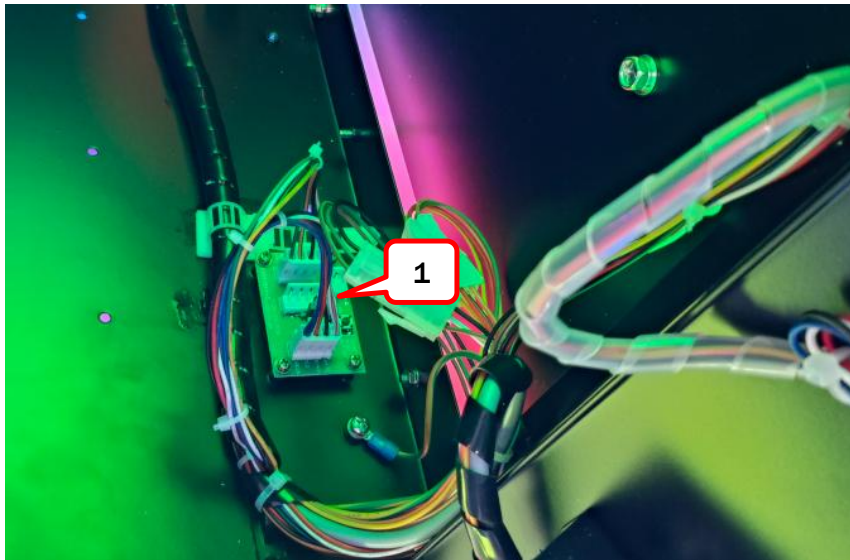


No.	Part No.	Code No.	Name	Version	Qty
1	S203-1344-00	297.9.0700002	Ticket convert board	V1.1	1

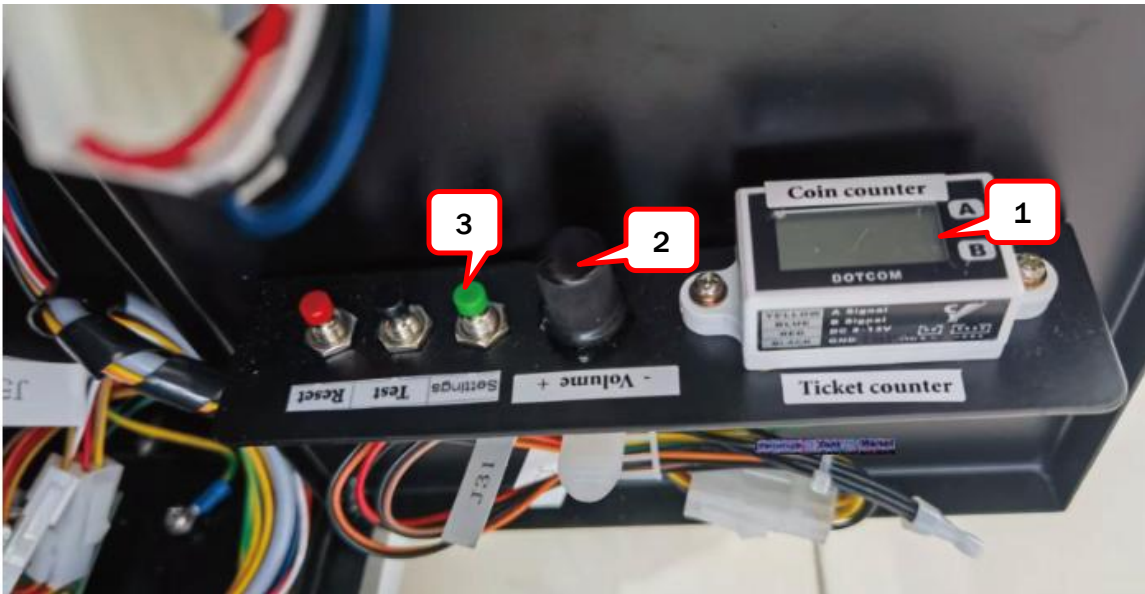


No.	Part No.	Code No.	Name	Version	Qty
1	S203-1343-00	2.30.00000022	Meter	V1.1	1
2	S203-1339-00	2.24.03.000001	Knob	V1.1	1
	S203-1340-00	297.9.1400001	Knob board	V1.1	1
3	S203-1334-00	2.24.02.030002	Button (green)	V1.1	1
	S203-1335-00	2.24.02.050001	Button (black)	V1.1	1
	S203-1336-00	2.24.02.010002	Button (red)	V1.1	1

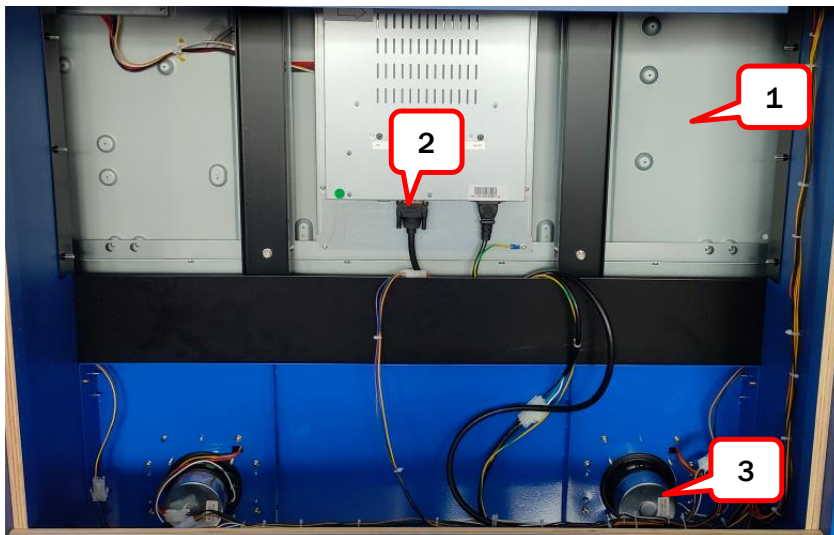


No.	Part No.	Code No.	Name	Version	Qty
1	S203-1321-00	2.12.01049005G	49" monitor	V1.1	1
2	S203-1311-00	2.33.07.020001	DVI-DVI cable	V1.1	1
3	S203-1309-00	2.28.01.000085	Speaker	V1.1	1

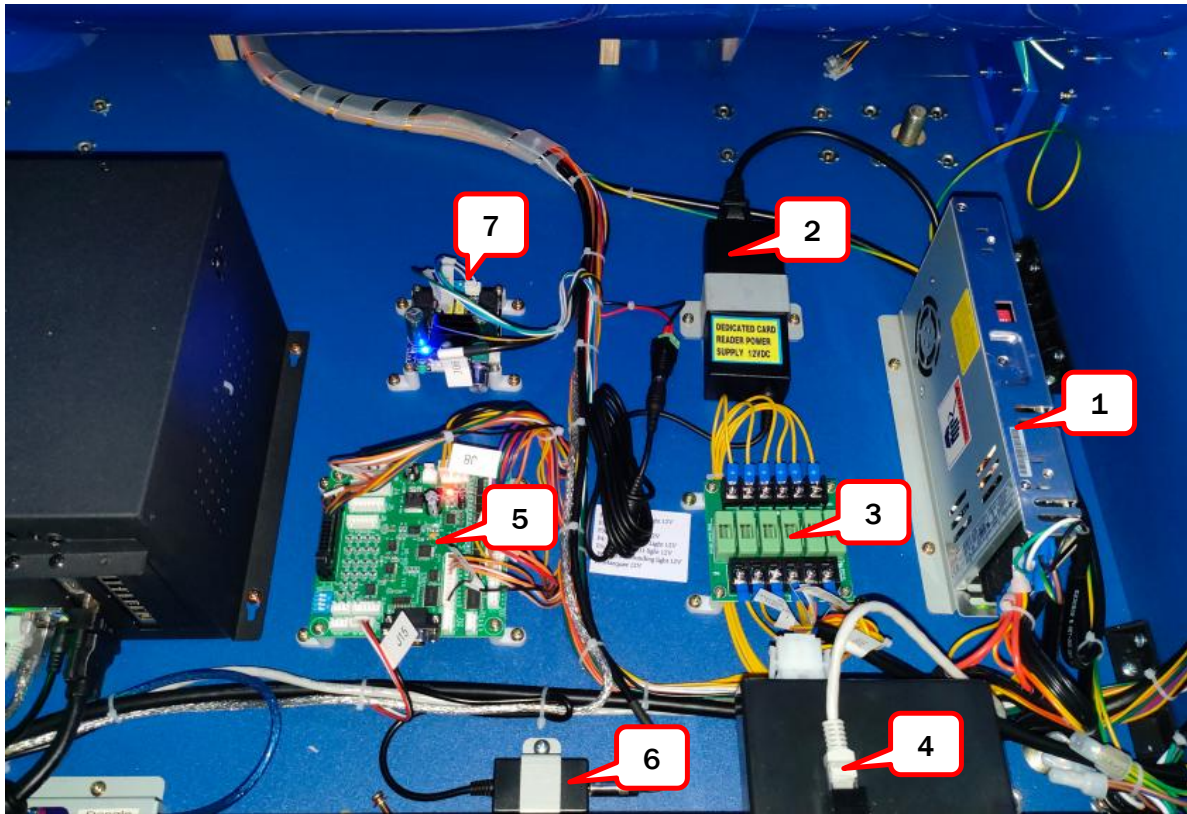

No.	Part No.	Code No.	Name	Version	Qty
1	S203-1308-00	2.16.02.000117	Power supply	V1.1	1
2	S203-1327-00	2.16.03.000076	Adapter	V1.1	1
3	S203-1301-00	2.17.14.000243A	Fuse board	V1.1	1
4	S203-1326-00	2.33.02.000013	Network cable	V1.1	1
5	S203-1310-00	297.9.2304001	N6 mainboard	V1.1	1
6	S203-1304-00	2.28.07.000003	Audio isolator	V1.1	1
7	S203-1323-00	2.28.03.010011	Amplifier	V1.1	1

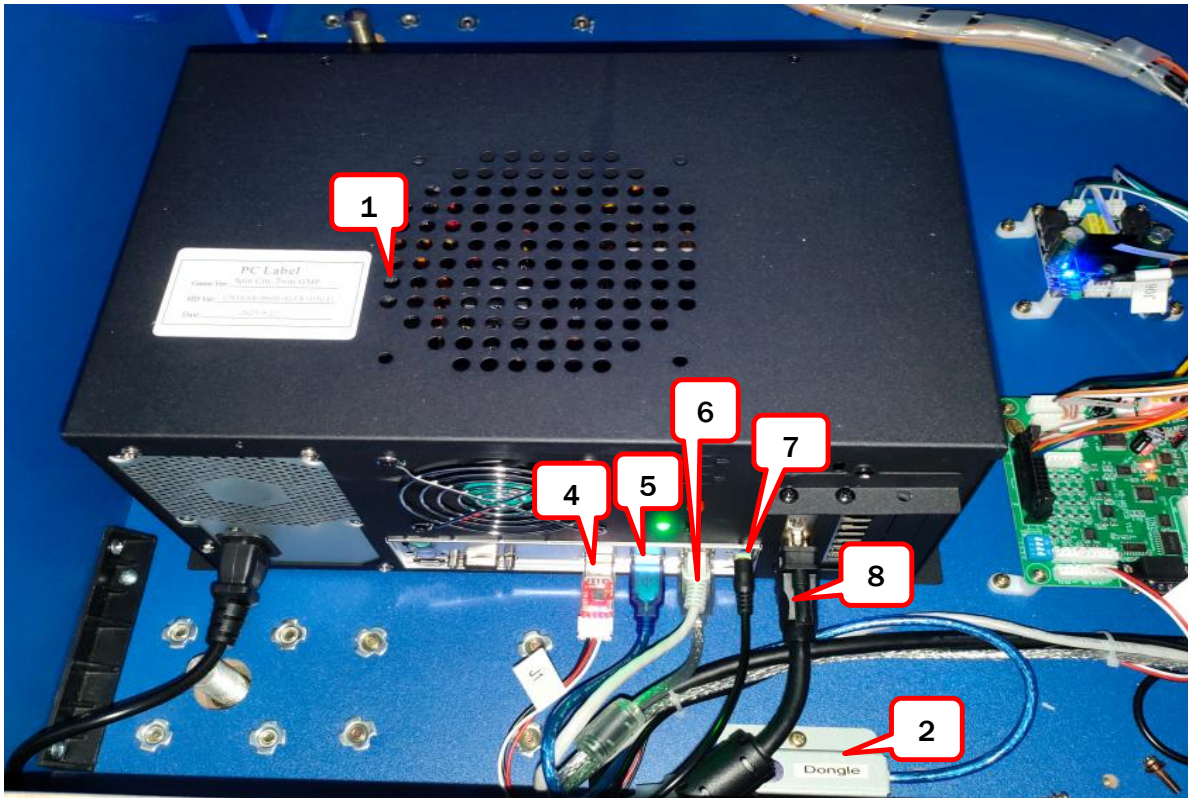

No.	Part No.	Code No.	Name	Version	Qty
1	S203-1325-00	2.11.02000057A	PC	V1.1	1
2	S203-1311-00	2.33.07.020001	DVI-DVI cable	V1.1	1
3	S203-1313-00	2.11.07.020036	Dongle	V1.1	1
4	S203-1322-00	2.14.12.020010	USB-TTL port	V1.1	1
5	S203-1306-00	2.33.04.000100	USB(0.5M)	V1.1	1
6	S203-1324-00	2.33.04.010031	USB cable(2.0)	V1.1	1
7	S203-1305-00	2.14.04.000015	Audio cable	V1.1	1

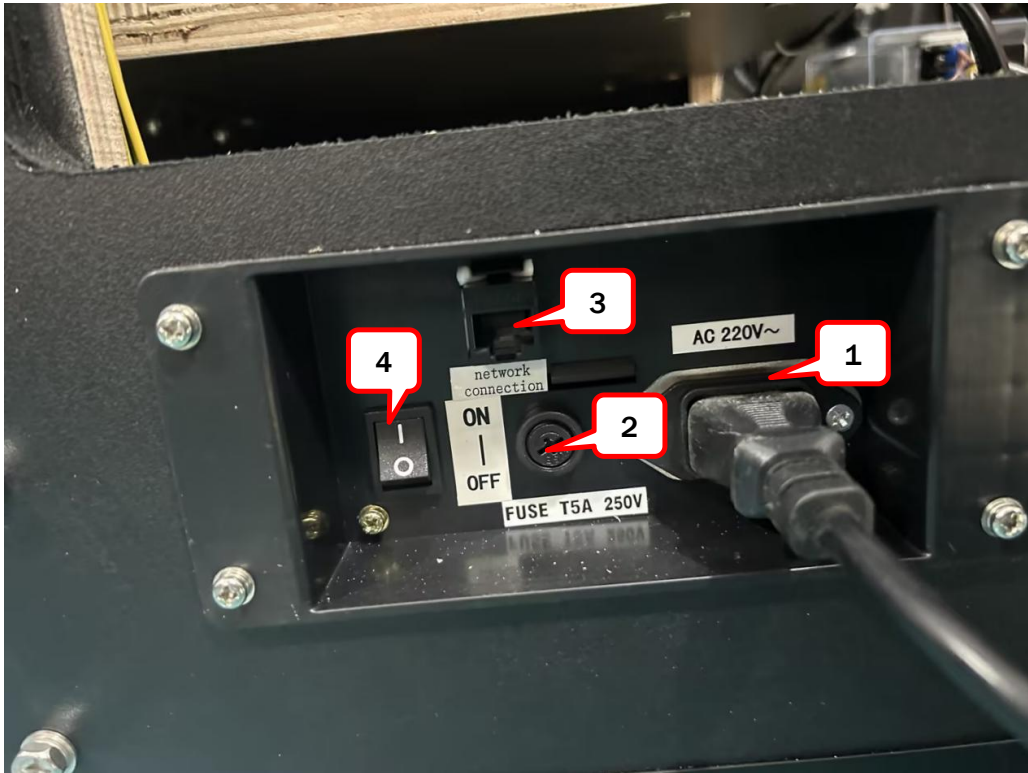

No.	Part No.	Code No.	Name	Version	Qty
1	S203-1317-00	2.32.01000001A	Filter	V1.1	1
2	S203-1315-00	2.19.02.000024	Fuse holder	V1.1	1
3	S203-1314-00	2.33.02.000001	Network port	V1.1	1
4	S203-1318-00	2.26.01.000005	Rocket SW	V1.1	1



www.unistechology.com

APPENDIX: Linking Instructions

1. Linking Installation Instructions

Step 1 Power off the machine. Install network cables to 2 machines network port.

The other end of the network cable connect to Switch as shown below.

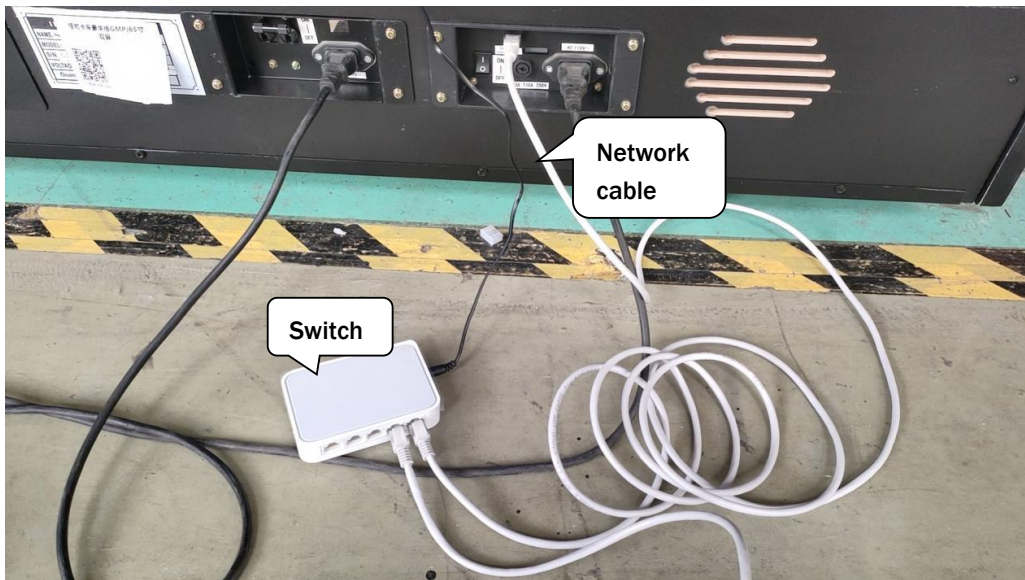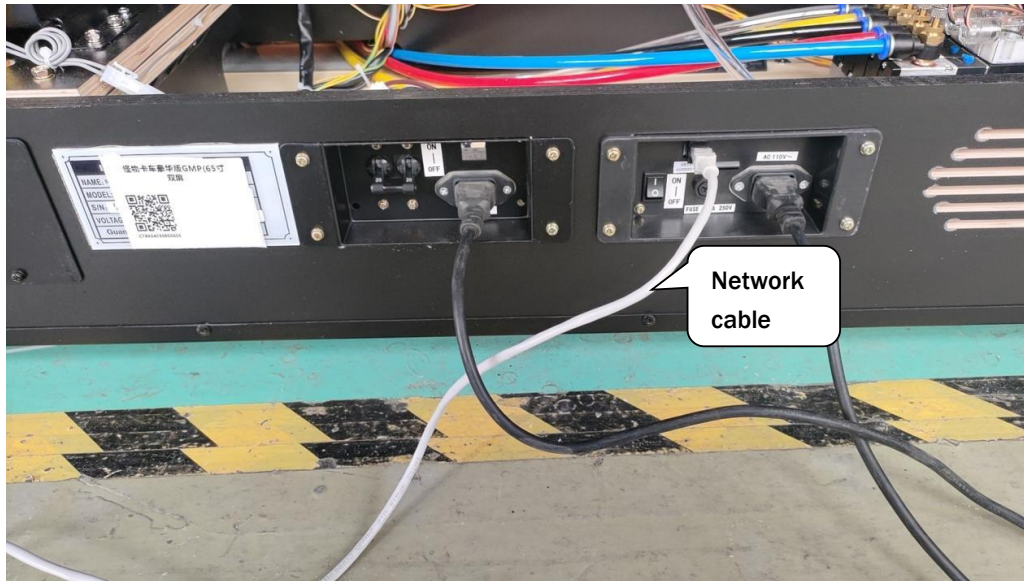

Finish!

Step 2 Enter setting menu-Linking setting. Set the below options and make sure each ID is unique.

machine ID: 1-6 correct order from left to right;



6.2.4 Linking Setting

Options	Adjustment Value	Default
Linking Mode	OFF_ON	ON
Linking Players	2/4/6	2
Machine ID	1-6	1
Linking Wait Time	5-120	30
Back&Save		
Back		