

EN	DE	FR	IT	ES
<p><b>RECHARGEABLE LED INSECT DESTROYER</b></p> <p>Before using the appliance, read the enclosed operating manual carefully and follow its directions and hints carefully. Retain the manual for future reference.</p> <p><b>PRECAUTIONS</b></p> <p><b>Only use the supplied power adapter to operate the insect destroyer.</b></p> <ul style="list-style-type: none"> <li>The appliance is intended for use in indoors only. It is not suitable for use in barns, stables, garages, or similar locations.</li> <li>Due to the risk of harming protected and useful insects, the use of the device outdoors (balcony, terrace, garden, etc.) is prohibited.</li> <li>If used outdoors, national animal and insect protection laws and regulations must be observed.</li> <li>The appliance is not to be used in locations where flammable vapour or explosive dust is likely to exist as small sparks are generated when insects are electrocuted.</li> <li>Make sure that your local electrical voltage and frequency are suitable for the appliance before plugging it in.</li> <li>Do not touch the high-voltage grid with fingers or metal objects while it is connected to the electrical supply.</li> <li>To avoid the risk of electric shock do not remove any fixed part or attempt to access the inside of the appliance.</li> <li>Repairs must only be carried out by the manufacturer, its service agent, or an appropriately qualified electrician.</li> <li>If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.</li> <li>Do not allow water or other liquids to get into the appliance.</li> <li>Do not expose it to rain.</li> <li><b>High voltage!</b> Keep it out of reach of children and pets.</li> <li>This appliance may be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be made by children without supervision.</li> <li>The lamps in this appliance cannot be replaced. Scrap the appliance when the lamps cease to operate.</li> </ul>	<p><b>LED INSEKTENVERNICHTER</b></p> <p><b>WIEDERAUFLADBAR</b></p> <p>Bitte lesen Sie vor Inbetriebnahme diese Bedienungsanleitung und befolgen Sie die hier aufgeführten Hinweise und Tipps. Bewahren Sie diese Anleitung stets gut auf, damit Sie jederzeit darauf zugreifen können. Nur so gewährleisten Sie einen optimalen Einsatz des Insektvernichters.</p> <p><b>WAHNSINNSWEISE</b></p> <p><b>Nur das mitgelieferte Netzteil zum Betrieb des Insektvernichters verwenden.</b></p> <ul style="list-style-type: none"> <li>Das Gerät darf nur in geschlossenen Räumen verwendet werden. Es ist nicht zur Verwendung in Scheunen, Ställen, Garagen oder ähnlichen Orten geeignet.</li> <li>Nur Grund der Vermeidung von geschützten und nützlichen Insekten ist die Anwendung des Geräts im Freien (Balkon, Terrasse, Garten, etc.) verboten.</li> <li>Das Gerät darf nicht an Orten verwendet werden, wo die Verdunstung von brennbaren Dämpfen oder explosivem Staub wahrscheinlich ist, da bei der Vermischung der flackenden Funken entstehen.</li> <li>Vergewissern Sie sich, dass die Spannung und Frequenz der Stromversorgung an Ihrem Wohnort für das Gerät geeignet ist.</li> <li>Benutzen Sie dieses anschlüssen.</li> <li>Verhindern Sie niemals das Hochspannungsgitter mit dem Finger oder mit metallischen Gegenständen wenn das Gerät in Betrieb ist. Achtung! Gefahr eines elektrischen Schlags.</li> <li>Führen Sie Reparaturen nie selbst durch. Reparaturen am Gerät dürfen nur durch den Hersteller, den Kundendienst oder einen entsprechend qualifizierten Elektriker durchgeführt werden.</li> <li>Unterhalten und Veränderungen am Gerät beeinträchtigen die Produktsicherheit und führen zum Garantieverlust.</li> <li>Falls das Netzkabel beschädigt ist, muss es vom Hersteller, dem technischen Kundendienst oder von ähnlich qualifizierten Personen ersetzt werden, um Gefahren zu vermeiden.</li> <li>Achten Sie darauf, dass kein Wasser in das Gerät eindringen kann. Tauchen Sie das Gerät niemals in Wasser oder andere Flüssigkeiten. Setzen sie es niemals dem Regen aus.</li> <li><b>Hochspannung!</b> Von Kindern und Hausieren fernhalten!</li> <li>Dieses Gerät kann von Kindern ab 8 Jahren und darüber sowie von Personen mit verringerten physischen, sensorischen oder mentalen Fähigkeiten oder Mangel an Erfahrung und Wissen benutzt werden, wenn sie beaufsichtigt oder bezüglich des sicheren Gebrauchs des Gerätes unterwiesen wurden und die daraus resultierenden Gefahren verstehen. Kinder dürfen nicht mit dem Gerät spielen. Reinigung und Benutzerwartung dürfen nicht von Kindern ohne Beaufsichtigung durchgeführt werden.</li> <li>Die LED-Lampen können nicht ersetzt werden. Entsorgen Sie das Gerät sobald die Lampen nicht mehr funktionieren.</li> </ul>	<p><b>RECHARGEABLE LED DESTROYER OF INSECTS</b></p> <p>Read the operating manual carefully, note it and follow its directions and hints carefully. Retain the manual for future reference.</p> <p><b>PRECAUTIONS</b></p> <p><b>Only use the supplied power adapter to operate the insect destroyer.</b></p> <ul style="list-style-type: none"> <li>The appliance is intended for use in indoors only. It is not suitable for use in barns, stables, garages, or similar locations.</li> <li>Due to the risk of harming protected and useful insects, the use of the device outdoors (balcony, terrace, garden, etc.) is prohibited.</li> <li>If used outdoors, national animal and insect protection laws and regulations must be observed.</li> <li>The appliance is not to be used in locations where flammable vapour or explosive dust is likely to exist as small sparks are generated when insects are electrocuted.</li> <li>Make sure that your local electrical voltage and frequency are suitable for the appliance before plugging it in.</li> <li>Do not touch the high-voltage grid with fingers or metal objects while it is connected to the electrical supply.</li> <li>To avoid the risk of electric shock do not remove any fixed part or attempt to access the inside of the appliance.</li> <li>Repairs must only be carried out by the manufacturer, its service agent, or an appropriately qualified electrician.</li> <li>If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.</li> <li>Do not allow water or other liquids to get into the appliance.</li> <li>Do not expose it to rain.</li> <li><b>High voltage!</b> Keep it out of reach of children and pets.</li> <li>This appliance may be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be made by children without supervision.</li> <li>The lamps in this appliance cannot be replaced. Scrap the appliance when the lamps cease to operate.</li> </ul>	<p><b>RECHARGEABLE LED DESTROYER OF INSECTS</b></p> <p>Read the operating manual carefully, note it and follow its directions and hints carefully. Retain the manual for future reference.</p> <p><b>PRECAUTIONS</b></p> <p><b>Only use the supplied power adapter to operate the insect destroyer.</b></p> <ul style="list-style-type: none"> <li>The appliance is intended for use in indoors only. It is not suitable for use in barns, stables, garages, or similar locations.</li> <li>Due to the risk of harming protected and useful insects, the use of the device outdoors (balcony, terrace, garden, etc.) is prohibited.</li> <li>If used outdoors, national animal and insect protection laws and regulations must be observed.</li> <li>The appliance is not to be used in locations where flammable vapour or explosive dust is likely to exist as small sparks are generated when insects are electrocuted.</li> <li>Make sure that your local electrical voltage and frequency are suitable for the appliance before plugging it in.</li> <li>Do not touch the high-voltage grid with fingers or metal objects while it is connected to the electrical supply.</li> <li>To avoid the risk of electric shock do not remove any fixed part or attempt to access the inside of the appliance.</li> <li>Repairs must only be carried out by the manufacturer, its service agent, or an appropriately qualified electrician.</li> <li>If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.</li> <li>Do not allow water or other liquids to get into the appliance.</li> <li>Do not expose it to rain.</li> <li><b>High voltage!</b> Keep it out of reach of children and pets.</li> <li>This appliance may be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be made by children without supervision.</li> <li>The lamps in this appliance cannot be replaced. Scrap the appliance when the lamps cease to operate.</li> </ul>	<p><b>RECHARGEABLE LED DESTROYER OF INSECTS</b></p> <p>Read the operating manual carefully, note it and follow its directions and hints carefully. Retain the manual for future reference.</p> <p><b>PRECAUTIONS</b></p> <p><b>Only use the supplied power adapter to operate the insect destroyer.</b></p> <ul style="list-style-type: none"> <li>The appliance is intended for use in indoors only. It is not suitable for use in barns, stables, garages, or similar locations.</li> <li>Due to the risk of harming protected and useful insects, the use of the device outdoors (balcony, terrace, garden, etc.) is prohibited.</li> <li>If used outdoors, national animal and insect protection laws and regulations must be observed.</li> <li>The appliance is not to be used in locations where flammable vapour or explosive dust is likely to exist as small sparks are generated when insects are electrocuted.</li> <li>Make sure that your local electrical voltage and frequency are suitable for the appliance before plugging it in.</li> <li>Do not touch the high-voltage grid with fingers or metal objects while it is connected to the electrical supply.</li> <li>To avoid the risk of electric shock do not remove any fixed part or attempt to access the inside of the appliance.</li> <li>Repairs must only be carried out by the manufacturer, its service agent, or an appropriately qualified electrician.</li> <li>If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.</li> <li>Do not allow water or other liquids to get into the appliance.</li> <li>Do not expose it to rain.</li> <li><b>High voltage!</b> Keep it out of reach of children and pets.</li> <li>This appliance may be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be made by children without supervision.</li> <li>The lamps in this appliance cannot be replaced. Scrap the appliance when the lamps cease to operate.</li> </ul>
<p>Das Gerät beinhaltet einen Li-Ionen-Akku mit 3,7 V und 1000 mAh Kapazität. Für diesen gelten folgende Sicherheitsmassnahmen:</p> <p>Das Gerät nicht bei Temperaturen über 40°C betreiben und das Gerät im Betrieb keiner direkten Sonnenstrahlung aussetzen.</p> <p>Wenn der Akku defekt ist und vom Gerät nicht mehr geladen wird, keinesfalls versuchen, den Akku auszuhäuten und außerhalb des Gerätes zu laden.</p>	<p>Ce produit contient une batterie Li-Ion de 3,7 V et 1000 mAh. Lire attentivement les consignes de sécurité suivantes. Ne pas utiliser le produit à des températures supérieures à 40 degrés, ne pas exposer le produit aux rayons du soleil. Si la batterie est défectueuse ou au point de changement, ne pas tenter de la changer en dehors de l'appareil.</p>	<p>Il dispositivo contiene una batteria Li-Ion 3,7 V e 1000 mAh. Leggere attentamente le istruzioni di sicurezza. Non utilizzare il dispositivo a temperature superiori a 40°C e non esporlo alla radiazione diretta del sole. In caso di guasto della batteria, non tentare di sostituirla o di sostituirla al di fuori dell'appareil.</p>	<p>El dispositivo contiene una batería Li-Ion de 3,7 V y 1000 mAh con los siguientes niveles de seguridad. No utilice el aparato a temperaturas superiores a 40 °C y no exponga el dispositivo a la luz solar directa durante el funcionamiento. Si la batería está defectuosa y el dispositivo ya no se está cargando, no intente extraer la batería y deséchela fuera del dispositivo.</p>	

