 


Operating instructions

T PRO Taktikboard LCD

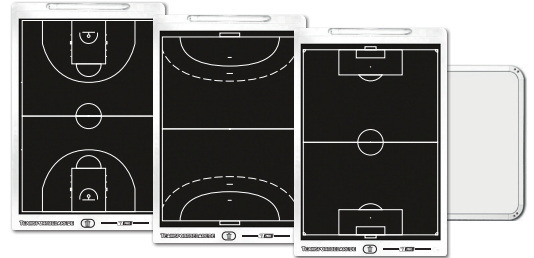

1 Important notes before you start:

Please read these operating instructions carefully.

It contains important information about the use and care of your T-PRO Tactic Board LCD.

Set contents:

 
1x T-PRO Tactic Board LCD, 1x stylus, 1x instruction manual.

In our store Teamsportbedarf.de you will find further accessories such as additional styluses and protective covers.

2

Front

Back

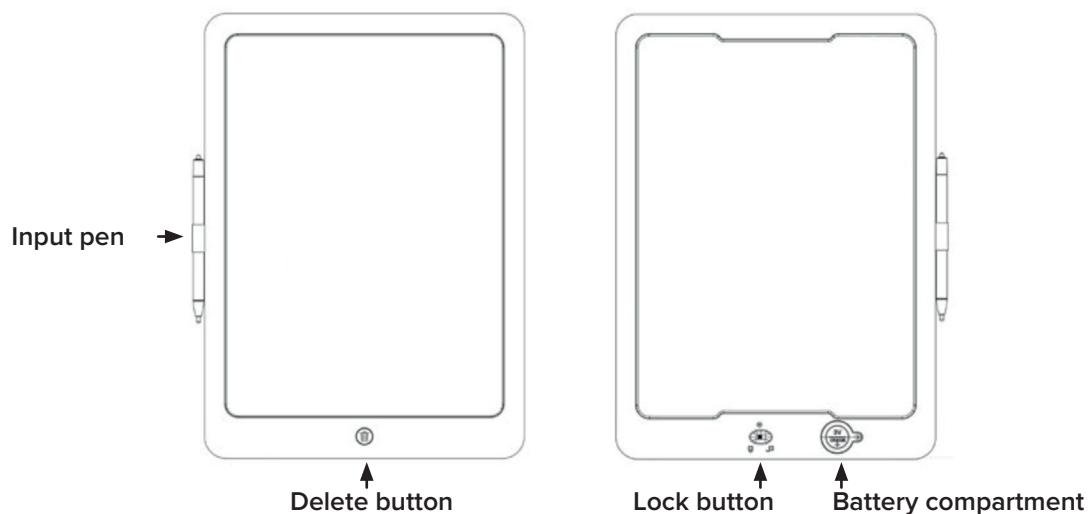

3

Batteries

Power is supplied by a type 2025 battery.

The battery lasts for about a year with regular use. The T-PRO Tactic Board LCD does not require any power when drawing. Power is only consumed when it is erased.

 
2025 replacement batteries are available everywhere in stores or online.

To replace the batteries, remove the screw next to the battery compartment with a small screwdriver. Be sure to insert the battery according to the battery orientation diagram.

The device will not work if the batteries are inserted the wrong way round!


Battery orientation:

The positive pole of the battery must touch the „+“ mark on the battery cover. The negative pole of the battery points downwards in the battery compartment.

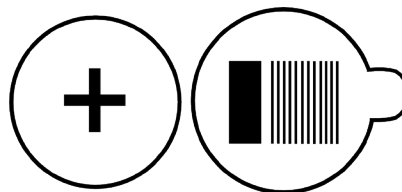

Operating instructions

 T PRO Taktikboard LCD

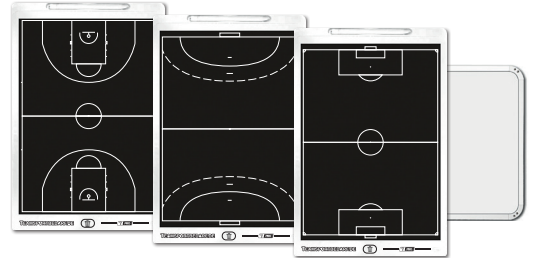

4

Correct use:

The T-PRO Tactic Board LCD, is delivered in lock mode to prevent the batteries from discharging during transportation.

Please unlock the board before use (see point 2 for the position of the lock button) The lock button has another function - see below.

To use the board, remove the stylus from the holder.

It is best to only use the stylus to draw on the screen.

Other objects may have sharp edges that could permanently damage the LCD screen.

Try not to press against the screen with your hand when drawing.

To delete all information, press the delete button with the dustbin symbol. The screen will then flash briefly. Approx. 2 seconds after pressing the delete button, the deletion process is complete.

Wait long enough for the deletion process to be completed. If you write on the board before the deletion process has been completed, nothing will be displayed.

Lock button:

You can use this to prevent drawings from being accidentally deleted (for the position of the lock button, see point 2).

The lock button is useful if you have created a drawing that you do not want to delete for a certain period of time. If the lock button is activated, you can still draw on T-PRO Tactic Board LCD. The lock button only prevents current drawings from being accidentally deleted. We recommend locking the T-PRO Tactic Board LCD when it is not in use, as locking prevents the battery from discharging prematurely by accidentally pressing the delete button.

5

Handling and care:

The T-PRO Tactic Board LCD has a liquid crystal display, so please handle it with care.

Falls or other mechanical influences can damage the display or, in the worst case, even break it.

Also make sure that the T-PRO Tactic Board LCD cannot be hit by balls or other objects, as this could lead to permanent damage.

Store the T-PRO Tactic Board LCD in a place where it is exposed to extreme temperatures. (e.g. on a very cold night or in the afternoon in the hot summer sun in a car).

The T-PRO Tactic Board LCD will remain functional for at least two hours in temperatures as low as -20 degrees, but should not be stored in such cold temperatures. If the T-PRO Tactic Board LCD stops working properly in extremely cold temperatures, stop using it and move the board to a room temperature environment.

Do not expose the T-PRO Tactic Board LCD to excessive moisture. If it starts to rain while you are using it, move it to a dry place.

6

Guarantee:

The T-PRO Tactic Board LCD is guaranteed against defects in materials and workmanship for 1 year from the date of purchase. This does not apply to damage caused by improper or inappropriate use, excessive moisture or unauthorized tampering, alterations or modifications. For support or warranty information for the T-PRO Tactic Board LCD, please email to info@teamsportbedarf.de.