



## BEDIENUNGSANLEITUNG

Bitte lesen Sie vor Gebrauch des V-MAXX basic die Bedienungsanleitung. Bewahren Sie die Unterlagen zum Nachschlagen auf und geben Sie diese bei Weitergabe des Gerätes mit.

### Lieferumfang

1 V-MAXX basic, 1 Bedienungsanleitung

Trainingsunterlagen24 GmbH  
 Geschäftsführer:  
 Sascha und Daniel Mathiebe  
 Ramstedter Str. 24  
 39326 Zielitz  
 Amtsgericht Stendal HRB 7530  
 USt-ID-Nr.: DE814960857

Hotline  
 (Mo-Fr 9-20 Uhr und Sa 9-13 Uhr)  
 Bestellung und Support :  
 Tel.: 039208 - 4951 - 00  
 Fax: 039208 - 4951 - 13  
 www.teamssportbedarf.de  
 info@teamssportbedarf.de

### Bestimmungsgemäße Verwendung

Mit dem V-MAXX basic haben Sie ein Gerät zur Geschwindigkeitsmessung von Personen, Bällen usw. erworben. Durch Anwendung der neuesten Doppler-Radar-Technologie wird sekundenschnell die Geschwindigkeit von Bewegungen berechnet und angezeigt. V-MAXX basic kann z. B. beim Sport zu mehr Motivation und Leistung bewegen.

### 1 – Einlegen der Batterien

Zum Einlegen der Batterien öffnen Sie das Batteriefach an der Unterseite des Geräts durch Lösen der Schraube.

#### Warnhinweis:

Batterien niemals wieder aufladen, nicht kurzschließen, nicht auseinander nehmen – Explosionsgefahr! Erschöpfte Batterien umgehend aus dem Gerät entfernen. Batterien bei längerer Nichtverwendung aus dem Gerät entfernen. Batterien vor starker Erwärmung schützen – erhöhte Auslaufgefahr! Keine gebrauchten und neue Batterien zusammen verwenden. Batterie und Gerätekontakte vor dem Einlegen bei Bedarf reinigen. Batterien von Kindern fernhalten, Kontakt mit Haut, Augen und Schleimhäuten vermeiden. Bei Kontakt mit Batteriesäure die betroffenen Stellen sofort mit reichlich klarem Wasser spülen und umgehend einen Arzt aufsuchen. **Keine Akkus verwenden! Auf die richtige Polung achten!**

### 2 – Funktion des V-MAXX basic

- 1 – Ein/Aus
- 2 – Recall-Taste: zum erneuten Aufrufen der vorhergehenden Geschwindigkeit
- 3 – Umschalten auf km/h
- 4 – Umschalten auf mp/h
- 5 – Kontrollleuchte
- 6 – Geschwindigkeitsanzeige

Beim Einschalten des Geräts leuchten alle Segmente der Geschwindigkeitsanzeige sowie die Kontrollleuchte der aktivierten Geschwindigkeitseinheit kurz auf. Die Kontrollleuchte blinkt danach als Hinweis, dass das Gerät „on“ ist. Bei Nichtbedienung/Nichtbenutzung schaltet sich V-MAXX basic nach 15 Min. automatisch aus.



Nimmt V-MAXX basic eine Bewegung wahr, erscheint der gemessene Wert kurz im Display. Zum erneuten Anzeigen des letzten Messwertes drücken Sie die Recall-Taste.

### 3 – Einsatzmöglichkeiten

V-MAXX basic bietet eine Vielzahl von Einsatzmöglichkeiten: Fußball, Handball, Laufen, Inline skaten, Ski, Rodeln, ... Zum Messen Ihrer Geschwindigkeit oder der Geschwindigkeit eines Gegenstandes platzieren Sie V-MAXX basic so, dass Sie bzw. der Gegenstand sich auf ihn zu bewegt. Beachten Sie, dass Personen wie beispielsweise ein Torwart oder ein Gegenstand zwischen V-MAXX basic und dem Erfassungsbereich die Messung behindern kann.

### 4 – Erfassungswinkel

Da V-MAXX basic in seinem Erfassungsbereich lediglich eine Geschwindigkeit erfassen und auswerten kann, kann es zu Fehlmessungen bzw. zu keiner Anzeige kommen, wenn sich außer dem „Messobjekt“ noch andere Bewegungen im Erfassungsbereich ereignen. V-MAXX basic kann nur gleichförmige lineare Bewegungen erfassen und auswerten. „Flatterbewegungen“ führen zur Fehlanzeige.

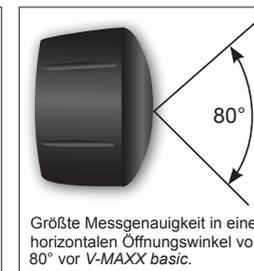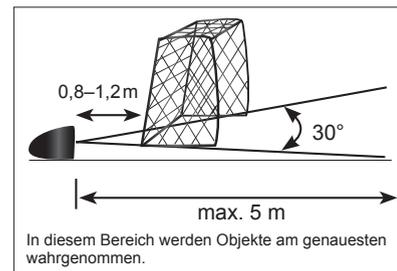

### Optimale Messergebnisse erreichen Sie durch

- die Verwendung eines Stativs (nicht im Lieferumfang enthalten)
- das Aufstellen des V-MAXX basic in einem Abstand von 0,8–1,2 m hinter dem Tor

### 5 – Technische Daten

Abmessungen:	ca. 235 x 120 x 140 mm
Gewicht:	ca. 450 g (ohne Batterien)
Messbereich:	5-199 kmh / 3-199 mph
Erfassungsbereich:	80° horizontal / 30° vertikal bis ca. 5 m Entfernung
Messgenauigkeit:	± 1,5 kmh
Betriebstemperatur:	-10°C – +50°C
Frequenz:	24,150 GHz
Batterien:	4x LR14 / Baby erforderlich (nicht im Lieferumfang enthalten)

V-MAXX basic kann mit einem handelsüblichen GS geprüften 6 Volt DC Netzteil betrieben werden (bitte die Warnhinweise des Netzteilerstellers beachten).

**Achtung!** Polung beachten:

– Technische Änderungen vorbehalten. –

### 6 – Hilfe

Problem	Ursache	Lösung
in der Anzeige erscheint L0	Batterien sind schwach	neue Batterien einlegen
keine Anzeige	Batterien leer?	neue Batterien einlegen
	außerhalb des Mess-/ Erfassungsbereichs	Mess-/ Erfassungsbereich einhalten

### 7 – Reinigung und Altgeräte

#### Reinigung

Verwenden Sie zur Reinigung des V-MAXX basic nur ein trockenes bis leicht feuchtes Tuch. Vermeiden Sie chemische Lösemittel, Sie beschädigen damit eventuell das Gerät.

#### Altgeräte

Werfen Sie Altgeräte und Verpackungsmaterial nicht in den Hausmüll. Sie können einer Wiederverwertung zugeführt werden. Weitere Auskünfte dazu erhalten Sie auch bei Ihrer örtlichen Gemeindeverwaltung.

#### Batterien

Verbrauchte Batterien gehören nicht in den Hausmüll! Sie können unentgeltlich in den örtlichen Batteriesammelstellen abgegeben werden. Sie leisten damit Ihren Beitrag zum Umweltschutz!



### Garantiehinweis

Die Garantiezeit beträgt 3 Jahre und beginnt am Tag des Kaufs. Bitte bewahren Sie den Kassenbon als Nachweis für den Kauf auf. Während der Garantiezeit können defekte V-MAXX basic ausreichend frankiert an unten stehende Serviceadresse gesandt werden. Sie erhalten dann ein neues oder repariertes Gerät kostenlos zurück. Nach Ablauf der Garantiezeit haben Sie ebenfalls die Möglichkeit, das defekte Gerät zwecks Reparatur ausreichend frankiert an die u.a. Adresse zu senden. Nach Ablauf der Garantiezeit anfallende Reparaturen sind kostenpflichtig. Ihre gesetzlichen Rechte werden durch diese Garantie nicht eingeschränkt.

### Konformitätserklärung

Die Konformitätserklärung finden Sie unter [www.eurotronic.org](http://www.eurotronic.org).



### Proper use in accordance with intended purpose

V-MAXX basic provides you with a device for measuring the speed of persons, balls, etc. It uses the latest Doppler radar technology to calculate movements within a second and display them in km/h / mph. For instance V-MAXX basic can provide more motivation and performance in sport..

### 1 – How to insert the batteries

To insert the batteries, open the battery compartment on the bottom side of the device by undoing the screw.

#### Caution:

Never recharge batteries, do not short-circuit them or take them apart – explosion hazard! Flat batteries must be removed from the device immediately. Also take the batteries out, if the device is not used for a lengthy period of time. Do not expose batteries to heat – increased risk of leakage! Do not use new and old batteries in the device at the same time. Before insertion, clean batteries and contacts as required. Keep batteries away from children and avoid contact with skin, eyes and mucous membranes. If you have come into contact with the battery acid, immediately rinse the affected areas with plenty of clean water and see a doctor straight away. **Do not use rechargeable batteries! Ensure correct polarity!**

### 2 – Functions of the V-MAXX basic

- 1 – On / off
- 2 – Recall button – For calling up the previous speed
- 3 – Switching to km/h
- 4 – Switching to mp/h
- 5 – Indicator light
- 6 – Speed indicator



When the device is switched on, all segments of the speed indicator briefly light up and the indicator light of the activated speed unit briefly comes on. Thereafter, the indicator light flashes to indicate that the device is on.

When switched on all LEDs briefly blink. If it is not being operated / used V-MAXX basic automatically switches off after 15 minutes. If V-MAXX basic detects any movement, the measured value will briefly appear in the display. To view the last reading again, press the recall key.



### 3 – Application possibilities

V-MAXX basic provides a broad range of application possibilities: Football, Handball, Running, inline skating, Skiing, sledging, ...

To measure your speed or the speed of an object position V-MAXX basic so that you or the object move(s) toward it. Please note that persons (such as a goalkeeper) or an object between V-MAXX basic and the detection area can hinder the measurement.

### 4 – Detection angle

Since V-MAXX basic can only detect and evaluate one speed in its detection area, erroneous measurements can occur or there may be no display if other movements besides the „measured object“ occur within the detection area. V-MAXX basic can only measure and evaluate even, linear movements. „Jerk movements“ lead to incorrect indication.

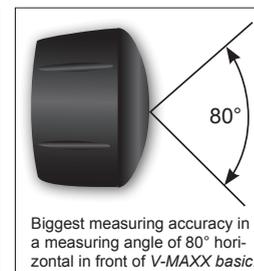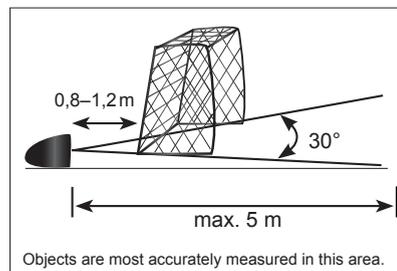

### Optimal measurement results can be achieved by

- using a tripod (not included in the scope of delivery)
- setting up the V-MAXX basic at distance of 0.8 – 1.2 m behind the goal

### 5 – Technical data

Dimensions:	ca. 235 x 120 x 140 mm
Weight:	ca. 450 g (without batteries)
Measuring range:	5-199 kmh / 3-199 mph
Detection:	80° horizontal / 30° vertical up to approx. 5 m distance
Measuring accuracy:	± 1,5 kmh
Operating temperature:	-10°C – +50°C
Frequency:	24,150 GHz
Batteries:	4x LR14 required (not included)

V-MAXX basic can be operated with a standard 6 volt DC power supply unit, tested by GS (please note the warning instructions of the power supply unit manufacturer).

**Attention!** Please ensure correct polarity: – We reserve the right to make technical changes. –

### 6 – Help

Problem	Cause	Solution
LG appears on the display	The batteries are low	Change batteries
No display	Have batteries run out?	New batteries
	Beyond the measurement area / detection area	Keep within measuring area / detection area

### 7 – Cleaning and old devices

#### Cleaning

Only use a dry to slightly damp cloth for cleaning the V-MAXX basic. Avoid using any solvents, since these may possibly damage the device.

#### Old devices

Do not throw away old devices and packaging material with the household waste. They can be recycled. You will also receive further information from your local authority administration.

#### Batteries

Used batteries should not be disposed of as normal household rubbish! They can be taken to the local battery collection points who will dispose of them free of charge. By ensuring that your batteries are disposed of correctly you can make an important contribution to the protection of the environment!



### Warranty information

The warranty period is three years, and begins on the day of purchase. Please keep the sales receipt as proof of your purchase. During the warranty period you can send defective V-MAXX basic post paid to the service address cited below. You will receive a new or repaired device in return free of charge. After the warranty period runs out you will also have the possibility of sending the device post paid to the service address cited below to be repaired. After the warranty runs out any required repairs shall be subject to a charge. Your statutory rights shall not be affected by this warranty.

### Declaration of Conformity

The declaration of conformity can be found at [www.eurotronic.org](http://www.eurotronic.org).

## OPERATING INSTRUCTIONS

Please read the operating instructions before you use the V-MAXX basic. Keep these documents for reference and include them with the device when you pass it on.

#### Scope of delivery

1 V-MAXX basic, 1 set of operating instructions

## TEAMSPORTS.COM

Trainingsunterlagen24 GmbH  
CEO:  
Sascha and Daniel Mathiebe  
Ramstedter Str. 24  
39326 Zielitz - Germany  
District court Stendal HRB 7530  
Tax UID number DE814960857

Telephone Hotline  
(from Monday till Friday  
from 10am till 6pm)  
Tel.: +44 1223 790 483  
[www.teamsports.com](http://www.teamsports.com)  
[info@teamports.com](mailto:info@teamports.com)