



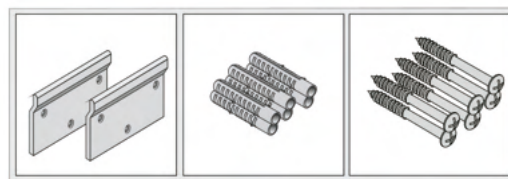

System 1
Système 1
Sistema 1


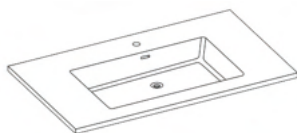


Ø 8x40mm M 4x50mm


2

Holz, wooden, bois, legno


3

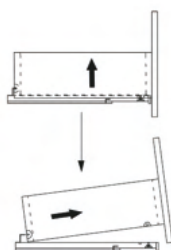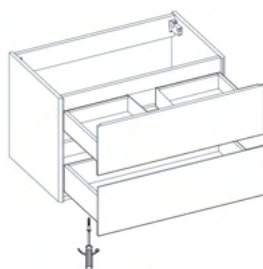

4

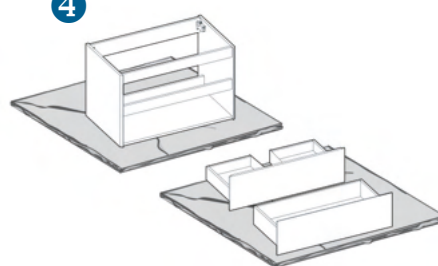


1

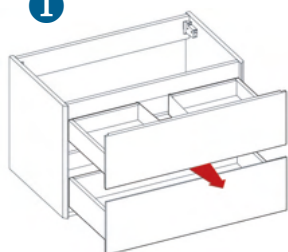


2

Metall, metal, métal, metallo

3


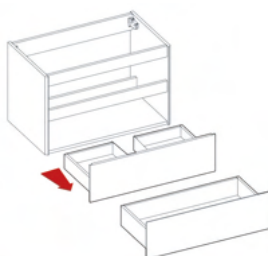


5

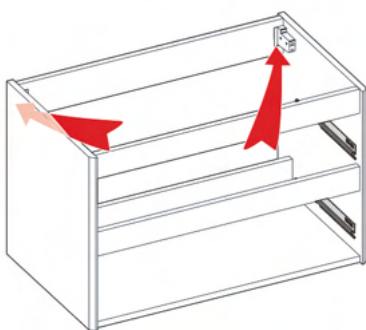

2 mm


2 mm

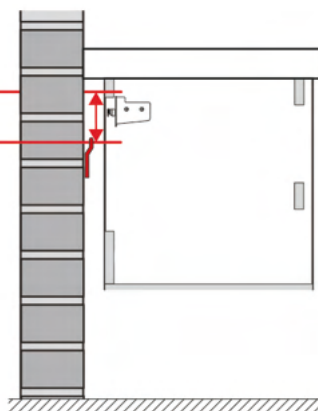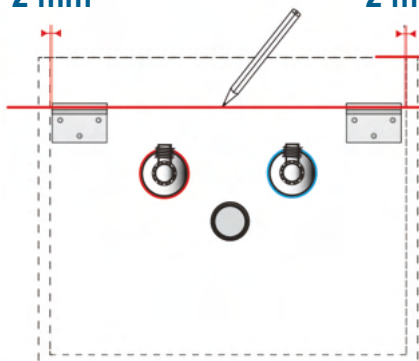


850 mm




6

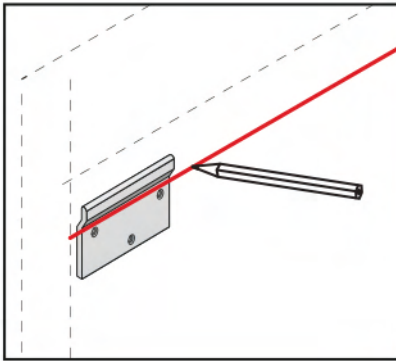



7

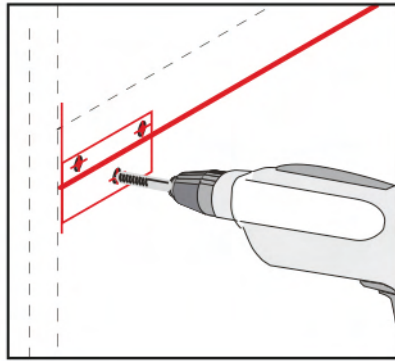


8

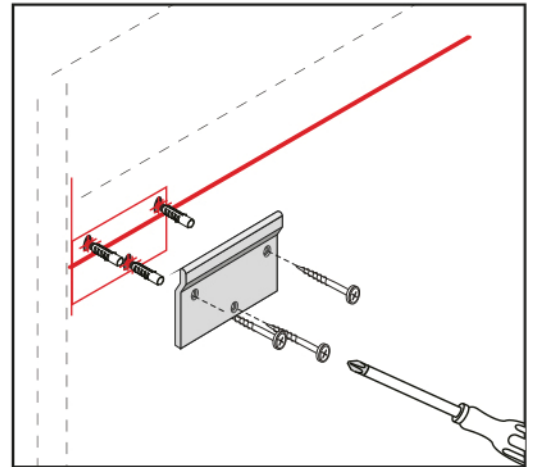



9

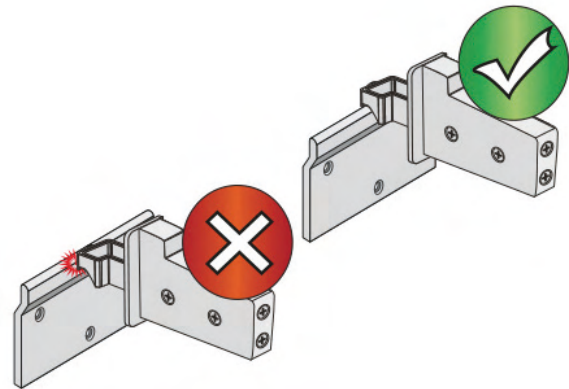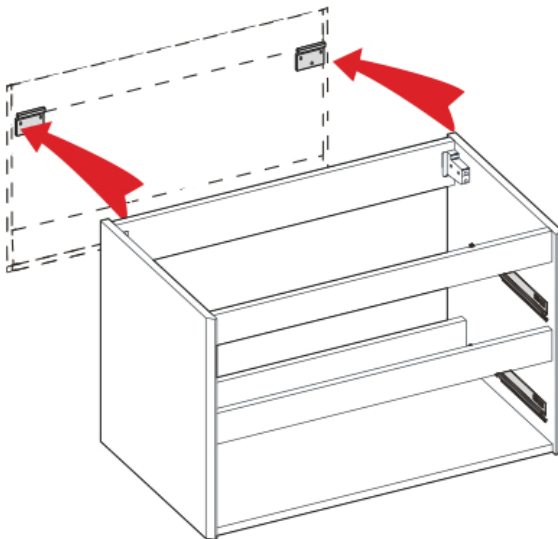

10

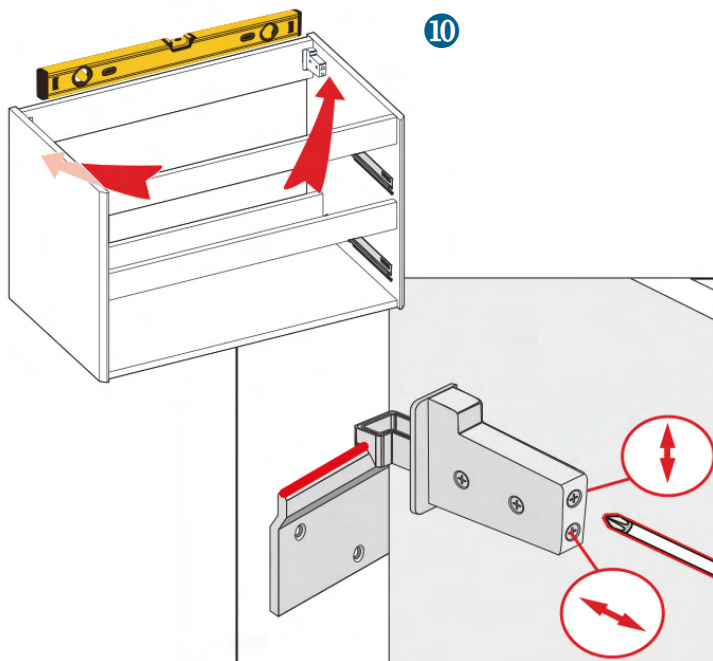

System 2
Système 2
Sistema 2

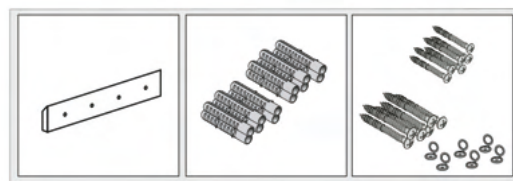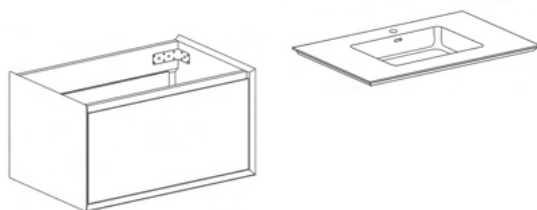

Ø 8x40mm




M 4x50mm
M 4x70mm

2


Holz, wooden, bois, legno

3

1

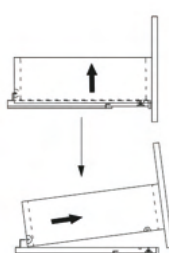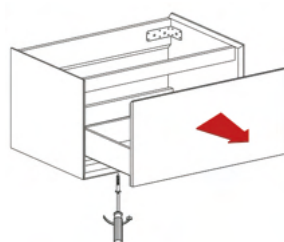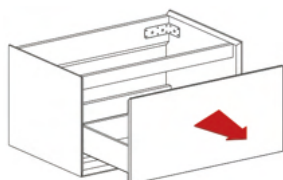


4

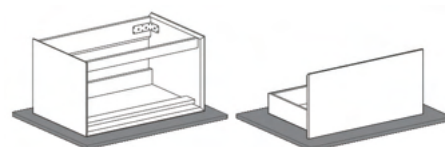

2

Metall, metal, métal, metallo

3

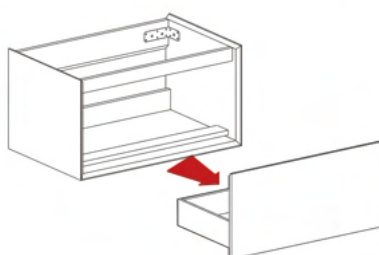


5


Empfohlene Bauhöhe
Recommended height
Hauteur recommandée
Altezza raccomandata

850 mm


215 mm

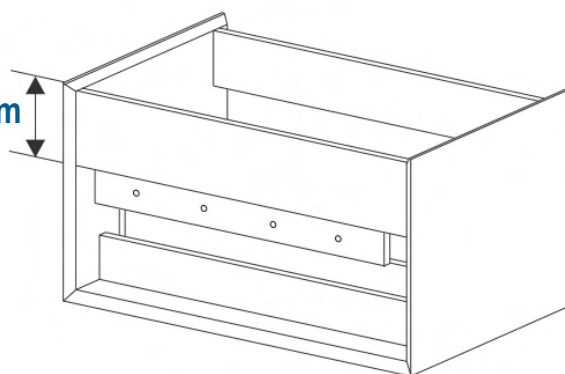


215 mm

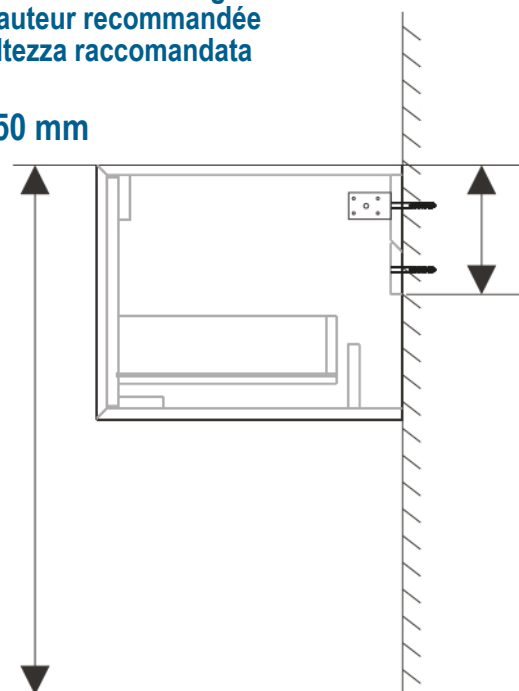


6

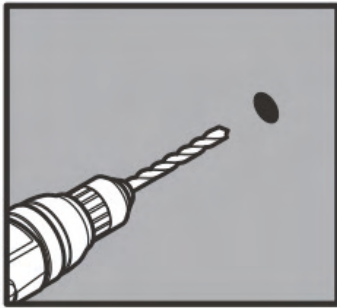


7

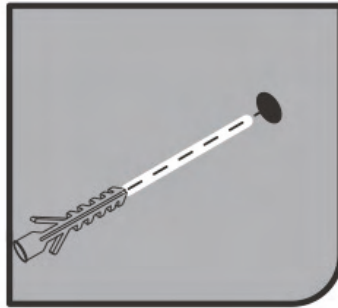


8

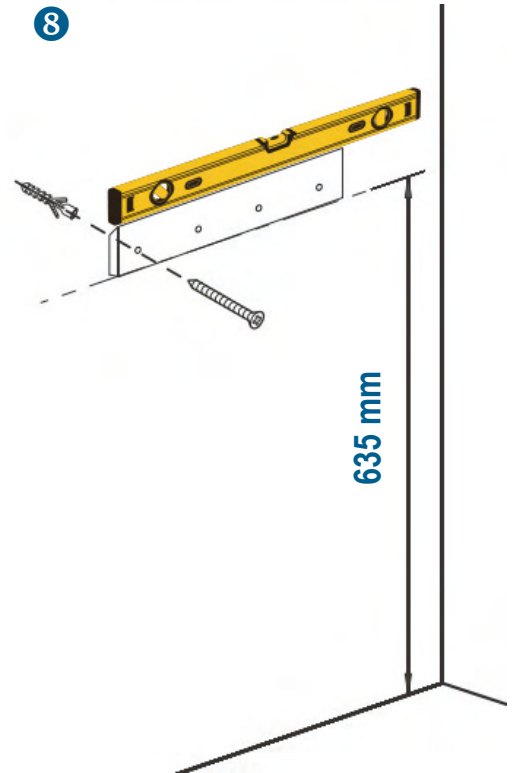


9

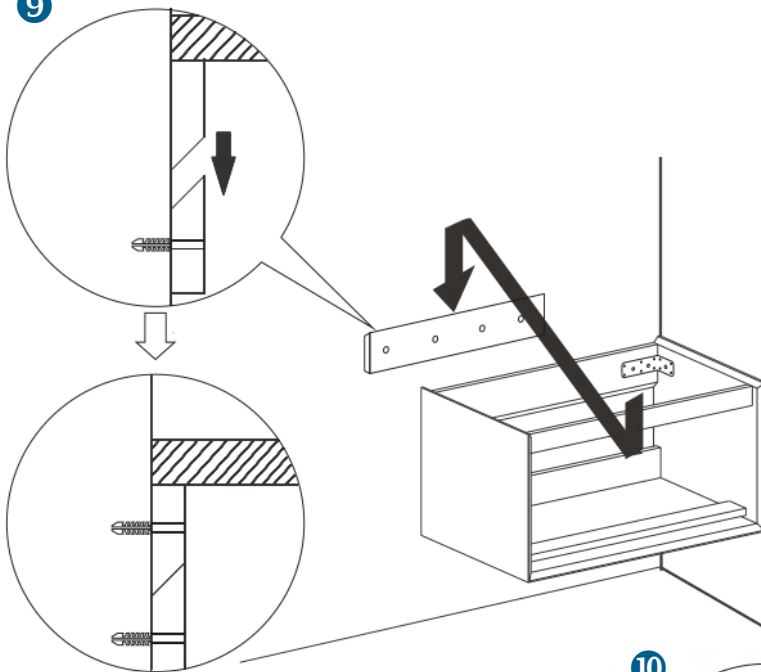

10

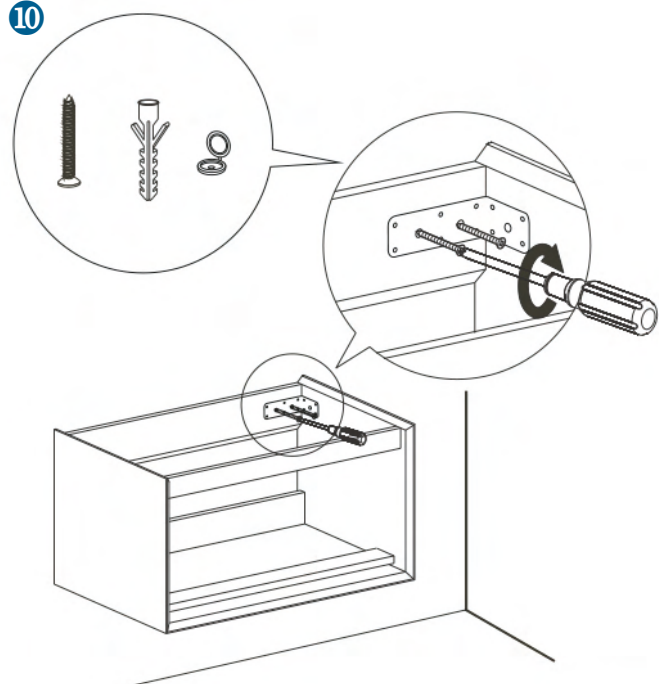


System 3
Système 3
Sistema 3

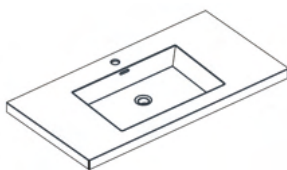

Ø 8x40mm


M 4x50mm

1

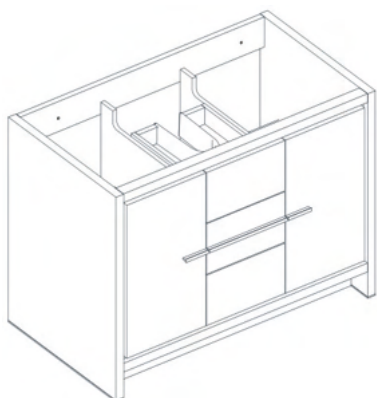


2


Bohrungen anzeichnen
Marking the drill holes
Marquer les trous
Marcatura dei fori

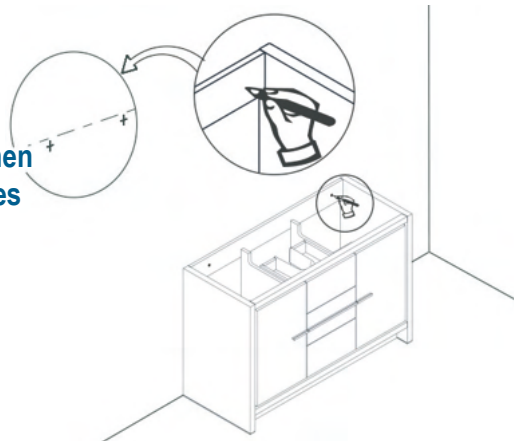



3

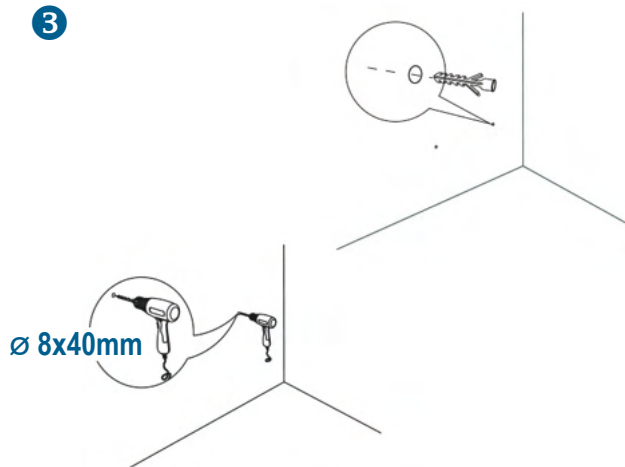

4

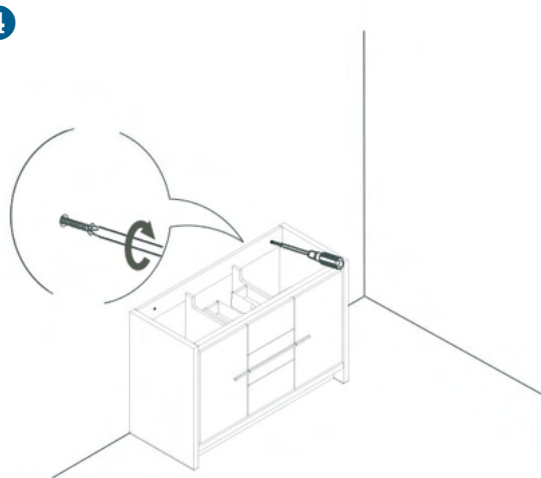


5

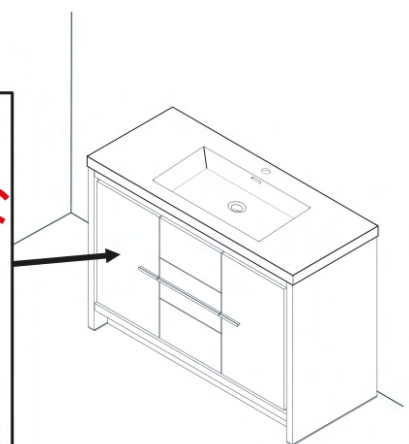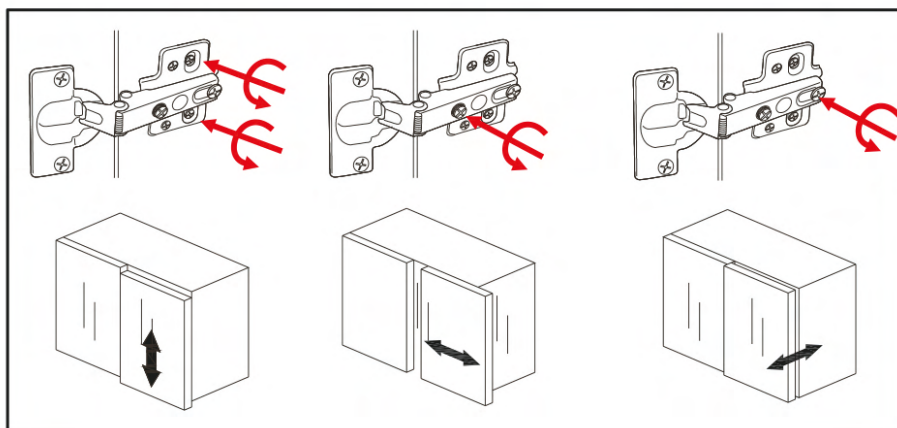


Abdichten des Waschbeckens
Washbasin Sealing
Étanchéité de la vasque
Sigillatura del lavabo


1

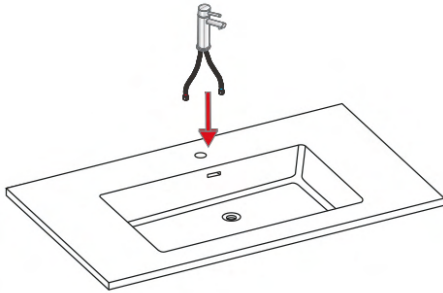


2

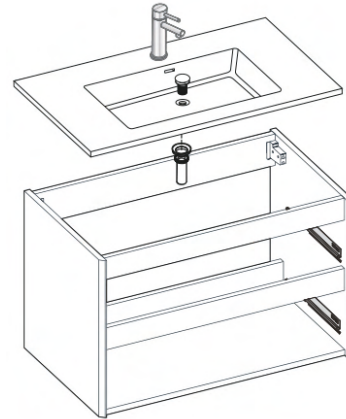


3

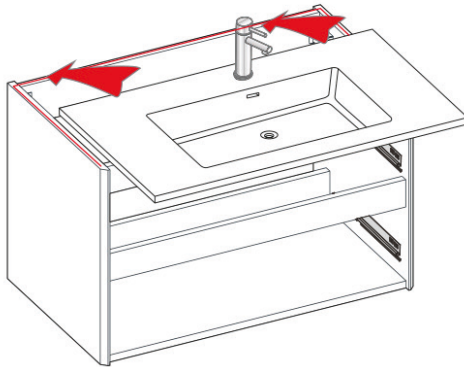


4

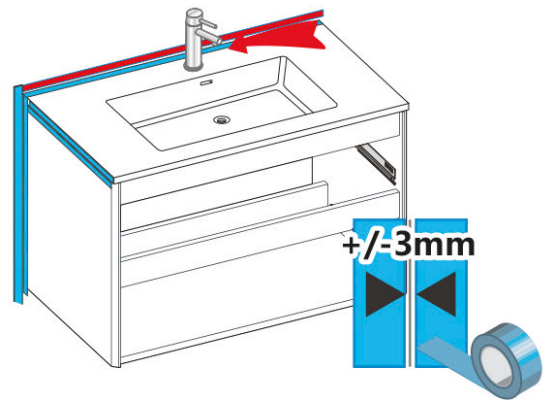

5

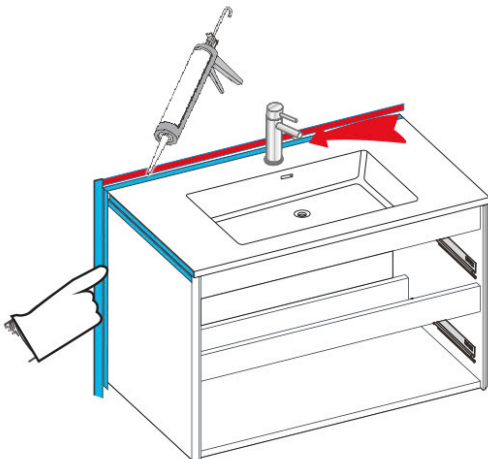


6

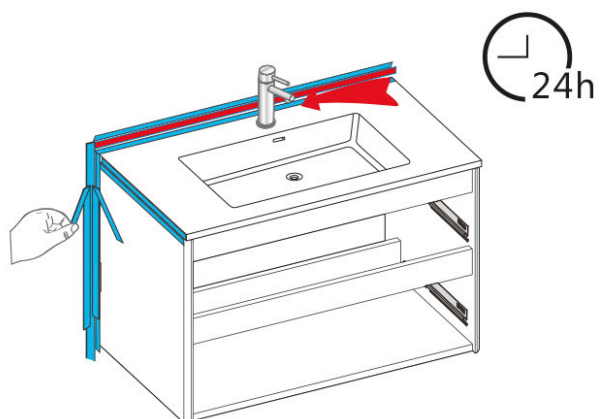


Schubladen justieren
 Drawers adjustment
 Ajustement des tiroirs
 Regolazione cassetti


1

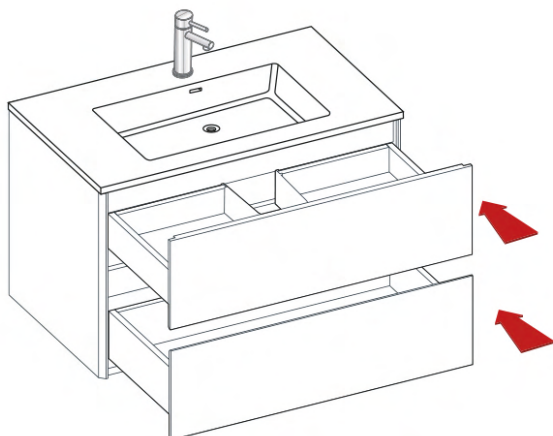


2

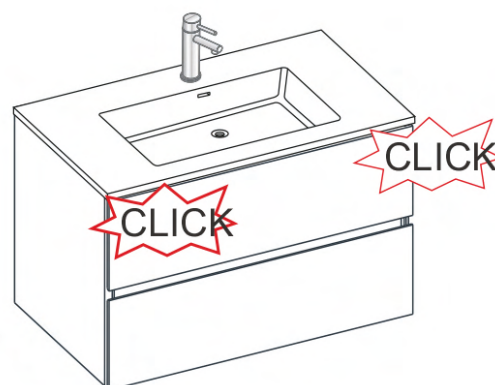


3 Metall, metal, métal, metallo

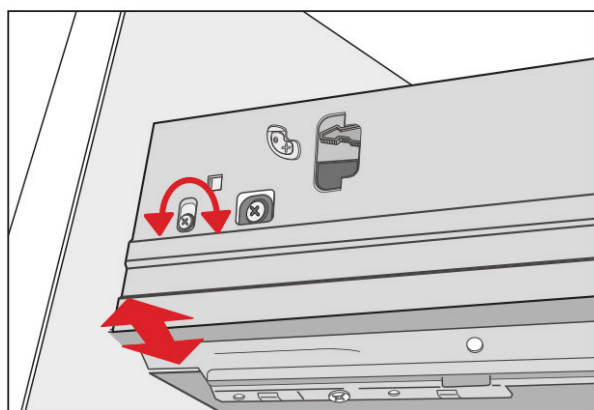

4

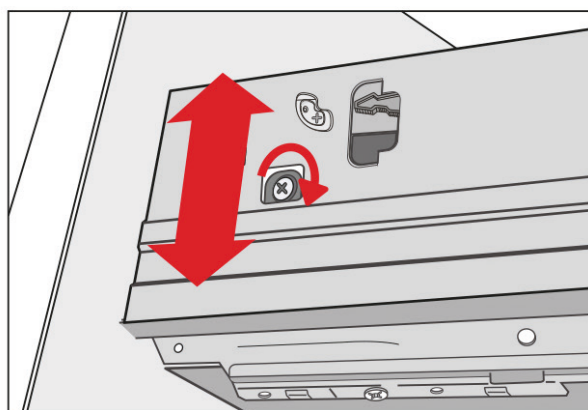


5 Holz, wooden, bois, legno

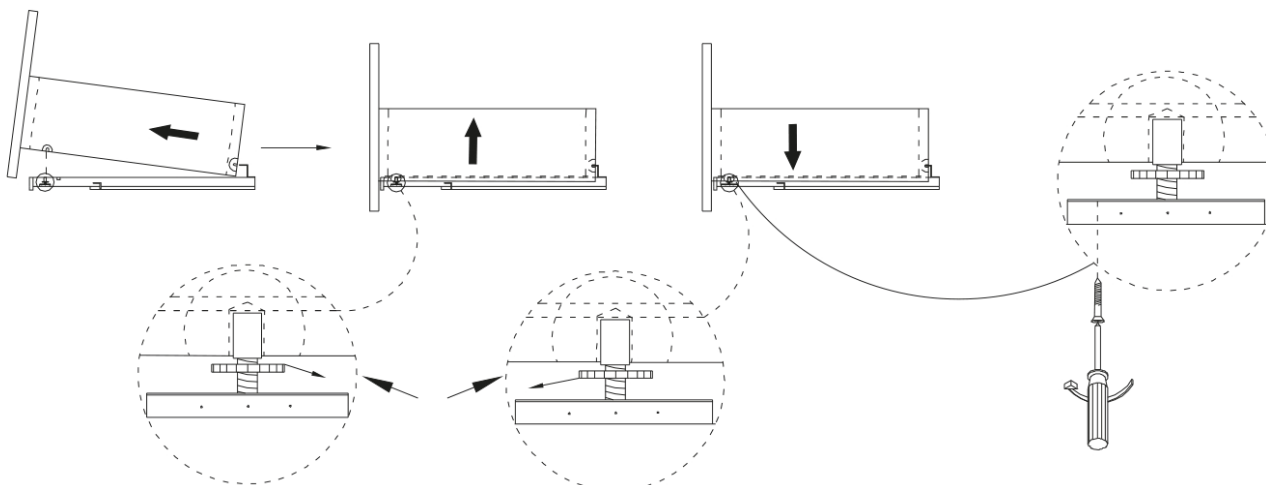


Frontplatte abnehmen
Remove front panel
Retrait du panneau frontal
Rimozione del pannello frontale

1 Metall, metal, métal, metallo

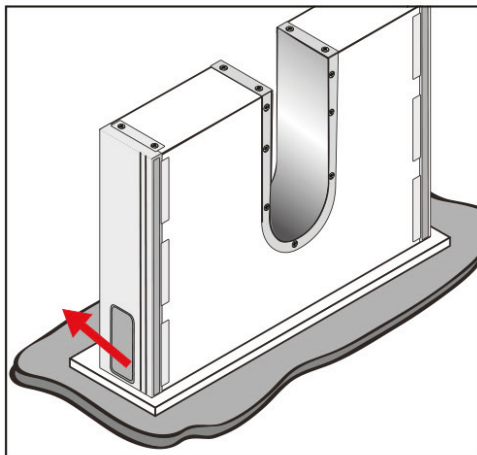

2

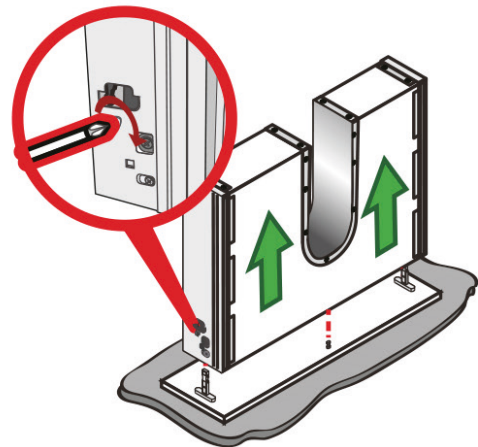

3 Holz, wooden, bois, legno

