

SHOWER TOILET BERNSTEIN Basic

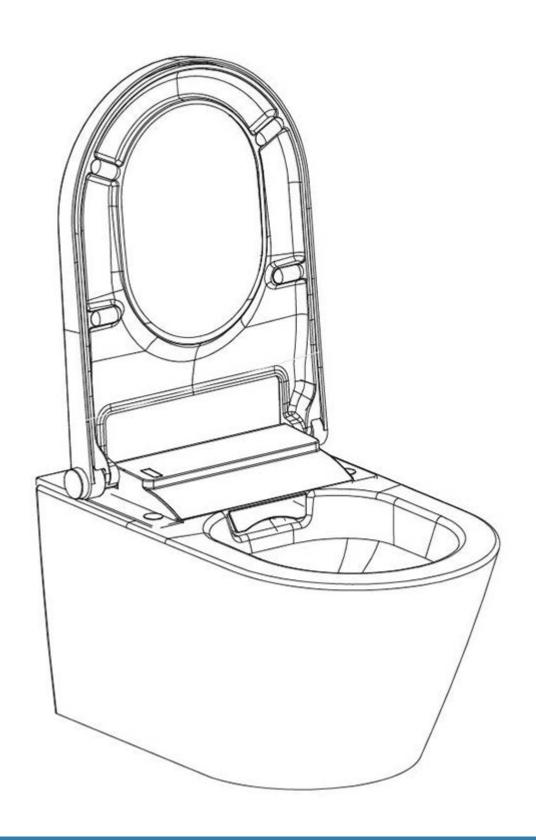




EN I FR IT SHOWER TOILET BERNSTEIN Basic

DELIVERY

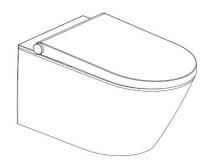





Threaded Stays M 12

In-Flow Pipe and Seal Ring




Installation Manuel
Instruction Manuel






Nuts M 12



Waste Pipe and Seal Ring



Plugs

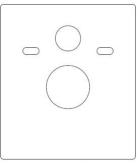


Insulation Pad





Washers




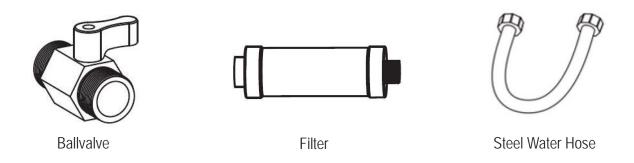



A second steel hose G 1/2 inch ist is not included.

FILTER INSTALLATION




LIABILITY DECLARATION

The supplier is not liable for damages caused by negligence in the following areas:

- 1. This is an electronic device and must be grounded!
- 2. Persons with disabilities or small children should not be allowed to use this product without supervision.
- 3. Please use caution and follow all installation steps to avoid accidents.

Make sure there is proper ventilation.

TOOLS (NOT INCLUDED)

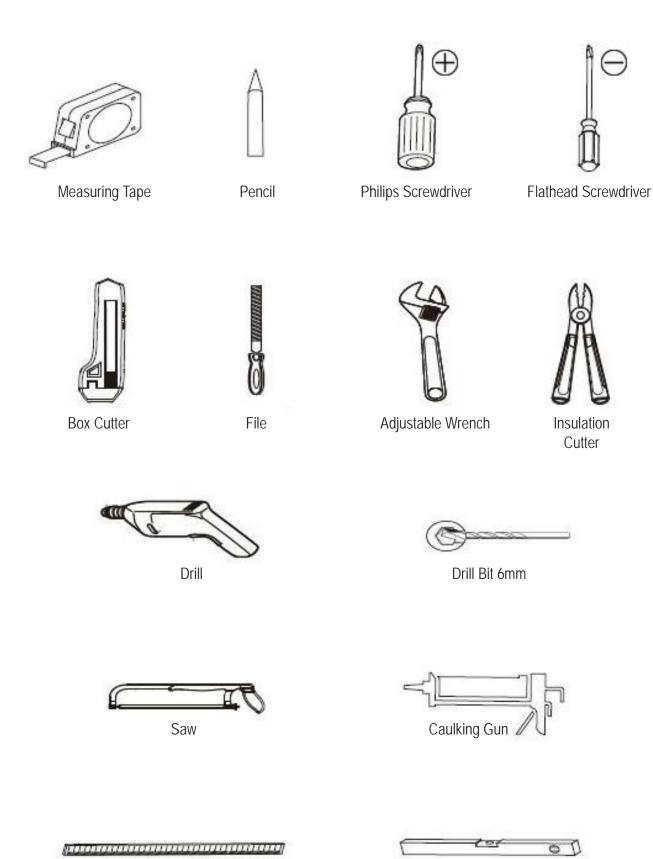

Level


Ruler





INSTALLATION MODEL A


Prior to installation, ensure that a water valve and electrical outlet are present.




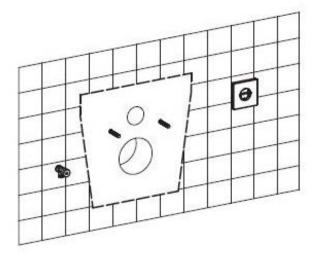


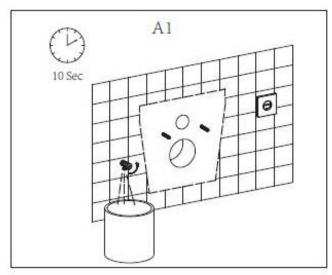


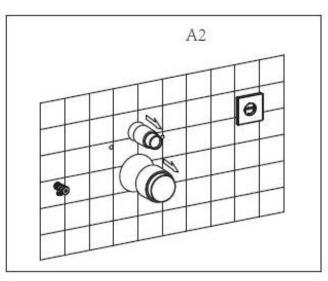


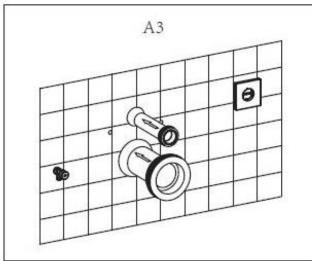


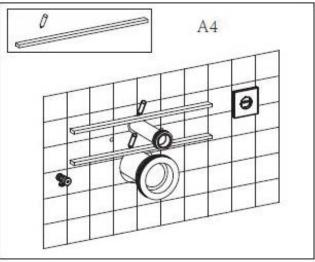


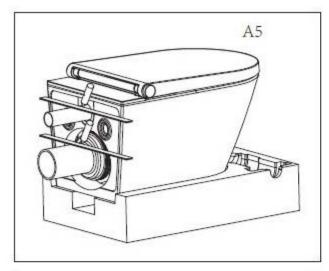


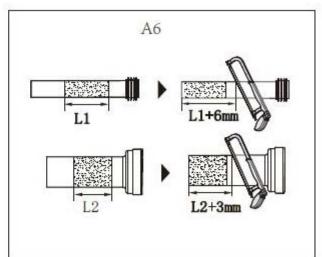

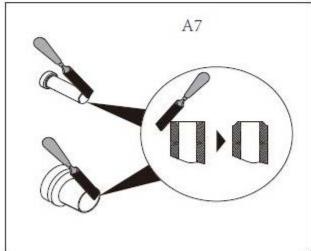


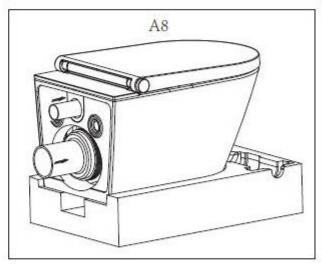


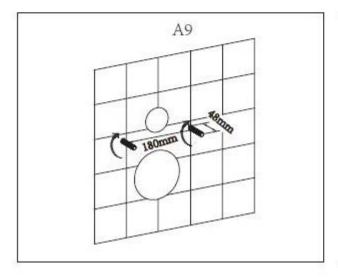


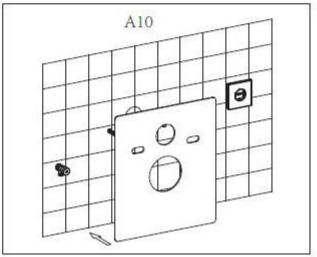





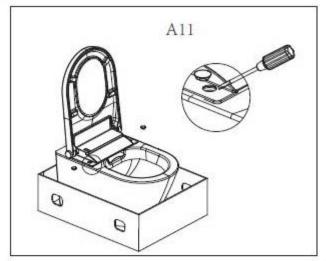


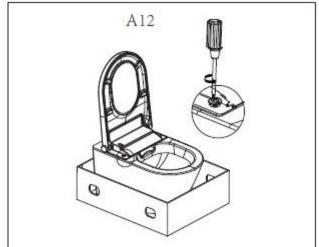

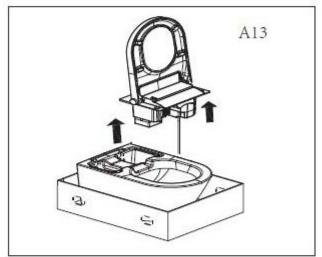


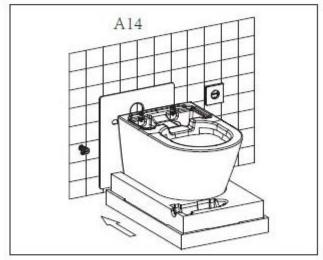


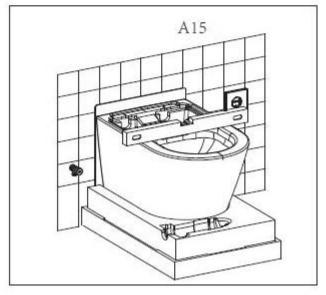


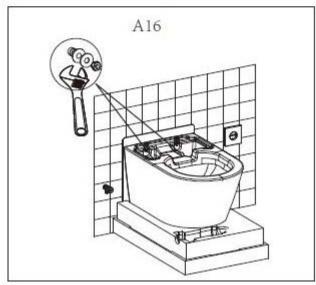



EN I FR IT SHOWER TOILET BERNSTEIN Basic

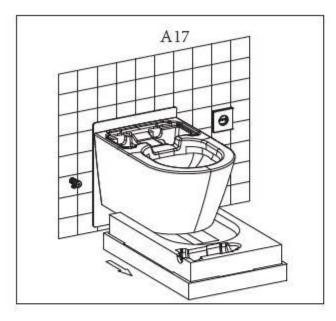


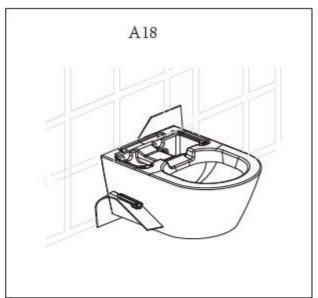

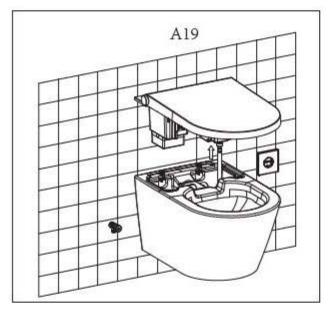


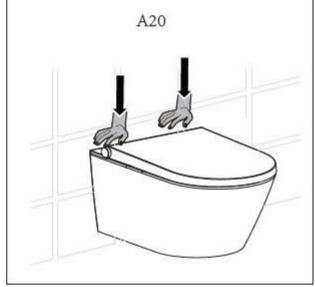


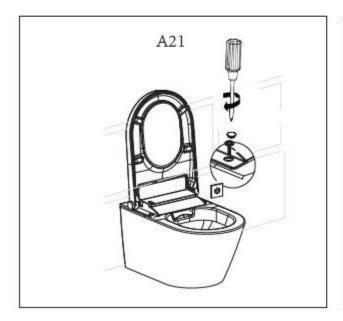

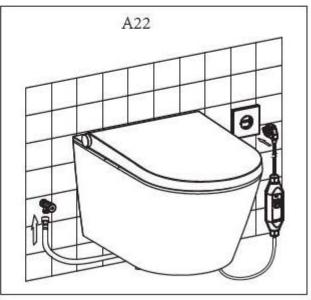



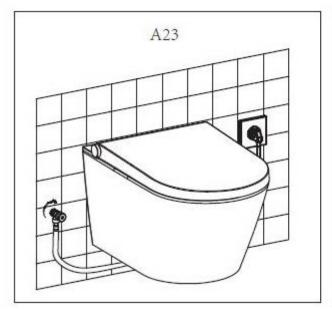

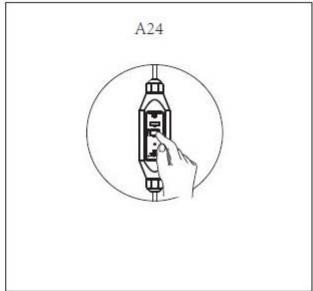

INSTALLATION MODEL B

Prior to installation, ensure that a water valve and electrical outlet are installed directly next to the WC.



