
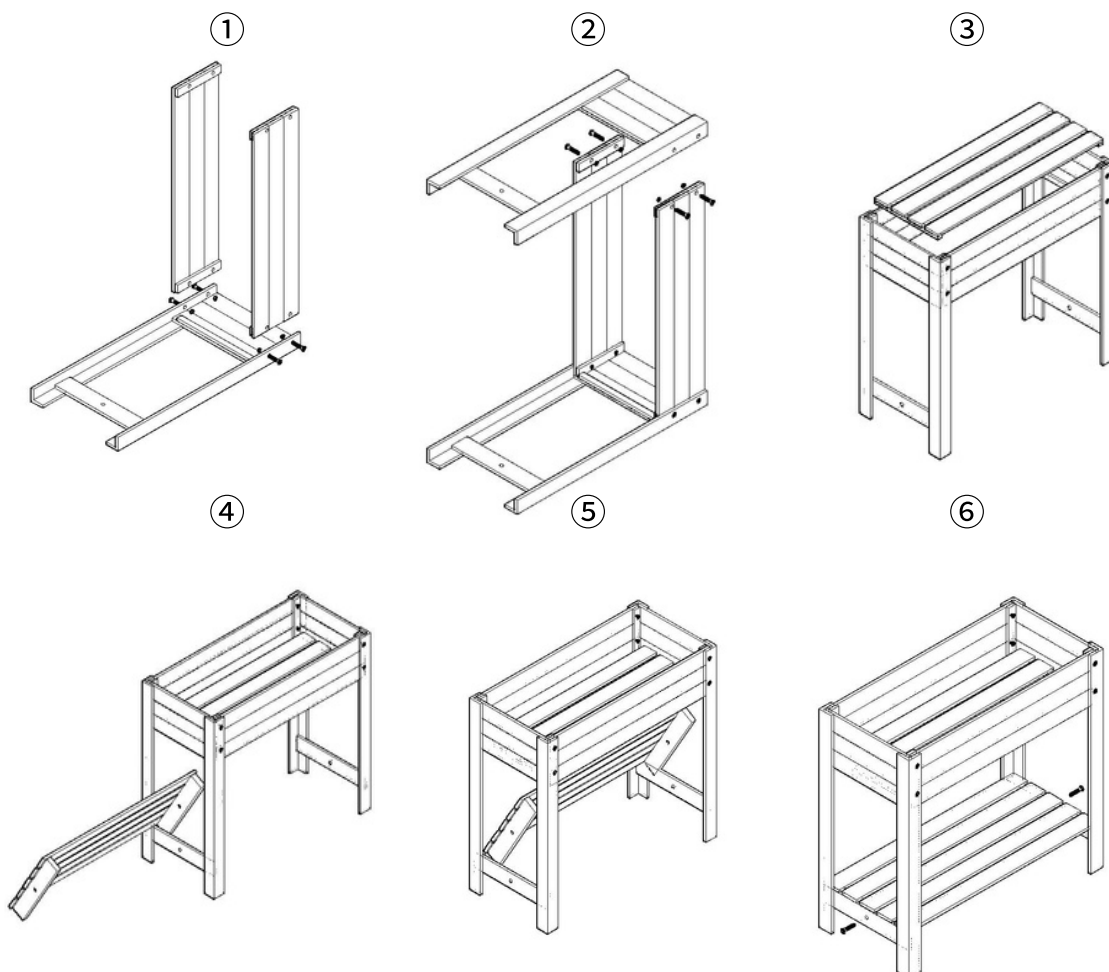


Montageanleitung

Hochbeet inkl. Vlies-, Einlegefolie Naturholz Kiefer H4H223

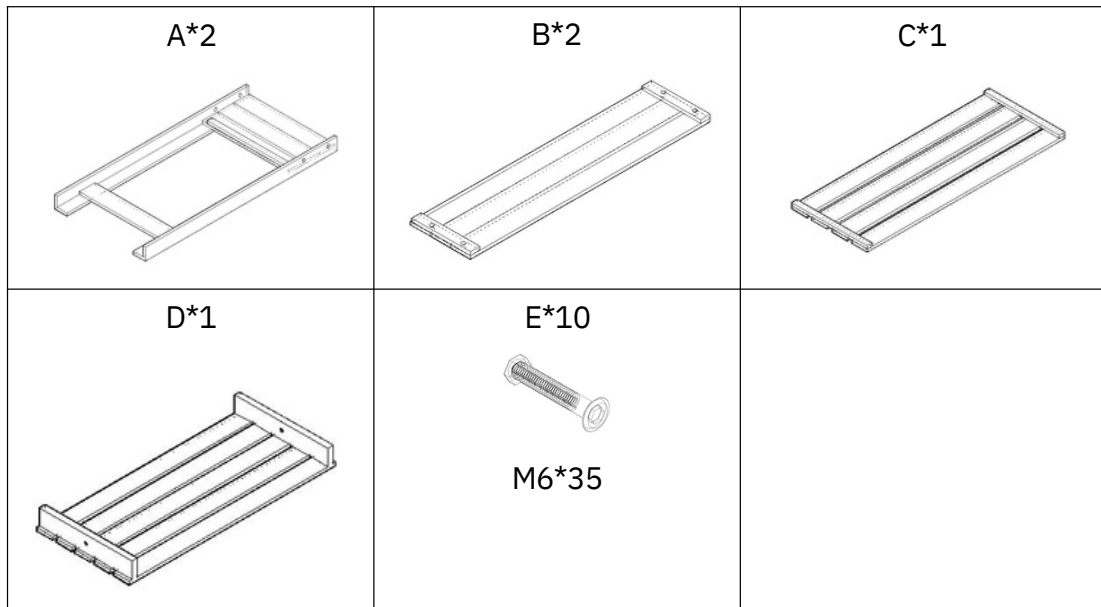

Assembly Instruction

Raised bed incl. fleece, inlay foil natural wood pine H4H223

