
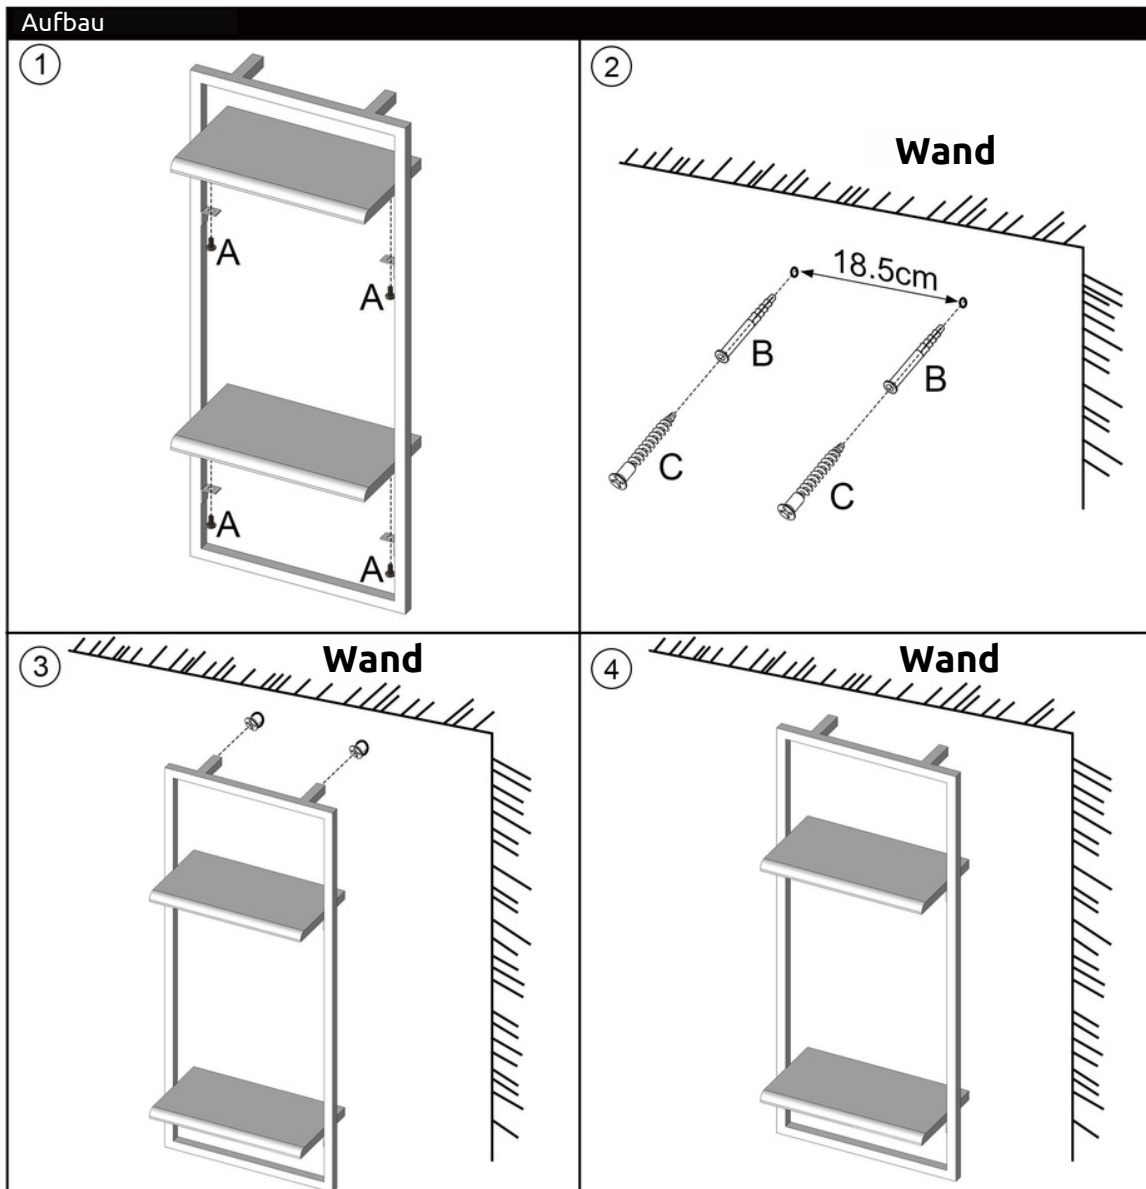


Montageanleitung

Wandregal high in schwarz gerahmt mit Baumkante natur geölt H4H302

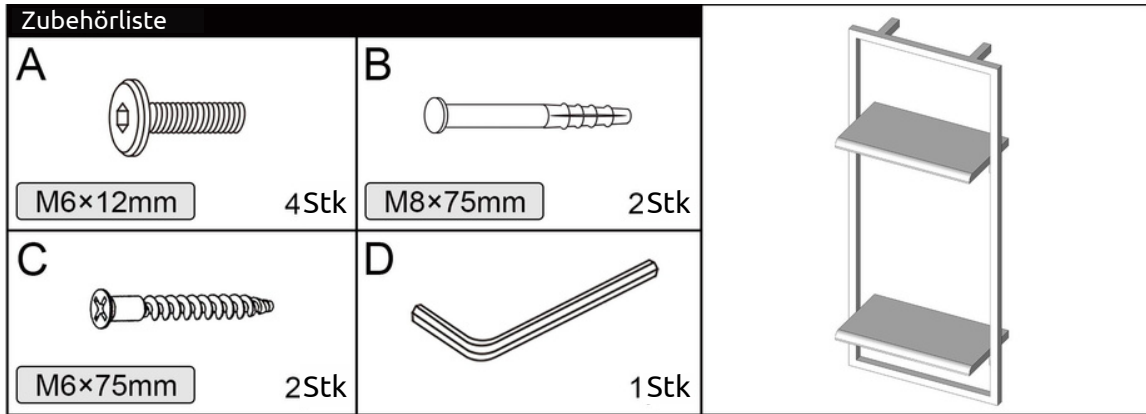

Assembly Instruction

Wall shelf high, black framed with tree edge, oiled H4H302

