



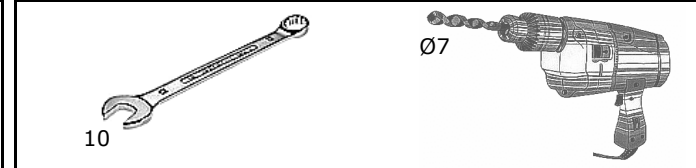


15 min.

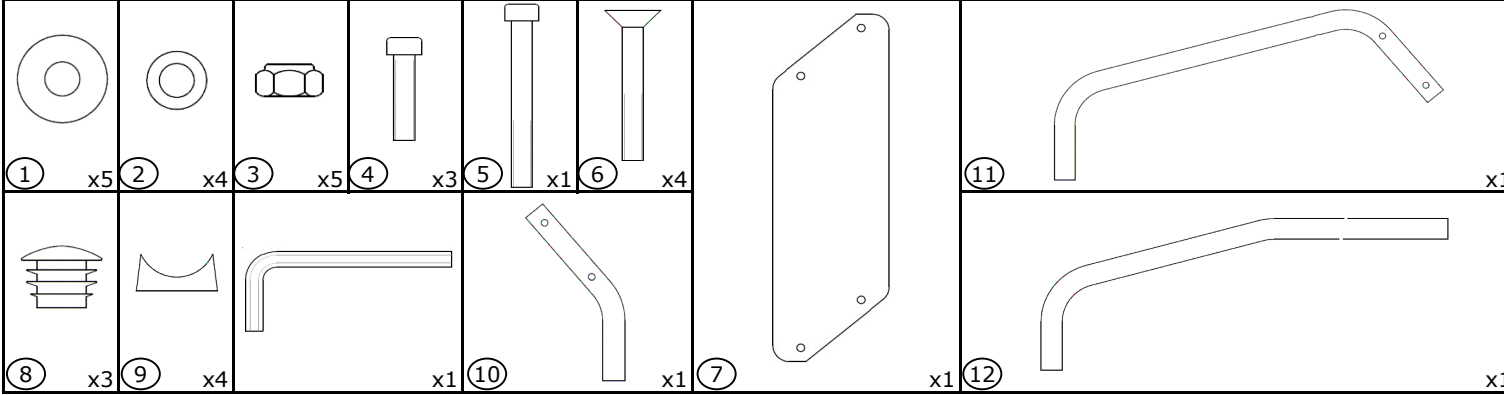

NON INCLUS DANS LE KIT NOT INCLUDED IN THE PACK

MONTAGE A GAUCHE
ASSEMBLY IN LEFT HAND SIDE

PERCER Ø 7
DRILL Ø 7

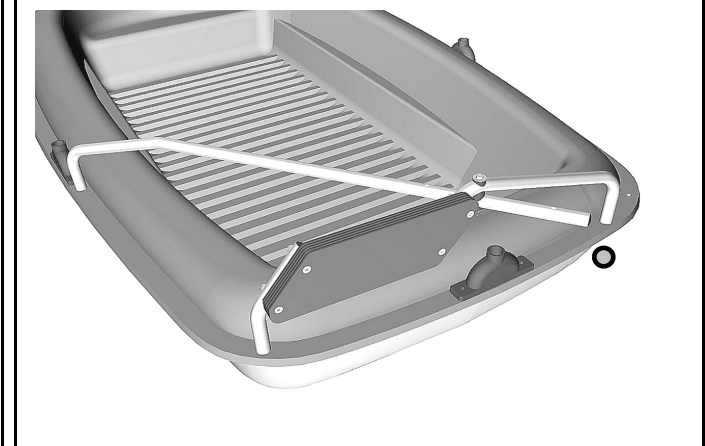

MONTAGE A DROITE
ASSEMBLY IN RIGHT HAND SIDE

PERCER Ø 7
DRILL Ø 7

