

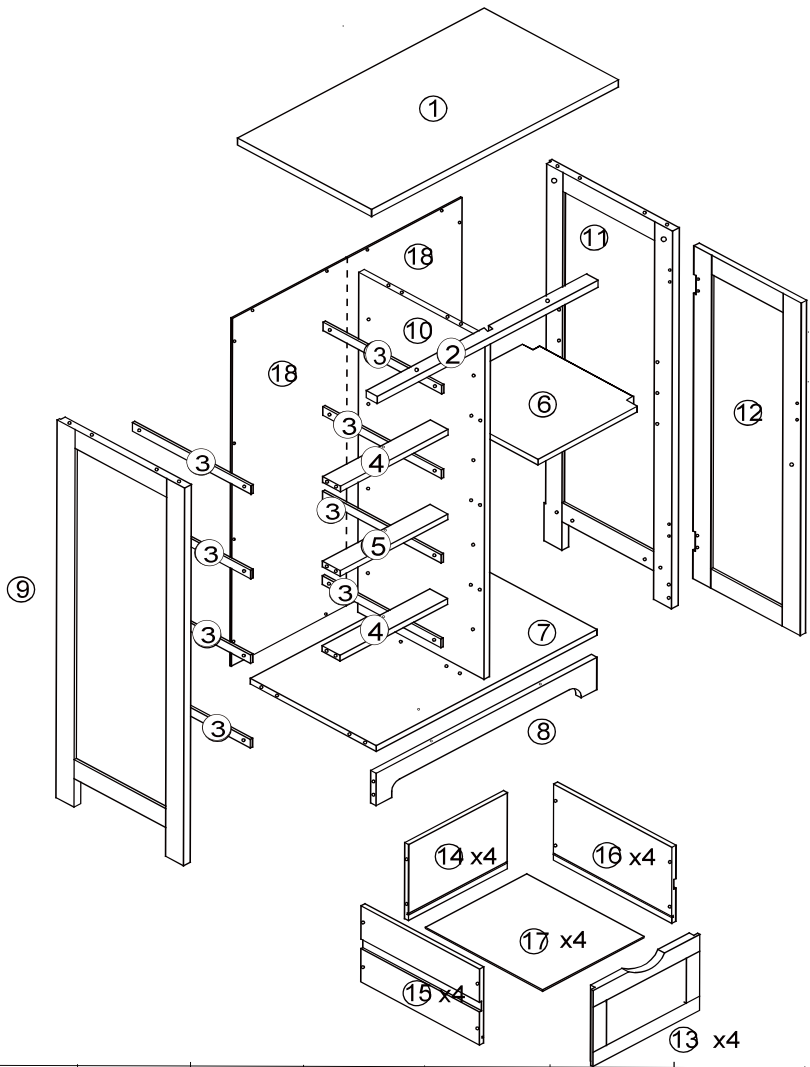
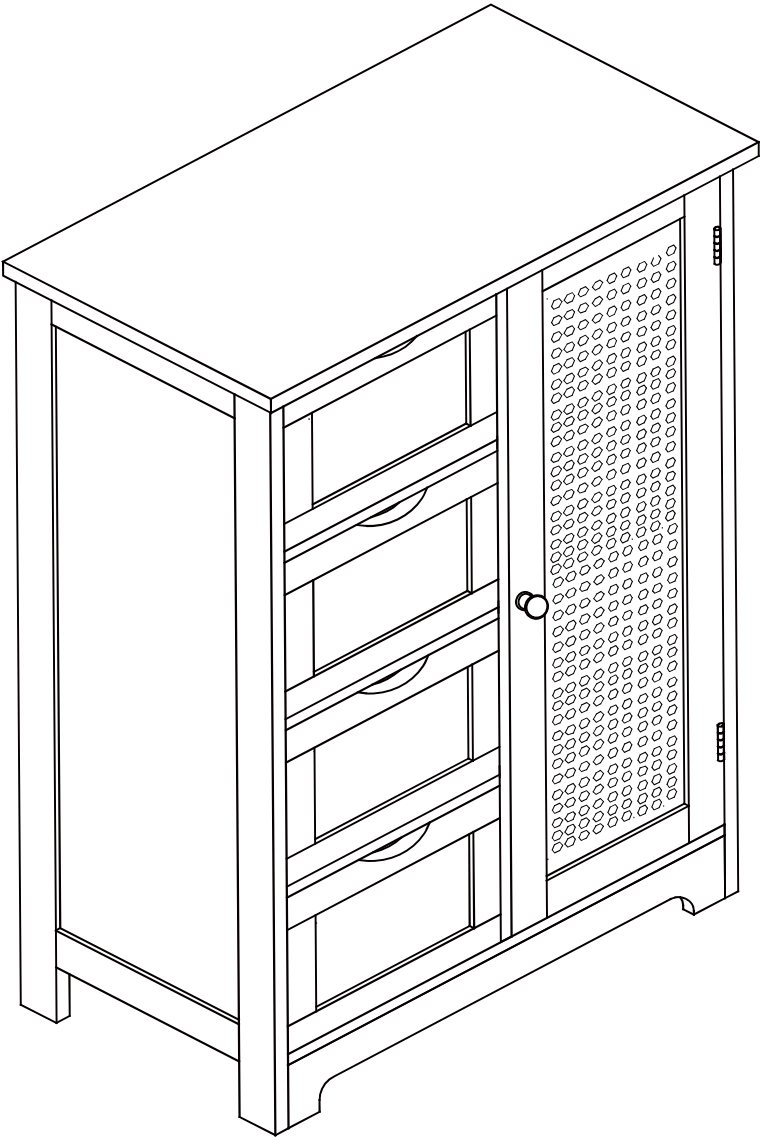


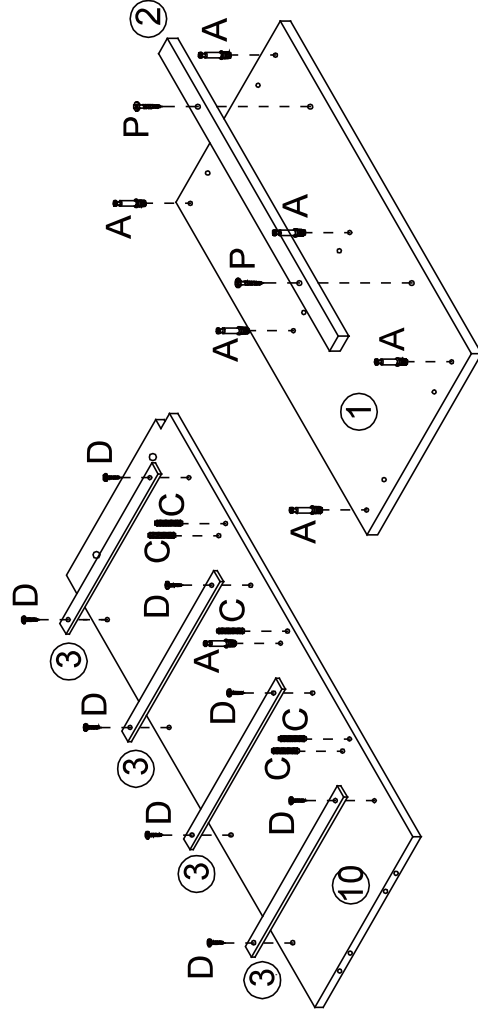
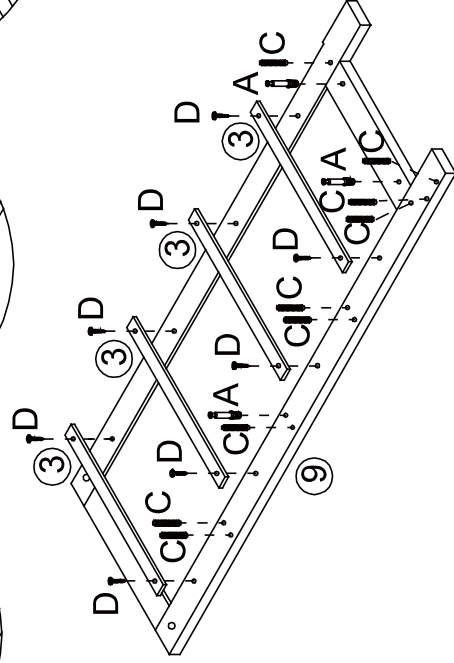
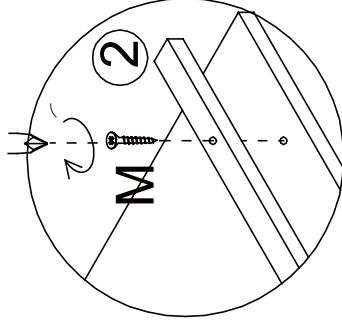


WL7.764






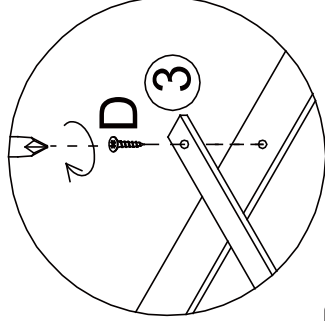


																	
				3x14mm		3x30mm		3x12mm									
A	14pcs	B	14pcs	C	28pcs	D	18pcs	E	1pc	F	32pcs	G	14pcs	H	1pc	I	1pc
																	
				3x12mm						4x25mm		4x35mm					
J	1pc	K	4pcs	L	2pcs	M	19pcs	N	2pcs	O	2pcs	P	2pcs	Q	2pcs	R	4pcs





step 1

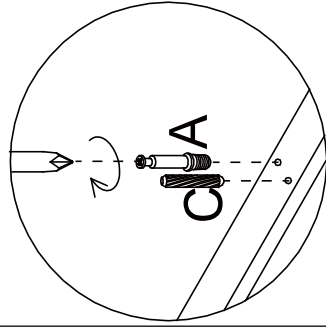


step 2

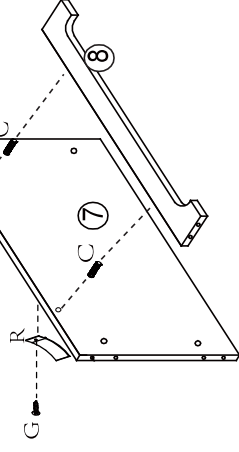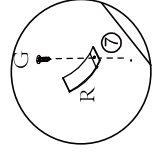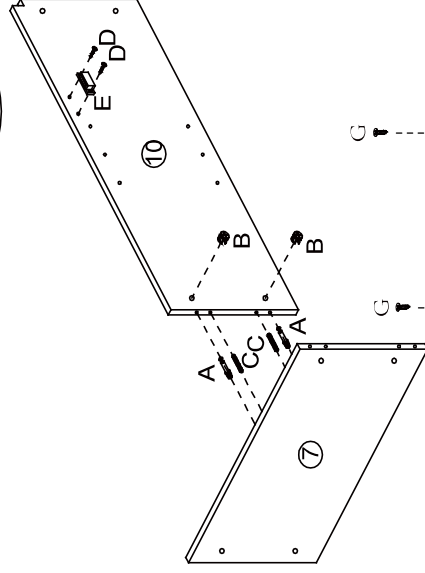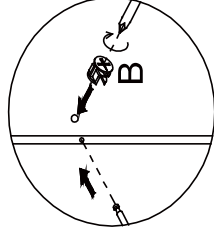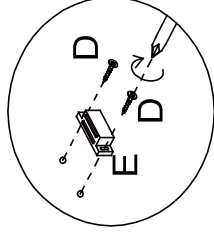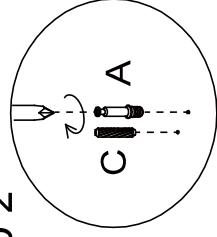


step 3

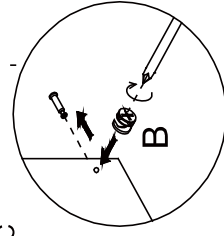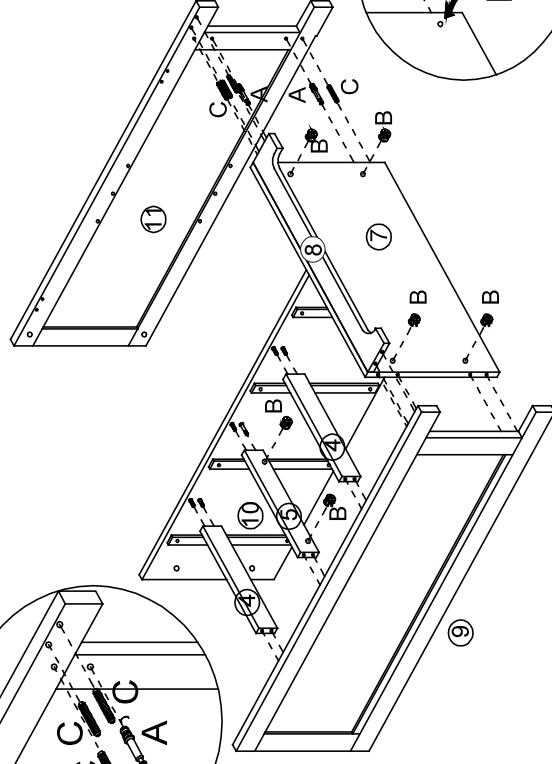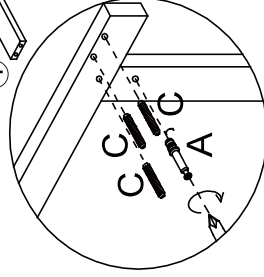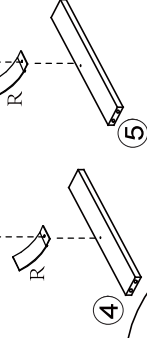




step 4

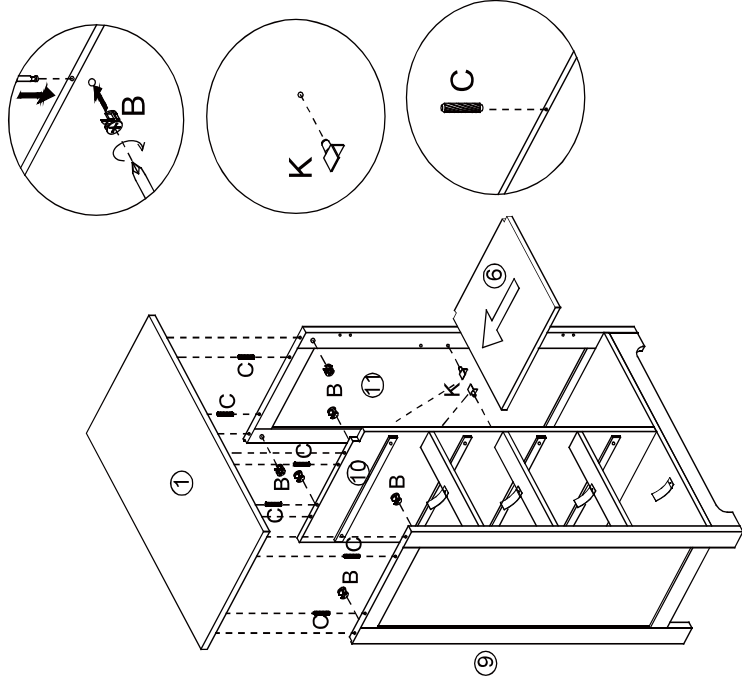

step 5

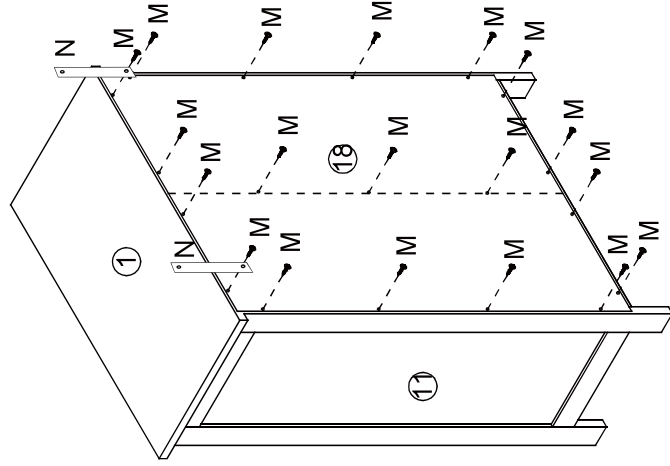


step 7

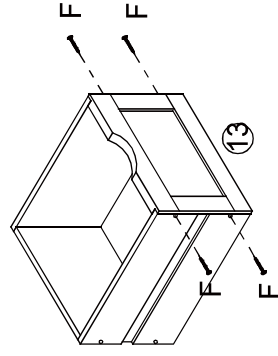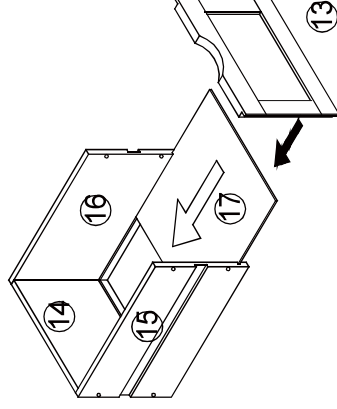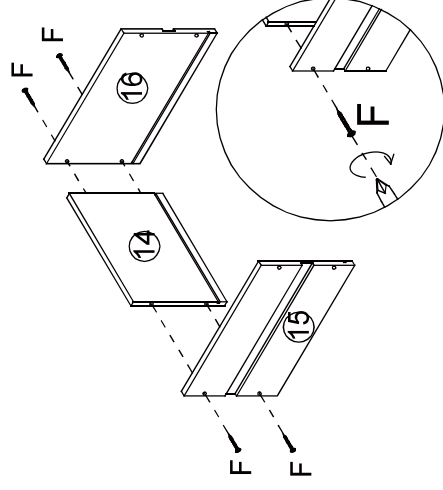


X 4


step 8

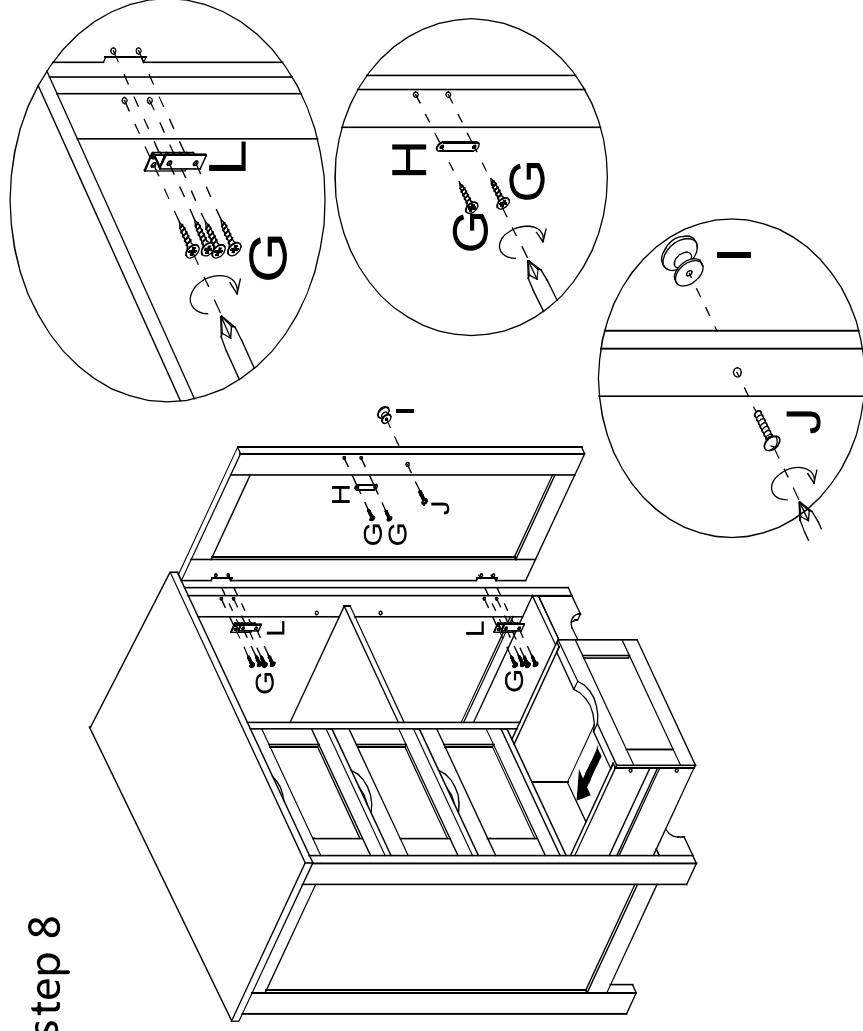

step 10

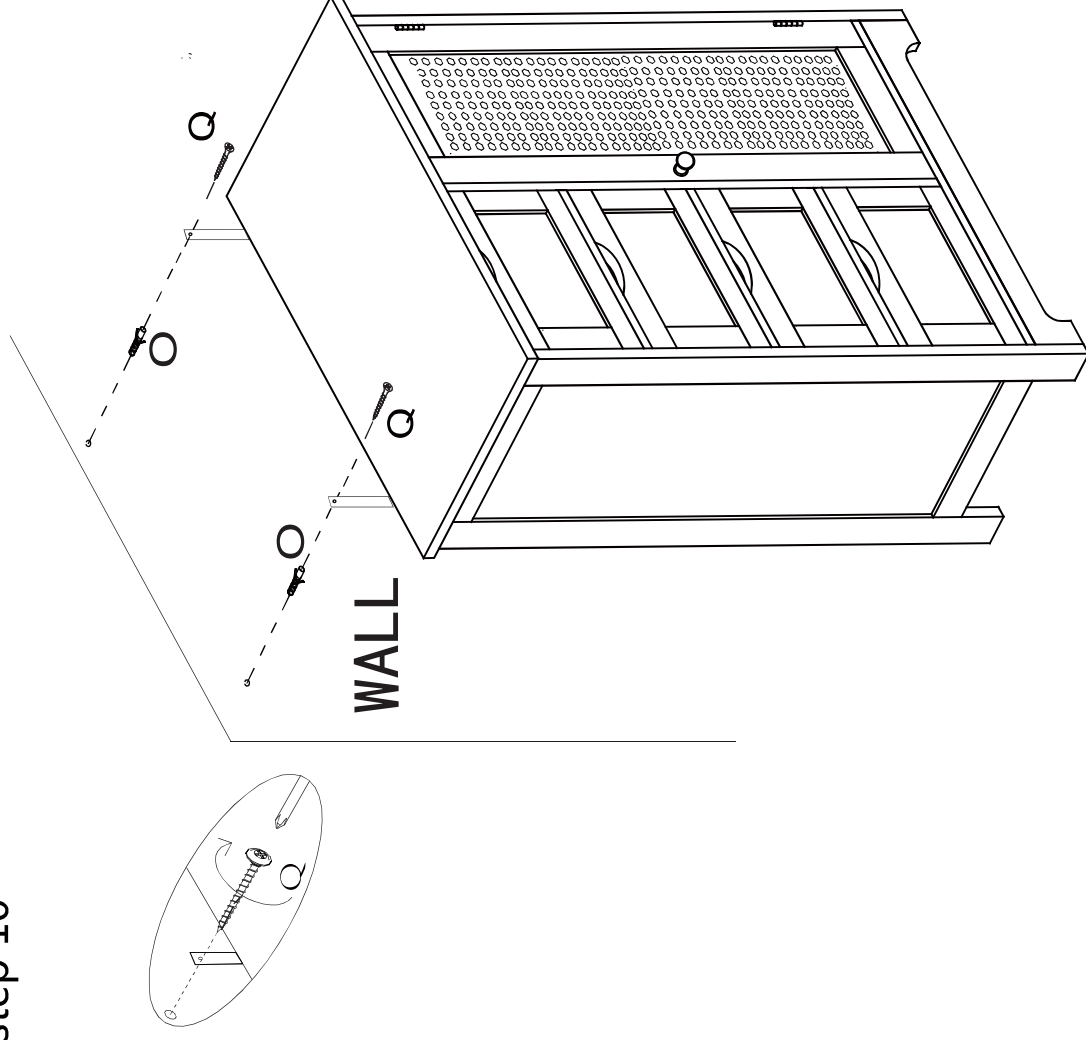

step 9

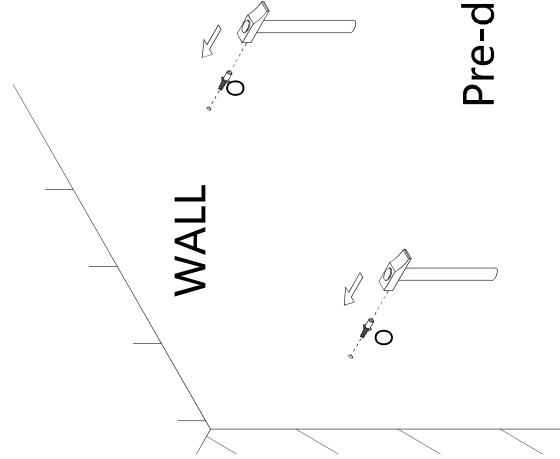

Pre-drilled holes at wall