



# WOHNLING®

Möbel zum Wohlfühlen

WL6.902

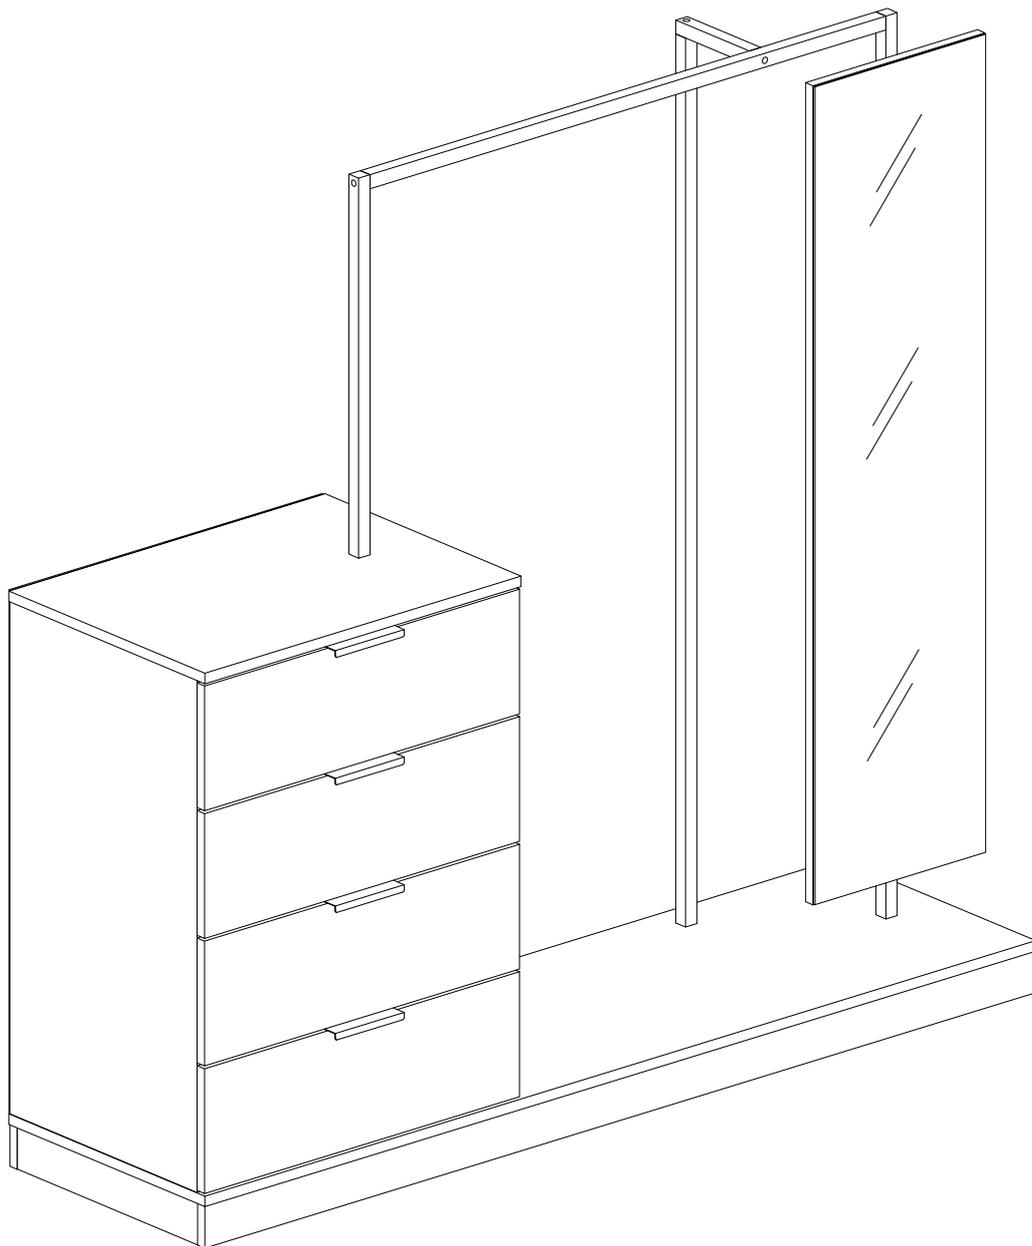


# Parts List

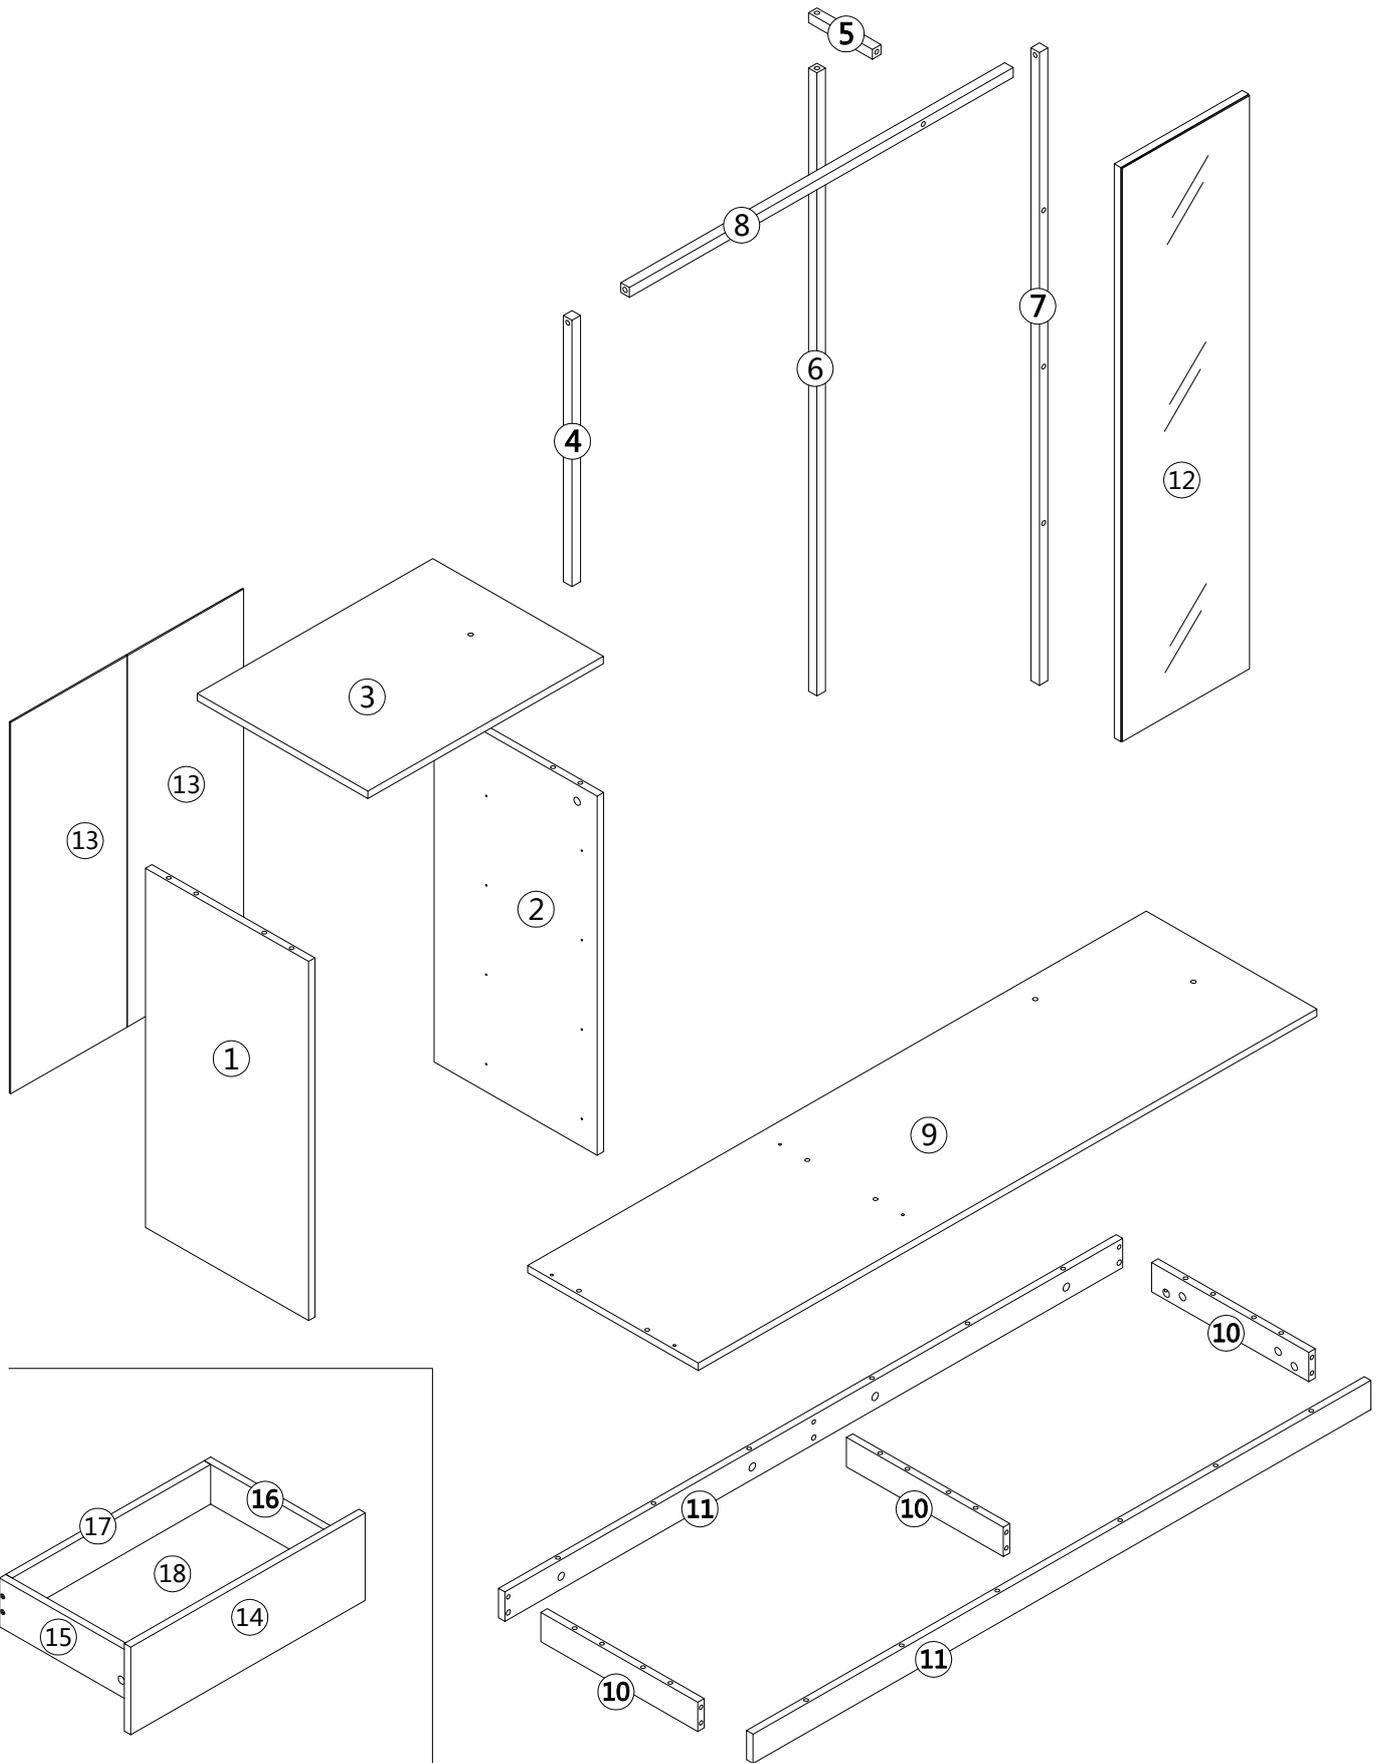

**x 4**


# Hardware

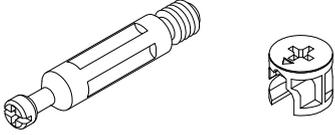

A1


A2

A x 40sets

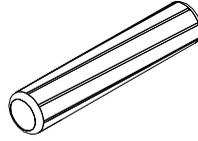


8 x 40MM

B x 24pcs




3.5 x 14MM

C x 40pcs

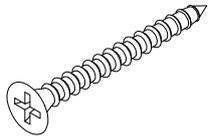

3.5 x 35MM


D x 20pcs

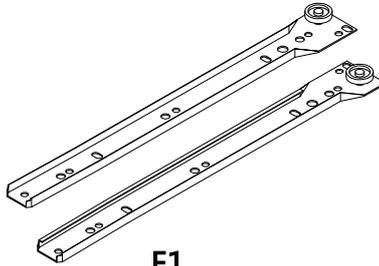

E1


E2

E x 4sets

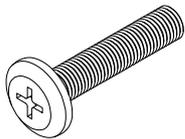


M6 x 30MM

F x 3pcs

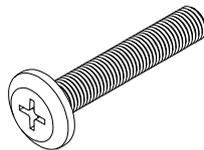


M6 x 35MM


G x 7pcs

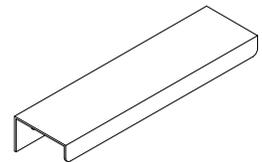


H x 4pcs

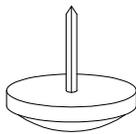

J x 9pcs

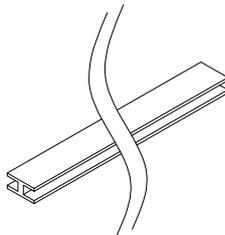




K x 1pc



L x 22pcs




# Step 1

A1 x 4 B x 8 C x 16 E1 x 8

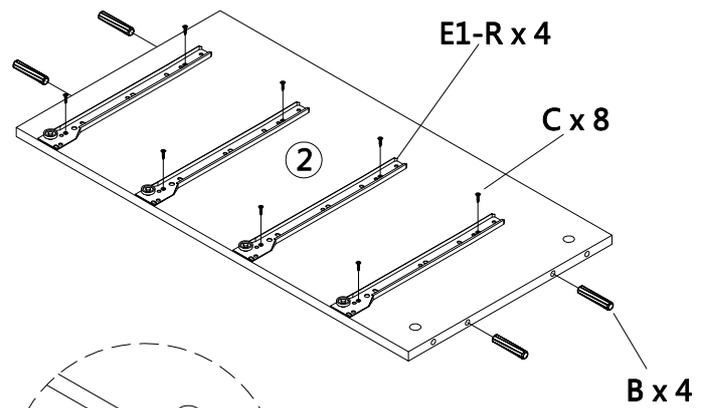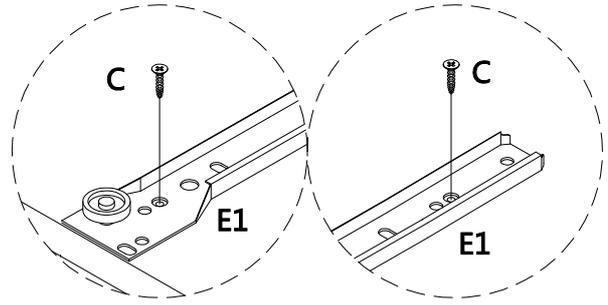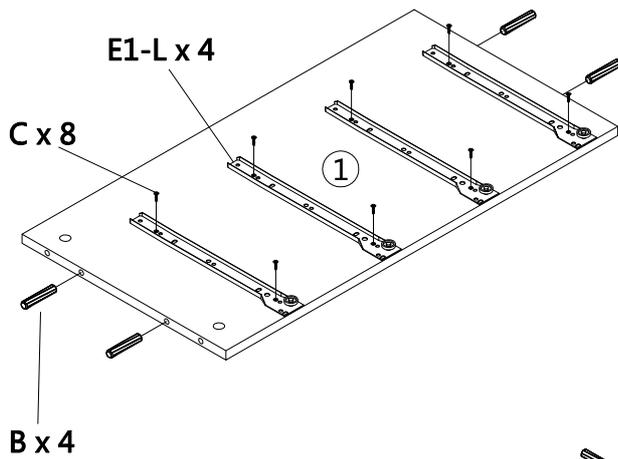





## REMARK:

When installing, please make sure the screws are flattened, Not crooked; Otherwise the drawers will not be installed perfectly.

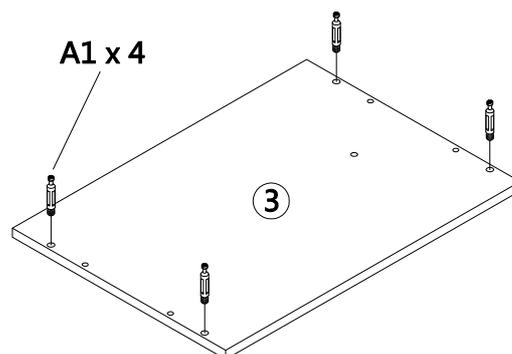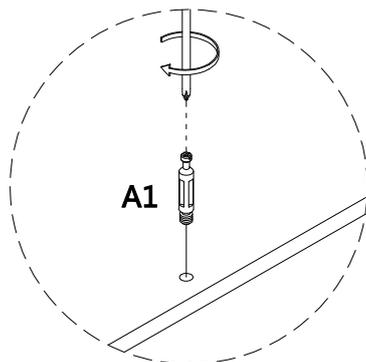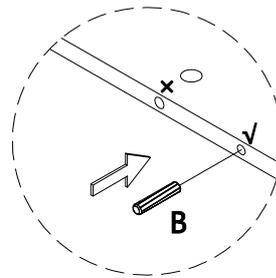


# Step 2

A2 x 4 D x 4

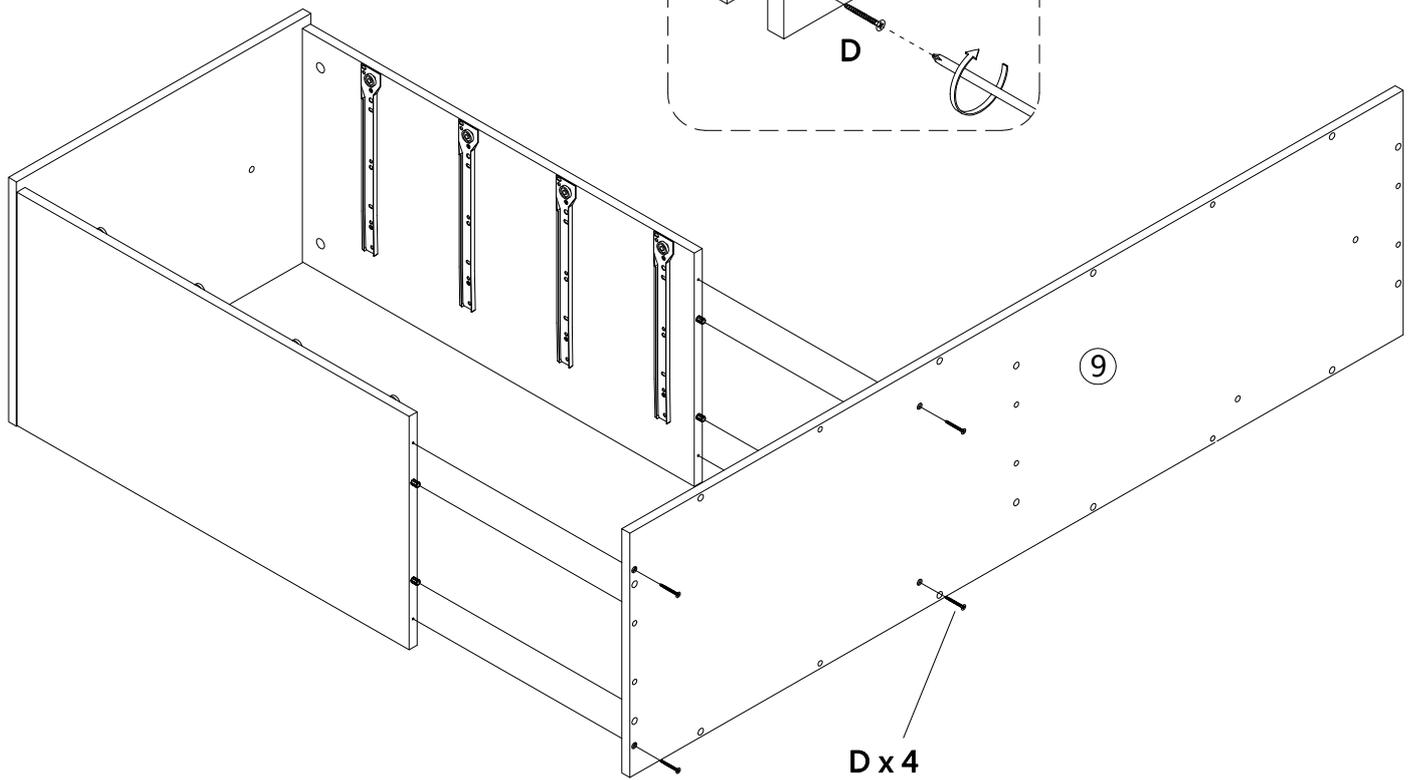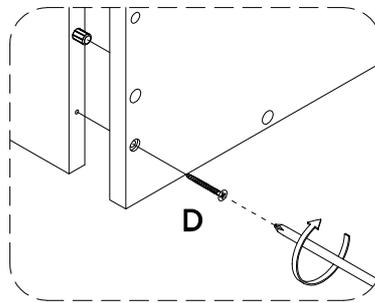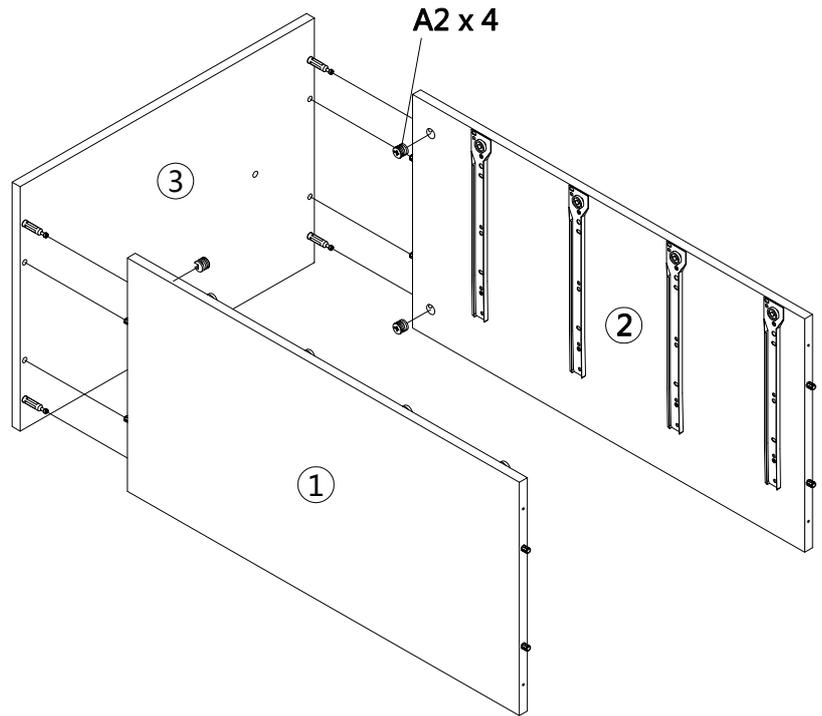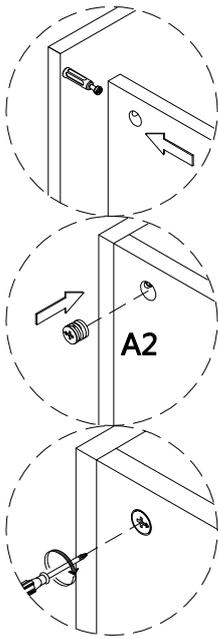


# Step 3

A1 x 14

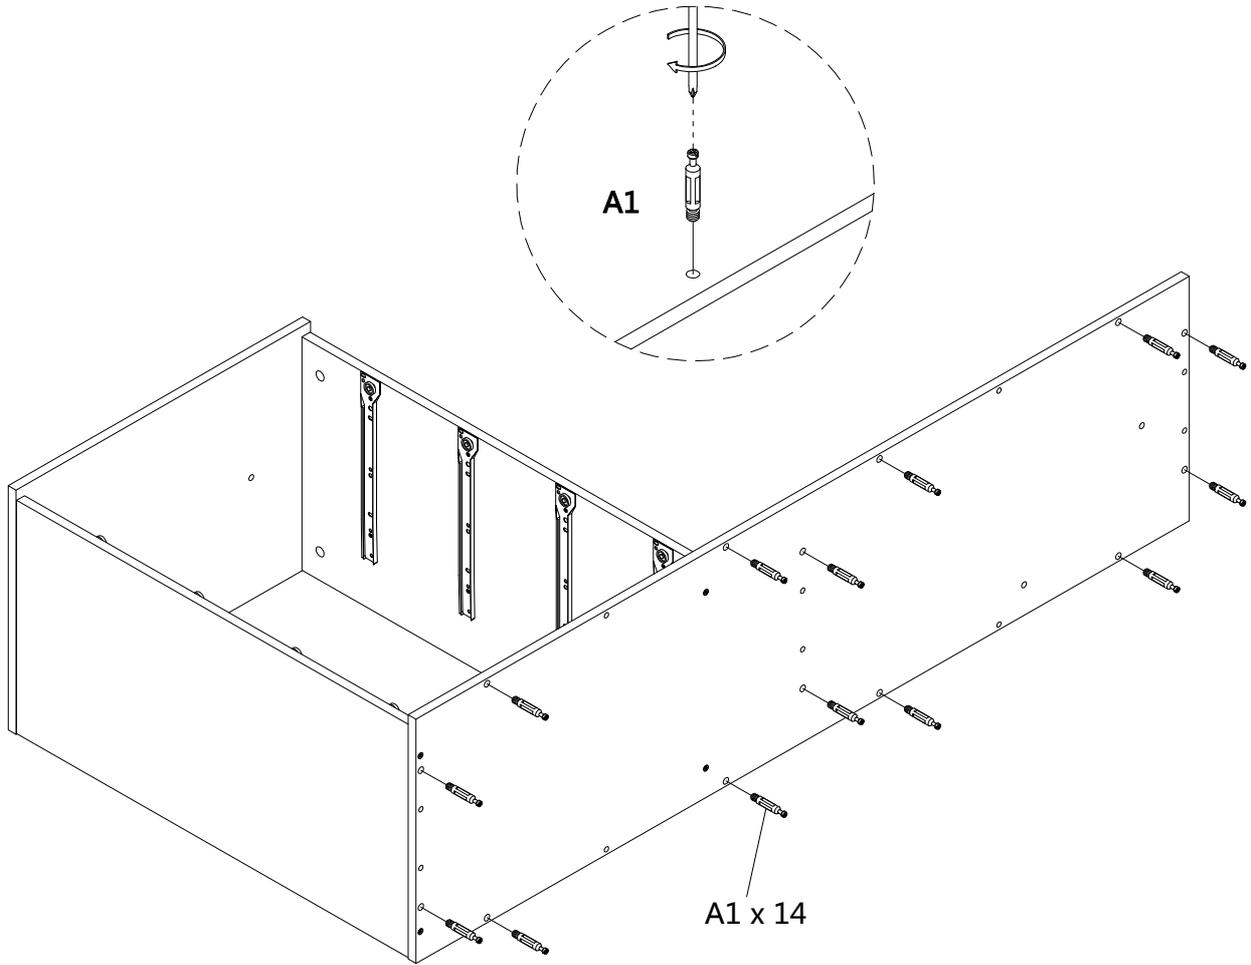





# Step 4

A1 x 6 B x 16

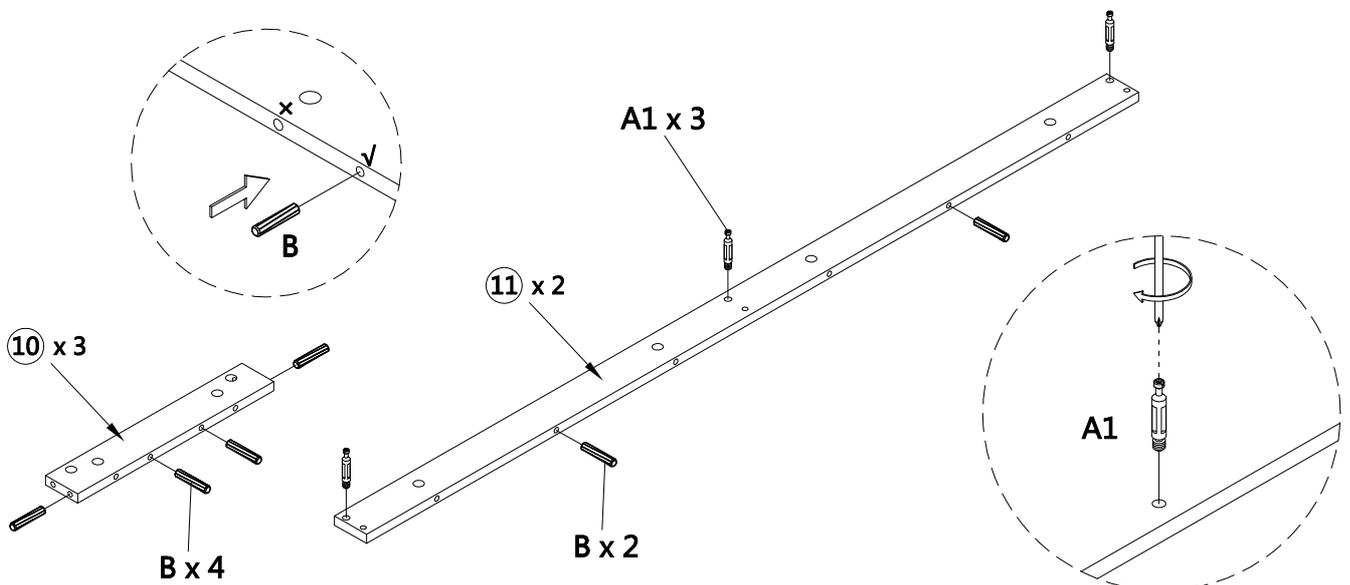



# Step 5

A2 x 6 J x 9

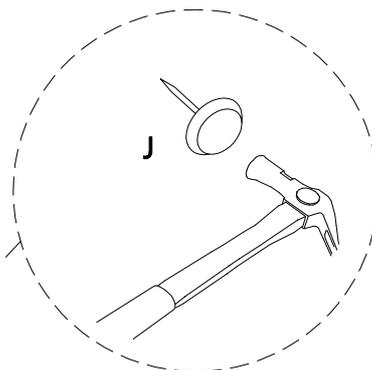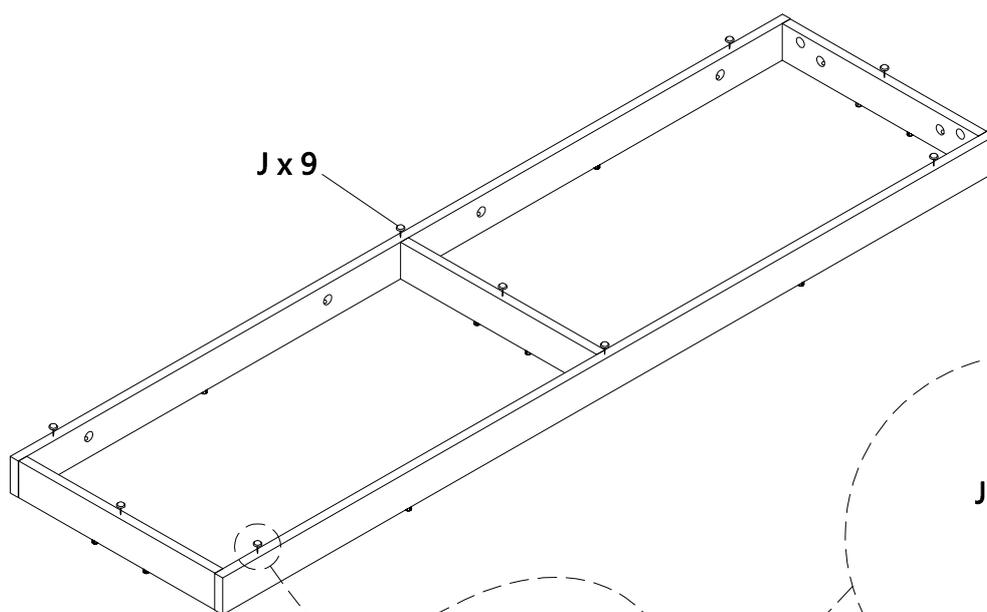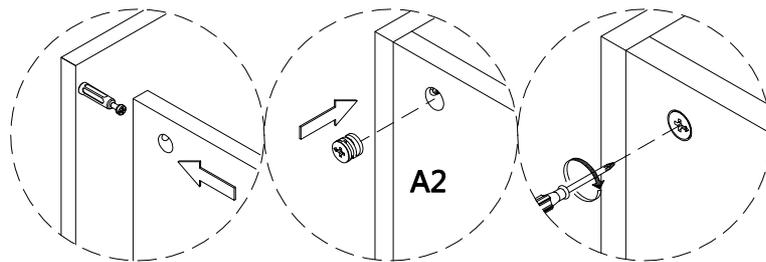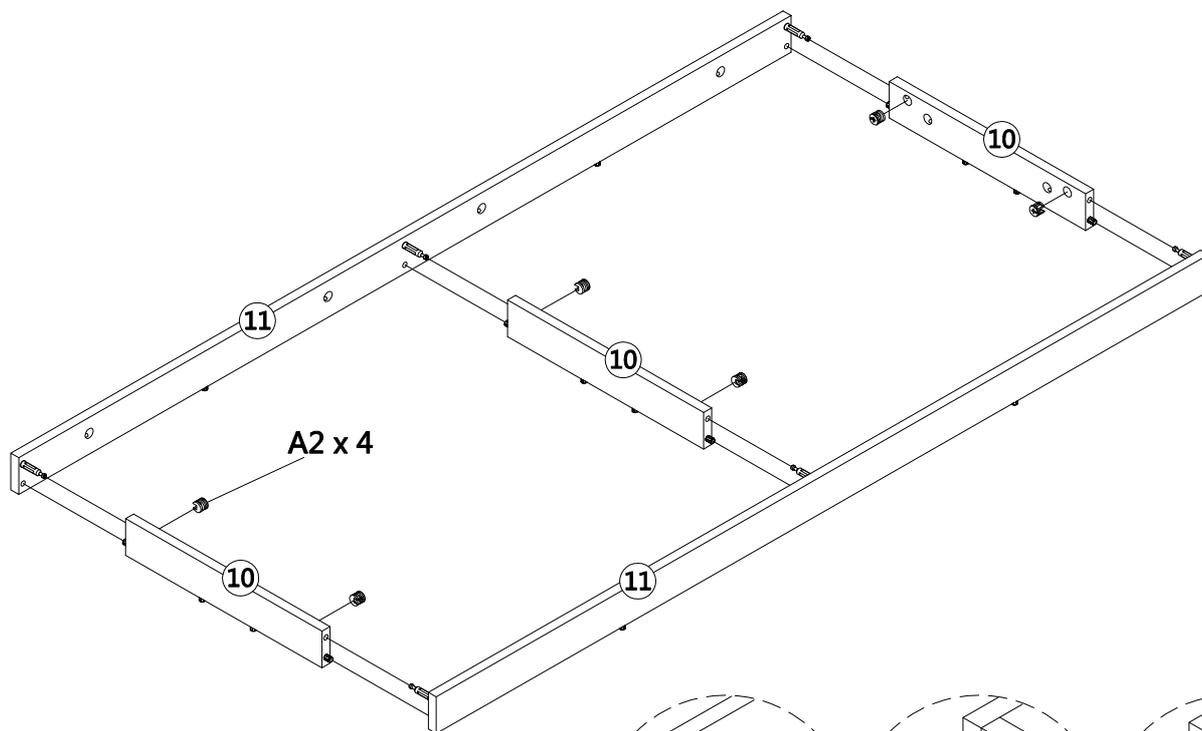


# Step 6

A2 x 14

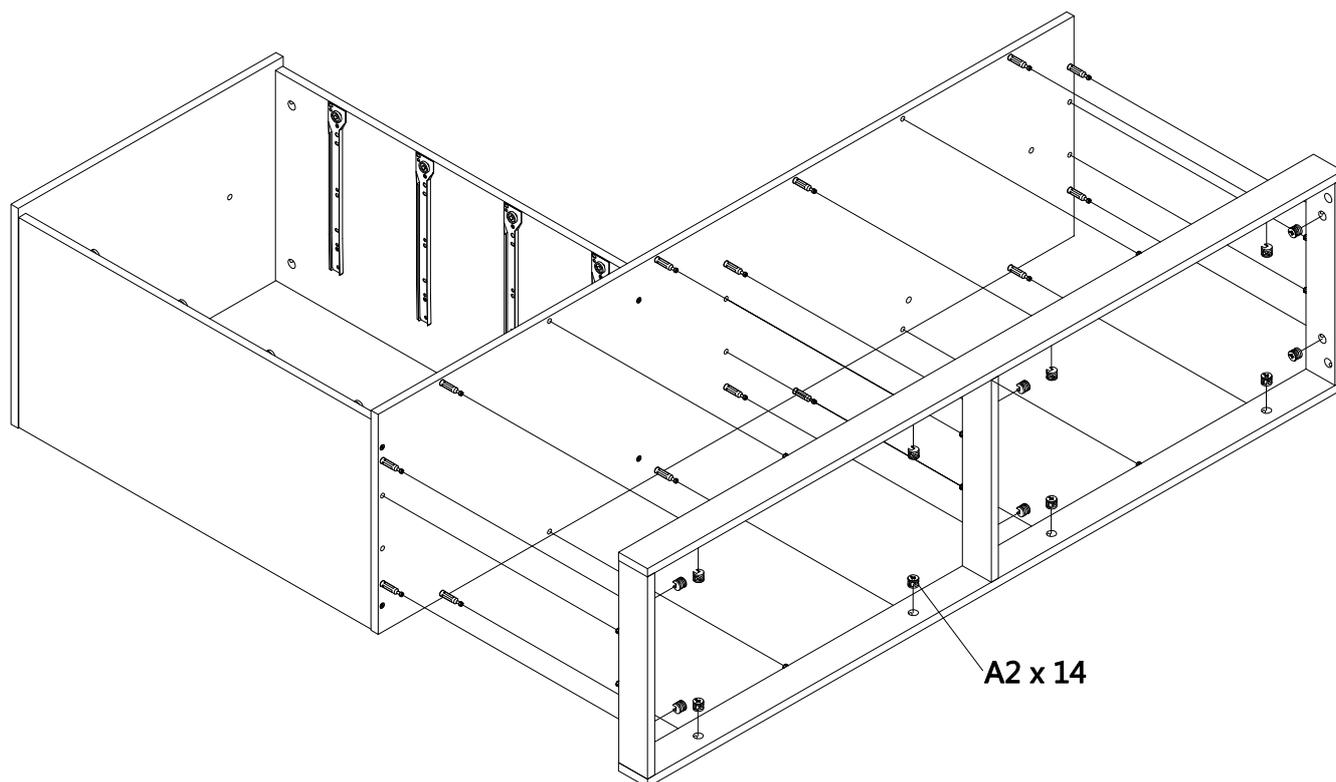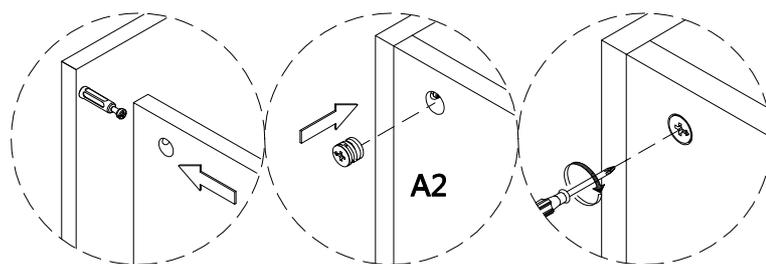



# Step 7

G x 1

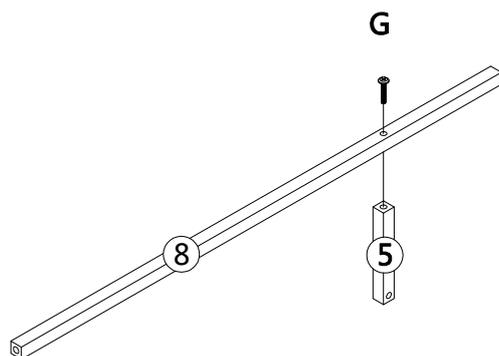





# Step 8

G x 6

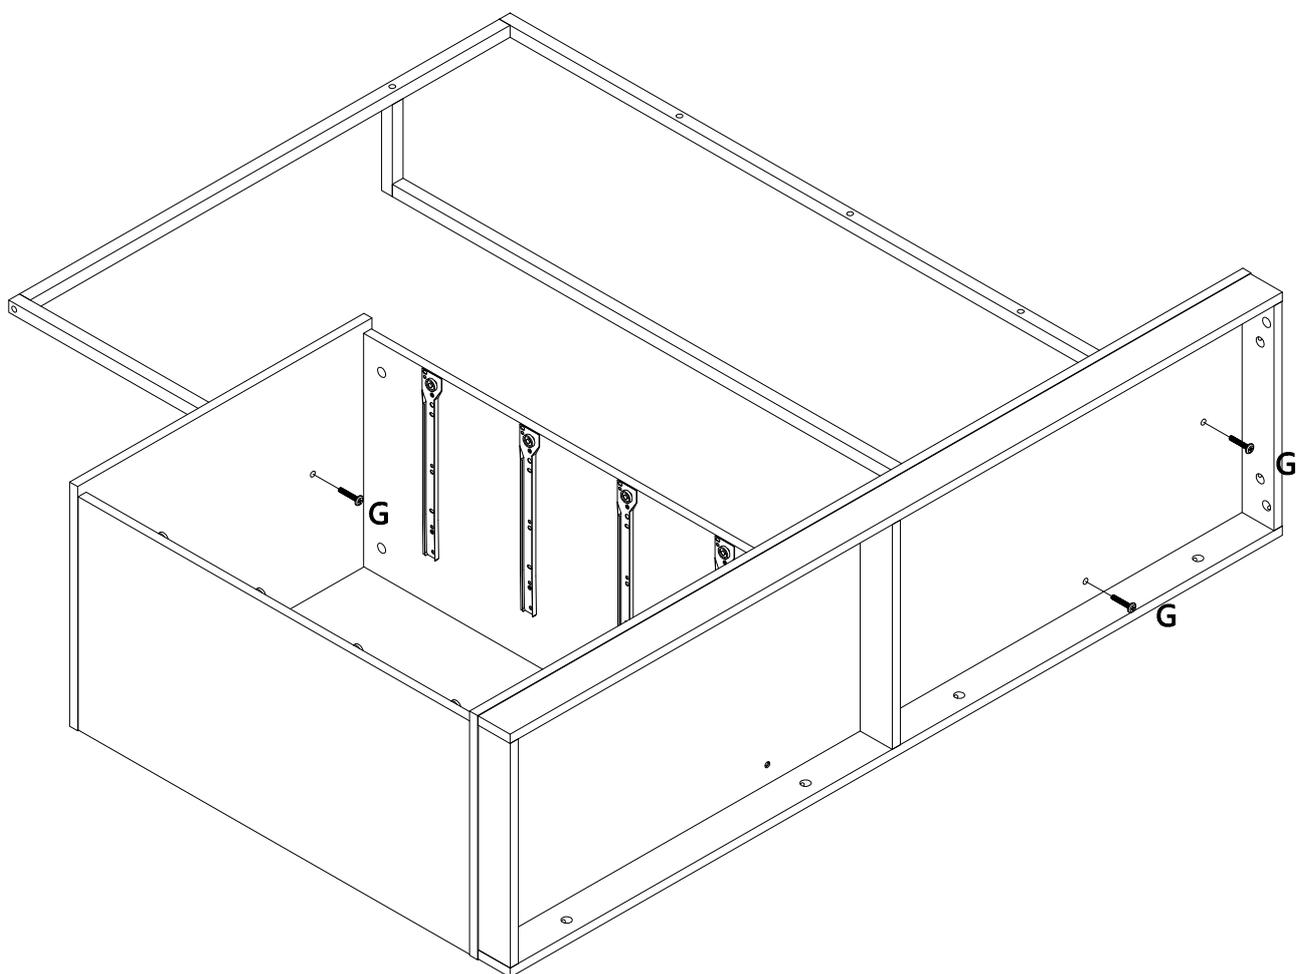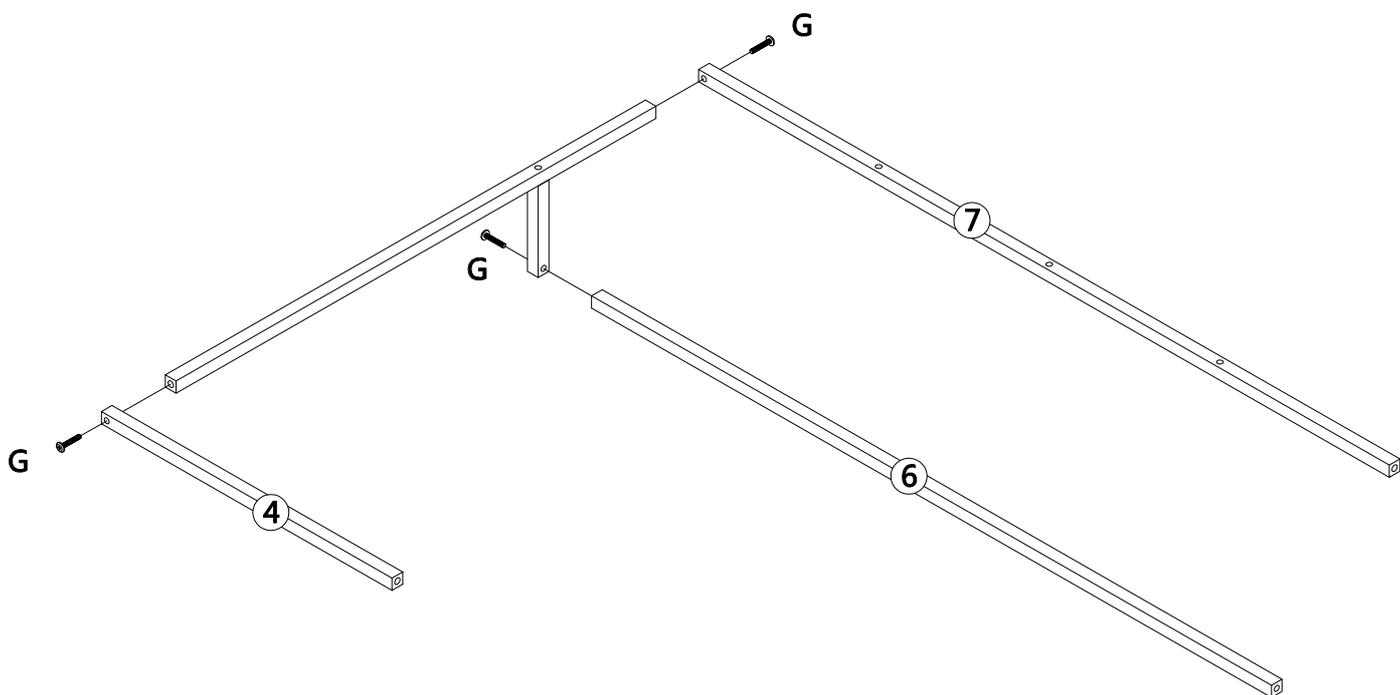

# Step 9







F x 3 K x 1 L x 22

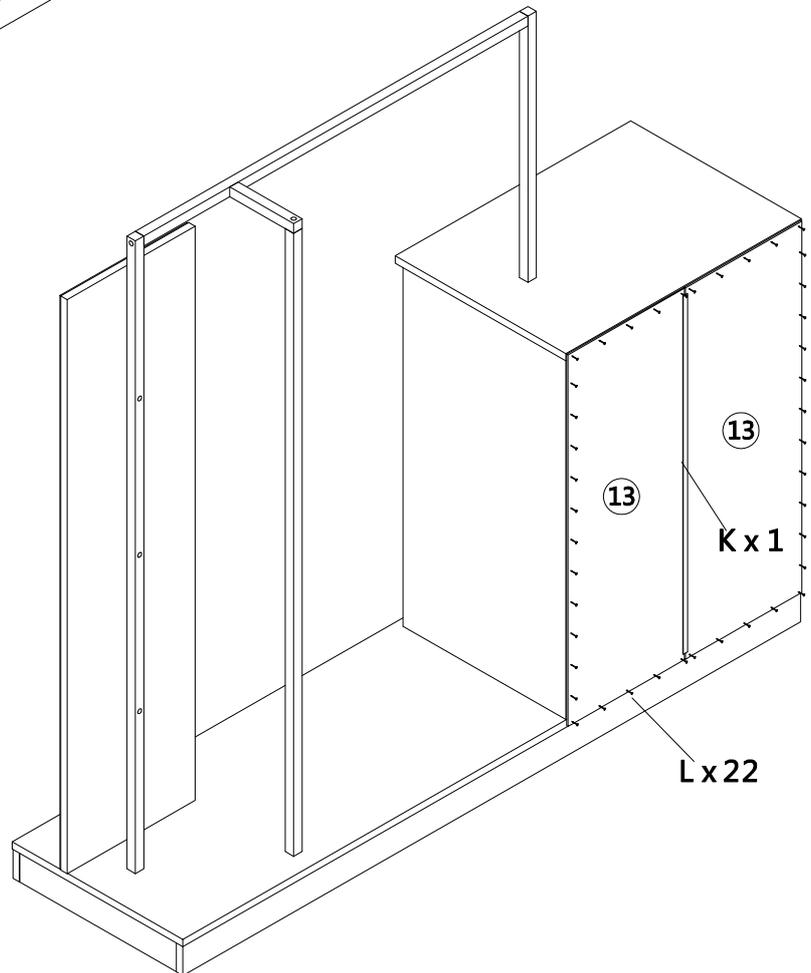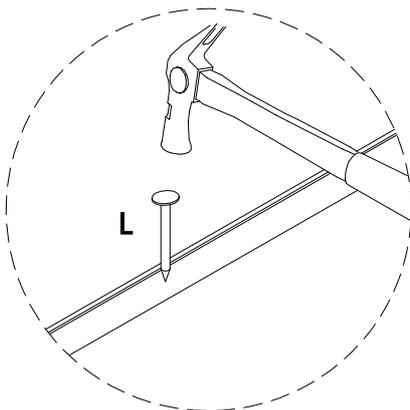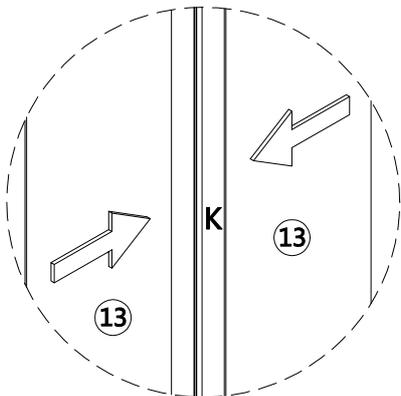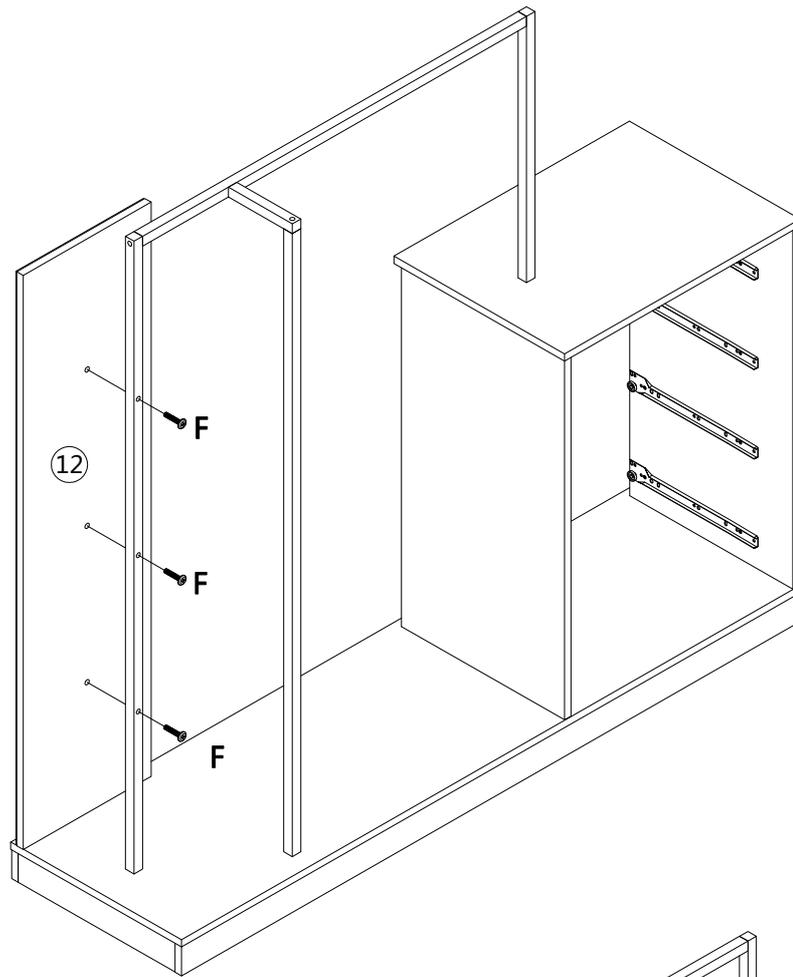

# Step 10

A x 16 C x 24 D x 16 E2 x 8 H x 4

# x 4

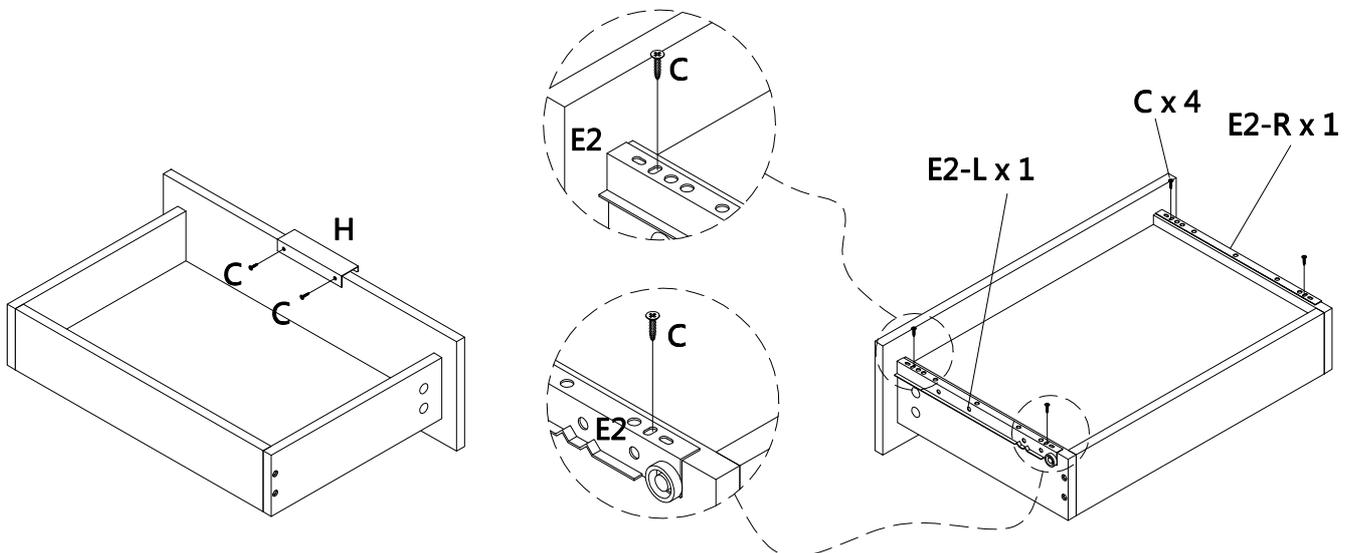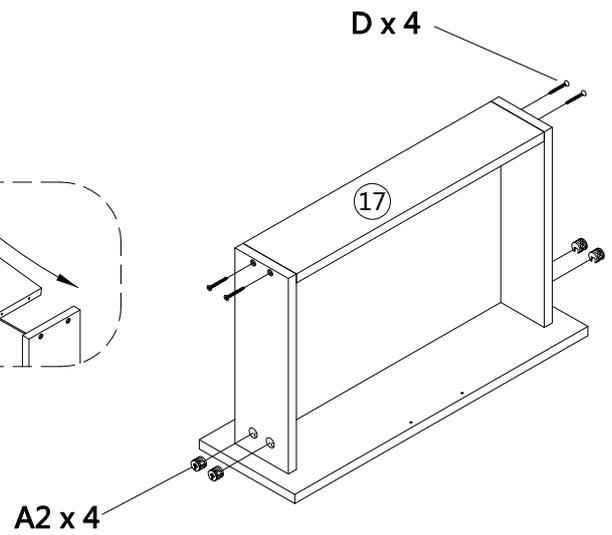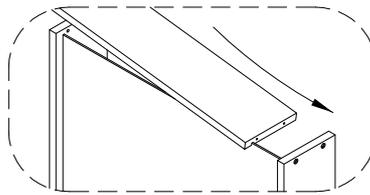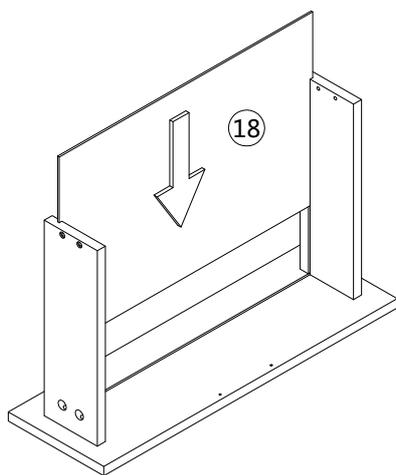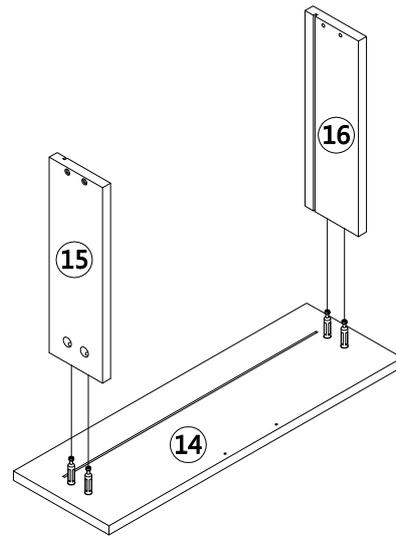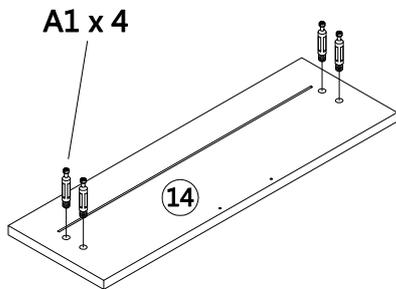

# Step 11

