MICRO INVERTER



WVC-600(Life)

USER MANUAL

Smart Inverter Expert.....

IoT Monitoring Platform


Smart mobile "core" life

- CO-2 induced environmental analysis
- Daily and total energy generation in kWh
- Actual DC input voltage, current and power
- Actual AC output voltage, current and power
- Inverter temperature
- Historical (daily, weekly, monthly) power curve
- Power losses due to weather induced effects
- Optional limitation of power output
- Online switch for the inverter start stop





Google Play

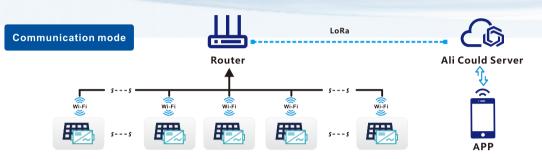

- CO-2 induced environmental analysis
- Daily and total energy generation in kWh
- A Actual DC input voltage, current and power
- Actual AC output voltage, current and power
- Inverter temperature
- Optional limitation of power output
- () Online switch for the inverter start stop
- | Historical (daily, weekly, monthly) power curve

Micro inverter Use Manual(Life)

Micro inverter Use Manual(Life)

model	WVC-600		
Recommend use panels	2*375Watt		
Output voltage mode	120/230V		
PV Open circuit voltage	30-54VOC		
Operating voltage range	22-60V		
Starting voltage range	22-60V		
short-circuit current	2*15A		
Maximum working current	2*12A		
Output parameters	@120V	@230V	
Output peak power	600Watt	600Watt	
Rated output power	580Watt	580Watt	
Output current	5A	2.6A	
AC voltage range	80-160VAC	180-280VAC	
AC frequency range	48-51Hz/58-61Hz	48-51Hz/58-61Hz	
Power factor	>95%	>95%	
Number of branch connections.	6PCS (Single)	12PCS (Single)	
Output efficiency	@120V	@230V	
Static MPPT efficiency	99.5%	99.5%	
Max output efficiency	95%	95%	
Loss of power at night	<0.5W	<0.5W	
Total current harmonics	<5%	<5%	
Appearance and technical features			

Appearance and technical features -40°C to +65°C Temperature range 283mm×200mm×41.6mm Size (L×W×H) Net amount 1.56kg Waterproof grade Ip65 NEMA3R Self-cooling Heat dissipation mode Communication mode Wi-Fi Power transmission mode Reverse transmission, Load priority monitoring system Electromagnetic Detection EN61000-6-1:2007 EN6100-6-3:2007+A1:2011+AC:2012 EN50549-1、EN 50549-2、NBR 16149:2013、UL1741 Power Grid standard Power grid detection IEC/EN 62109-1、 IEC/EN 62109-2、 IEC 62116、 IEEE 1547 CE, Patented technology Certificate


Packing weight

racking weight			
Specifications	Each (Packing)	Box (5PCS)	
weight	2.8 K G	14 K G	
Size	342×240×115mm	440×380×260mm	


Detailed



System diagram

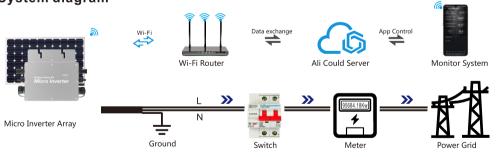

Description of the connector and cable core of the micro inverter

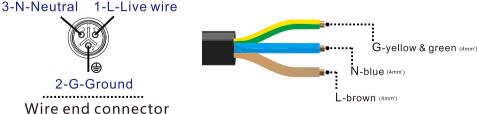

Note: You can purchase a professionally customized AC bus with a T-type connector. Use this AC bus as the AC bus for each branch. Connect it hand in hand to form a modular micro-inverter branch wiring system.

LED indicator function of micro inverter

- 1. Red light keeps on -----The equipment enters the preparatory working state;
- 2. Red light flashes ------ The device enters the delayed start-up state; 3. Blue light flashes quickly ------MPPT maximum power point search status;
- Blue light flashes quickly ------MPPT maximum power point search status
 Blue light keeps on-----MPPT maximum power point locked state;

5. Blue light turns to red light for a long time----a) Island protection; b)Frequency protection; c)Fault; d) Software shutdown; e) AC voltage over-voltage protection; f)DC voltage over-voltage protection;

Normal working indicator flashing process

Connect the micro-inverter correctly to the AC and DC terminals and then power on:

The red light keeps on for 3 seconds → the red light flashes for 30 seconds → the blue light flashes quickly (MPPT maximum power point search) → the blue light keeps on, (MPPT lock).



DOWNLOADCloud Intelligence APP

Please use the QR code to scan and install the "Cloud Intelligence" client application, System version: Android 5.0, IOS 9 and above









Note

Please strictly observe the following installation conditions

- a) Connect the communication antenna on the inverter;
- b) Put the inverter in a place with good Wifi signal;
- c) The connected Wi-Fi network needs to be in 2.4G mode;
- d) Please reset the inverter for the first use;




Long press the reset button, when the LED indicator lights up again and turns into a "blue light"Release the reset button after the status is displayed for a long time, and the inverter will automatically complete the reset.

1 Add Device

Open the intelligent monitoring software "Cloud Intelligence" APP to log inAccount, click the "+" icon in the upper right corner to start addingEquipment program;*If there is a device under the current account, click on the devicelcon to enter the details page)



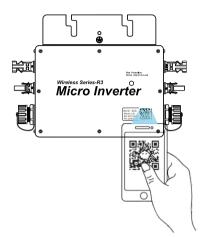


2 Entry equipment

When the smart APP changes to the QR code scanning state, scan the QR code label on the inverter body. At this time, the APP will automatically collect the inverter code and automatically jump to the Wi-Fi connection page, enter Click Next after the current Wi-Fi password;

3 Disribution network

Connect the inverter to the power supply as required, and quickly press the "Reset" button. At this time, the "LED" indicator will change to flashing blue and red alternately. At this time, the inverter enters the standby state of the distribution network;

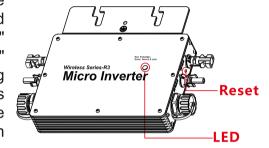


Micro inverter Use Manual(Life)

Micro inverter Use Manual(Life)

4 Initialization

When the inverter is in standby mode, return to the mobile phone APP to initialize the device operation page, check the "I have completed the above operations" below and click the "Start Connection" button. At this time, the page will jump to the signal search page. The LED indicator on the converter changes from red and blue alternately flashing state to "blue" long-bright display state when the network distribution is completed. The page will automatically jump to the system completion confirmation page, please click "Finish".

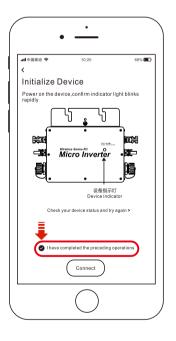

wvc-Modem-Collector (Wvc-Modem-Collector () PV Voltage 36.5V 345.4 W () PV Current 9.31A Py Power () Output Voltage 231.6V () Output Current 2.36A 251.7 W () Output Current 2.36A 251.7 W () Output Current 2.36A 251.7 W () Temperature

5 Inverter Control

Click the "Settings" button in the upper right corner of the system details page. In the settings page, you can adjust the inverter's output power, timing, remote start and stop, etc. according to actual needs.

Remarks


1. When multiple inverters need to be added, theIn the English state, "," comma separated and ended. Such as: 60001234, 6000E312,

2. Each Modem can monitor 60 inverters at the same time; 3. A total of 2 lists, each list can be filled with 30 inverter codes;

HELP

Features

Smart APP can realize real-time data transmission with the cooperation of Alibaba Cloud IoTThrough graphs and graphic displays in time, users can understand the operation of the power station. The user can monitor the operation and adjust the output power function of the system.

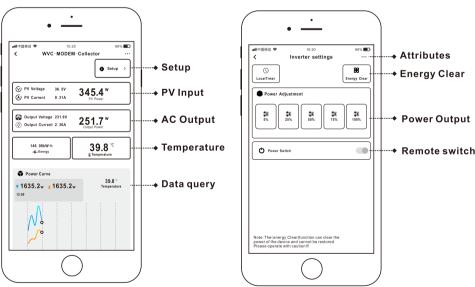



INTELLIGENT lot MONITORING MODEM
Number of data collectors per Modem
Built-in WiFi IoT data terminal
Can be used on any smart device (Android/iOS)

- CO-2 induced environmental analysis
- Daily and total energy generation in kWh
- Actual DC input voltage, current and power
- Actual AC output voltage, current and power
- Inverter temperature
- Historical (daily, weekly, monthly) power curve
- Power losses due to weather induced effects
- Optional limitation of power output
- Online switch for the inverter start stop