



Assembly Instructions

Parts and Tools list


| NO. | Name | Qty | NO. | Name | Qty |
|-----|-----------------|------|-----|----------------|-----|
| 1 | Lifting System | 1set | 11 | M6*12 Screw | 8 |
| 2 | Foot Pad | 4 | 12 | Rubber Cushion | 6 |
| 3 | Foot Margin | 2 | 13 | ST3.5*19 Screw | 2 |
| 4 | M8*16 Screw | 8 | 14 | ST4.8*19 Screw | 8 |
| 5 | Bracket | 2 | | | |
| 6 | M6*14 Screw | 8 | | | |
| 7 | M6*10 Screw | 8 | | | |
| 8 | Support Beam | 1 | | | |
| 9 | 4mm Hex Spanner | 1 | | | |
| 10 | 5mm Hex Spanner | 1 | | | |

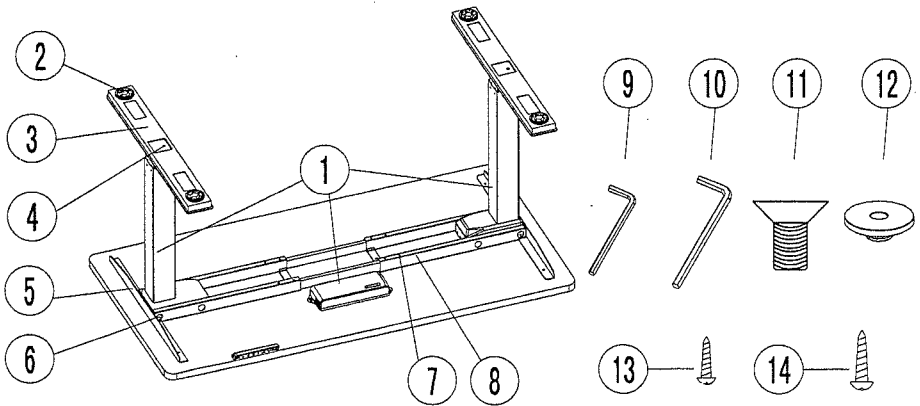


1 Loosen the 4 screws of beam using 4MM hex spanner, adjust the beam to proper position to fit the desktop

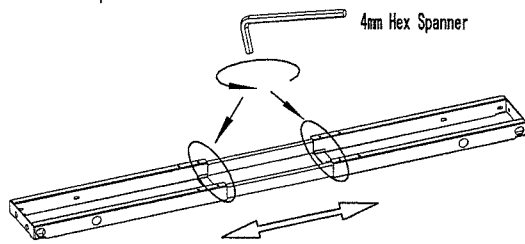


2 Attach legs to the beam using 8 of M6*14 screws and 4 of M6*12 screws

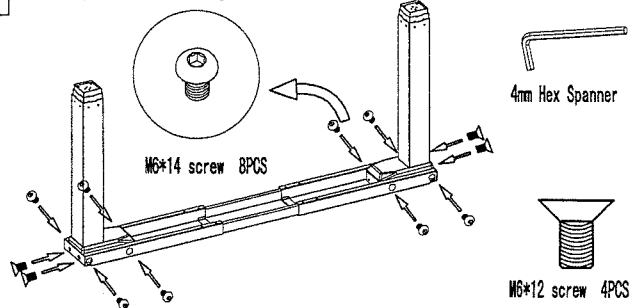


3 Attach feet to the legs using 8 of M8*16 screws, attach the 4 of levelling foot pads to the feet by hand

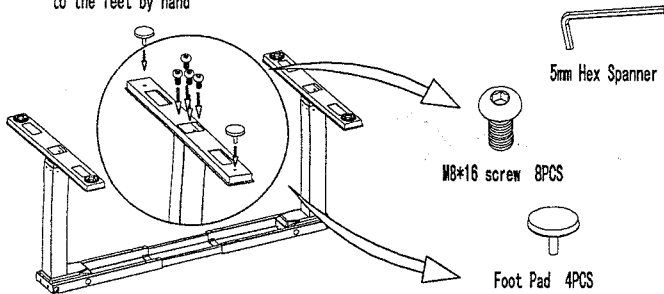


4 Overturn frame and attach brackets to beam using 4 of M6*12 screws, and then fit the rubber cushions to the brackets and beams

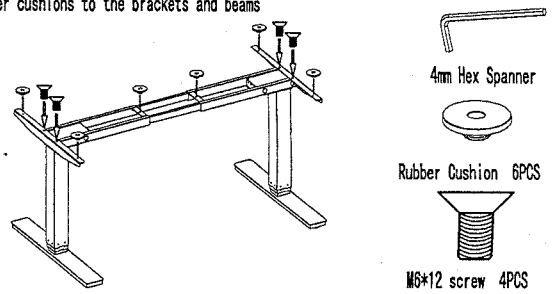



5 Adjust the width of desk frame to fit the desktop by sliding the beam, we recommend leaving at least 5-8CM of the desktop width (on each end) protruding beyond the frame width and centering the side brackets fore and aft

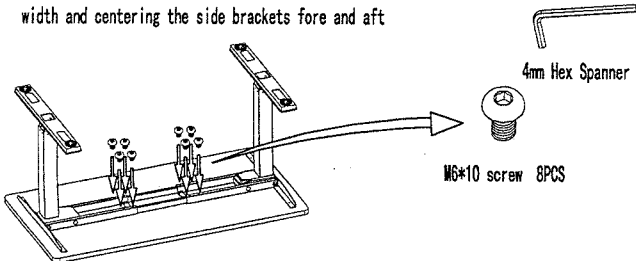

6 Attach the control box to the underside of the desktop using 8 of ST4.8 self-tapping screws, attach handset to the underside of desktop using 2 of ST3.5 self-tapping screw

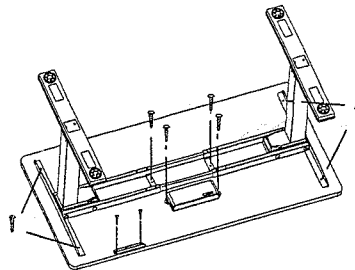


7 Connect the control box to the handset and to the motor

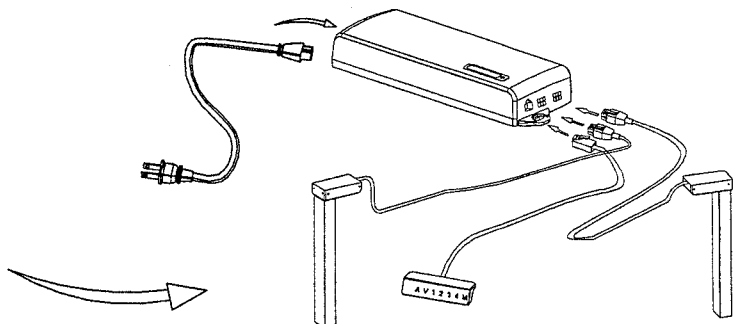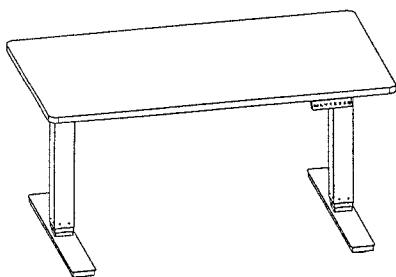


Operation Guide

AKT01

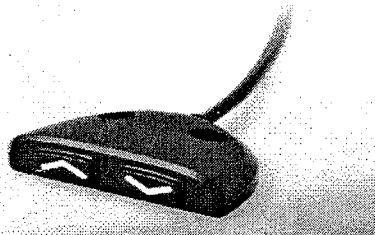

AKT-02

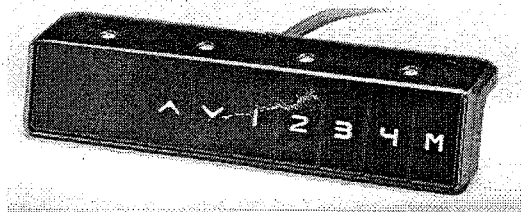

1. Normal Operation

Drive the desk to the desired height when pressing and holding "↑" or "↓" button.

2. Setting the memory function (only for AKT-02)

When the desk rises to the height which you want to memorize, please press and hold the "M" button till the display flashes and then press "1" button. Position 1 is now memorized. Repeat the above procedure for positions 2, 3 & 4. These four number buttons can memorize four different heights repeatedly. And those data won't be lost in case power is off.

3. System Initialization

If the system doesn't work normally when we use it, we need reset the system, to make the system be initialized.

Resetting procedure is as follows, press and hold on both "↑" and "↓" button together until the lifting column be lowest and you will hear a beep, and the display shows the number for lowest height, then whole step finishes.

Notice

- 1: This product must meet the actual technical parameters in use.
- 2: The system should be away from water and corrosion resistant gas.
- 3: Please contact us or our distributors if there is anything wrong with the product.

As above shown, add new switch function base on the premise that original keys function unchangeable , procedure as follows:

1. Press the "1" "2" "M" buttons together for about 5 seconds, display "C-E" (flashing)---then continue to procedure 2, 3 .
2. Press button "1" within 5 seconds, display "C" , then switch to metric system CM---go into the general operation
3. Press button "2" within 5 seconds, display "E" then switch to British system Inch---- go into the general operation
4. If above procedures no further operate over 5 seconds , then will recover to the previous setting.